



MICRO DVR

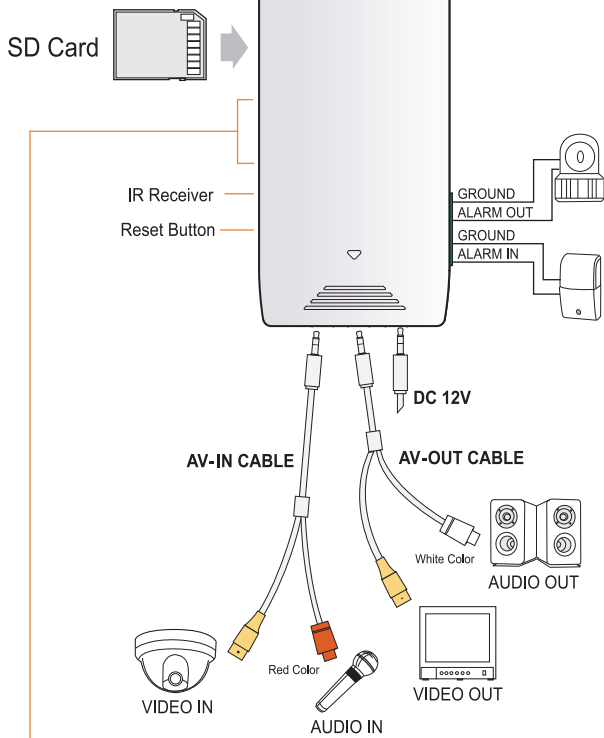


LED

- REC LED** : Green LED blinks while recording
- STATUS LED** : Yellow LED blinks when an error occurs or while recording is proceeding.
- POWER LED** : Red LED lights when power is on.

Remote Control

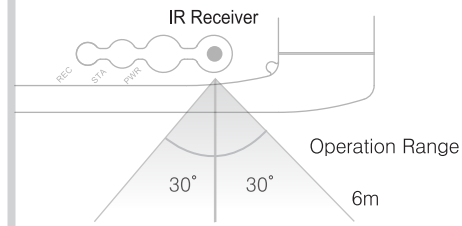

Front view

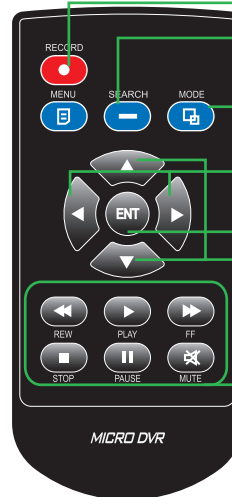

- RECORD**: To start and stop recording.
- SEARCH**: Enter Search menu. On search menu, move to upper search menu.
- MODE**: Switch between playback mode and live view mode.
- LEFT/RIGHT**: REW: Fast Rewind (X2-X4-X8-X16)
FF: Fast Forward (X2-X4-X8-X16)
- ENT**: On playback mode, playback at X1. On OSD menu, enter values
- UP/DOWN**: On OSD menu, chooses menu fields and change values. On search mode, play the previous or next recorded file.
- PLAY CONTROL**: REW / PLAY / FF / STOP / PAUSE / MUTE

Rear view




* Button Cells Battery : CR2025 / 3V



Cautions


- * When using the remote control, point it at IR receiver on MICRO DVR or MICRO DVR-T
- * IR receiver operation range should be within 60° for horizontal angle and the distance of Max. 6m.
- * When the remote control does not work, replace its battery.

MICRO DVR-T

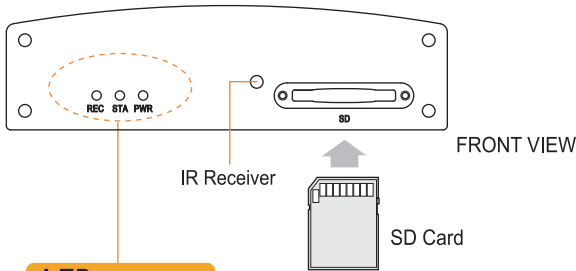

LED

- REC LED** : Green LED blinks while recording
- STATUS LED** : Yellow LED blinks when an error occurs or while recording is proceeding.
- POWER LED** : Red LED lights when power is on.

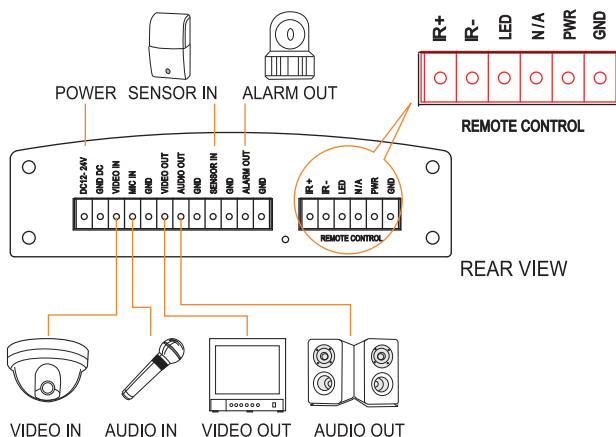

Installation

1. Insert SD card.
2. Connect camera (VIDEO IN) and monitor (VIDEO OUT).
3. Connect microphone (AUDIO IN) and Speaker (AUDIO OUT).
4. Connect power cable (DC 12V) and supply power.

Remarks

- * Audio is mute on live mode, but it is activated on playback mode.
- * In case of displaying no image on the monitor, disconnect power cable and reconnect it.
- * Before inserting SD Card, it should be formatted in 'FAT32' on PC.
- * Sandisk Card has been tested with MICRO DVR or MICRO DVR-T
The compatibility with other brands is not guaranteed
-up to SD/ SDHC SandDisk 4GB/ 8GB/ 16GB/ 32GB

Menu Mode

Press 'MENU' button of the remote control in order to access OSD menu





 Enter password. Default password is '0000'.

Press 'ENT' button 4 times in a consecutive way to enter the password.

MODEL	MICRO-D
VERSION	1.x
PASSWORD	* * * *

PASSWORD Change

OSD MENU > SUB MENU > PASSWORD ENABLE

	SYSTEM SETUP
	VIDEO SETUP
	EVENT SETUP
	SUB MENU
DEFAULT OPTION :	






 
PASSWORD ENABLE	: Yes
CURRENT PASSWORD	: * * * *
NEW PASSWORD	:
CONFIRM PASSWORD	:

* Refer to the manual for more details.

QUICK GUIDE

Language Setup

OSD MENU > SYSTEM SETUP > LANGUAGE SETUP

	SYSTEM SETUP
	VIDEO SETUP
	EVENT SETUP
	SUB MENU
DEFAULT OPTION :	



LANGUAGE SETUP	: English
VIDEO OUTPUT	: NTSC
BRIGHTNESS	: Normal

Select Language : English, French, Dutch, German,
Spanish, Japanese, Chinese

* Refer to the manual for more details.

Recording

Make sure SD card is properly inserted into the slot.

Press 'REC' button on the board or on the remote control in order to record.

* Refer to the manual for more details.

Playback

Play recorded files using the remote control

* Refer to the next page on how to use the remote control.

* Refer to the manual for more details.

Attention

* Do not take out the SD card or turn off MICRO DVR or MICRO DVR-T while it is in record mode. It may damage SD card.

* When in record mode, turn off SD power by first pressing recording button for 3 seconds and then take the SD card out.