


Miscellaneous

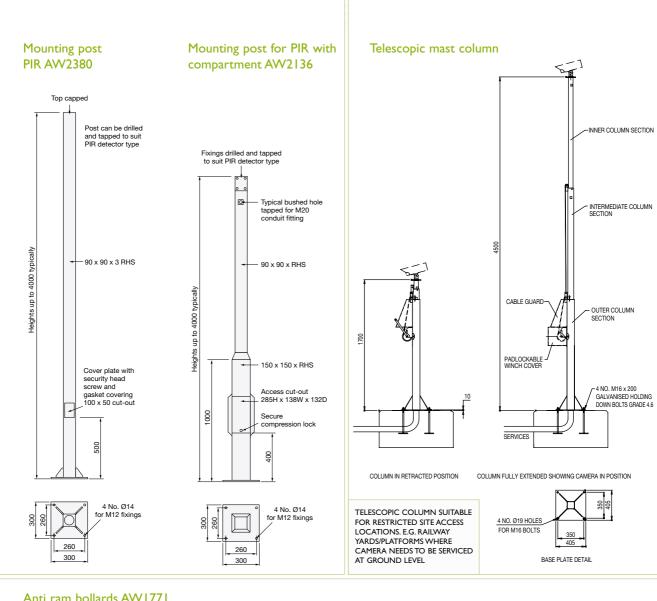

Anti ram bollards AW 1771

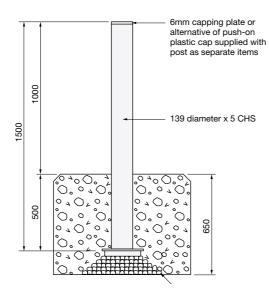

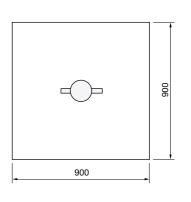

Set bollard into foundation. Fill bard with concrete - capping plate has rags on underside to push into the concrete filled bollard holding plate in position once concrete has set.