



Table of Contents

Working with Nx Witness	1
Opening and Closing Nx Witness Client	1
Connecting to Nx Witness via Web-Client	3
Connecting to Enterprise Controller and Working Offline	4
Launching Nx Witness in Compatibility Mode	7
Introducing User Roles	8
Nx Witness User Interface Overview	9
Main Menu	10
Showing and Hiding Side Panels	11
Tabs and Layouts	11
Context Menu	12
Items on Layouts and Scene	13
Working with Resource Tree and Renaming Resources	16
Search	18
Playback Panel	19
Full Screen and Window Mode	20
Getting Context Help	20
Customizing Look and Feel of Nx Witness	21
Run Nx Witness when computer boots up	22
Nx Witness Quick Start	22
Obtaining and Activating Nx Witness Licenses	23
System-Wide Configurations	26
Obtaining and Configuring Server's Additional Settings (Admin Only)	27
Configuring Server Storages (Admin Only)	28
Deleting Server (Admin Only)	29
Monitoring Servers (Admin Only)	30
Using Server's Web Interface	32
Configuring Multi-Server Environment (Admin Only)	33
Understanding Multi-Server Architecture and Basics	33
Joining and Splitting Servers	34
Join Server from Different System to Current-One	34
Split Server to Different System.....	34
Merge all Servers to Another System.....	35
Configuring Failover	36
Configuring Routing within Multi-Server Environment	37
Configuring Time Synchronization within Multi-Server Environment	37
Cameras and Encoders Management	38
Viewing Full Camera List	39
Adding Cameras and Encoders	41
Discovering Cameras Automatically	41
Disabling Automatic Discovery (Admin Only).....	42
Adding Cameras and Encoders Manually (Admin Only).....	43
Adding RTSP or HTTP Streams as Cameras (Admin Only).....	46
Setting Up Cameras	47

Setting up Analog Cameras.....	48
Renaming Cameras (Admin Only).....	49
Obtaining Camera's IP, MAC, Firmware and Model.....	50
Configuring Audio on Camera.....	51
Configuring Camera's Authentication.....	52
Forcing Aspect Ratio for Cameras.....	53
Setting up Camera Orientation.....	54
Setting Up Fish-Eye Cameras.....	55
Setting up PTZ on PTZ and Fish-Eye Cameras.....	58
Saving and Restoring PTZ Positions.....	60
Setting Up PTZ Tours.....	63
Home Positions and Tours for PTZ and Fish-Eye Cameras.....	66
Setting up Recording Schedule.....	67
Dual Stream Recording Specifics (RADASS).....	68
Modifying Recording Schedule.....	68
Copying Recording Schedule between Cameras.....	72
Configuring Maximum and Minimum Recording Time for Camera.....	73
Setting up Motion Mask and Motion Sensitivity.....	74
Configuring Proprietary Camera Parameters.....	77
Resetting Camera.....	78
Adjusting Secondary Stream Quality.....	79
Disabling Recording of Primary/Secondary Stream.....	80
Setting Up Camera Transport Protocol.....	80
Preventing Nx Witness from Changing Camera Streaming Settings (Admin Only).....	81
Setting Same Parameters for Multiple Cameras	82
Swapping Cameras between Servers (Admin Only)	84
Deleting Cameras (Admin Only)	85
Configuring Events and Actions (Admin Only)	86
Tracked Events	89
Setting up Schedule for Tracking Events.....	90
Motion on Camera.....	91
Camera Disconnection/Malfunction.....	93
Storage Failure.....	96
Network Issue.....	97
Camera IP Conflict.....	97
Input Signal on Camera.....	98
Server Failure.....	99
Servers Conflict.....	100
EC Connection Lost.....	100
Licenses are not Configured.....	100
License Issue.....	101
E-mail is not Set for Users.....	102
E-Mail Server is not Configured.....	102
Error while Sending E-Mail.....	102
Storages are not Configured.....	103
Server Started.....	103
Actions that Nx Witness Can Do	104
Notifications.....	105
Visual Event Indication.....	109
Mail Notifications.....	110
Configuring Mail Server for E-Mail Notifications.....	112
Start Recording on Camera.....	114

Start Panic Recording.....	116
Trigger Camera Output.....	117
Play Sound.....	119
Repeat Sound.....	121
Say Text.....	123
Write to Log.....	123
Default Rules	124
Viewing Events Log	125
User Management	128
Creating New User (Admin Only)	128
Changing User Settings	129
Deleting User (Admin Only)	129
Layout Management	130
Creating New Layout	131
Setting up Layouts	133
Adding Items to Layouts.....	134
Removing Item(s) from Layouts.....	136
Using Backgrounds (Maps or Plans) on Layout (E-Mapping).....	137
Adjusting Layout's Appearance.....	140
Selecting Items.....	141
Zooming while Working with Layouts.....	142
Moving and Swapping Items within Scene.....	142
Resizing Items within Scene.....	144
Using Fit In View.....	145
Changing Distance between Items.....	146
Changing Cell Aspect Ratio.....	146
Zoom Windows.....	147
Locking Layouts.....	148
Working with Several Nx Witness Windows.....	149
Saving Layouts.....	150
Assigning Layouts to Users (Admin Only)	151
Deleting Layouts (Admin Only)	151
Opening and Closing Saved Layouts	152
Backing up and Restoring Nx Witness Database	153
Video Wall Management (Windows Only)	154
Video Wall Architecture	155
Configuring Video Walls	156
Creating new Video Wall.....	156
Configuring Layout of Video Wall Displays.....	157
Switching to and Exiting from Video Wall Mode.....	163
Configuring Video Wall on Several Computers.....	163
Deleting Video Wall and its Elements.....	164
Controlling Video Wall	165
Controlling Video Wall Displays.....	165
Pushing Operator's Screen on Video Wall.....	166
Playback in Nx Witness	167
Watching Cameras in Nx Witness	167
CPU and Bandwidth Saving during Playback (RADASS).....	168
Navigating through Archive and Live.....	170
Pan-Temporal Time Line.....	172
Navigating through Several Cameras Synchronously.....	174
Searching through Archive.....	175

Using Calendar.....	175
Performing Smart Motion Search.....	177
Using Thumbnails for Better Navigation.....	179
Preview Search.....	180
Playing Back Local Files in Nx Witness	182
Local files structure in Resource Tree.....	182
Configuring Media Folders.....	183
Opening Local Files Outside of Media Folders.....	185
Navigating Through Local Files.....	185
Forensic Analysis	185
Expanding Items to Fullscreen.....	186
Zoom	186
Rotate	187
De-warping Fish-Eye Cameras.....	188
De-warping Screenshots Taken from Fish-Eye Cameras.....	191
Image Enhancement.....	194
Exporting	196
Single Camera Export.....	197
Exporting Recorded Region from Single Camera.....	197
Viewing Videos Exported from Single Camera.....	199
Multi-Video Export.....	200
Exporting Layout in Multi-Video Format.....	200
Viewing Multi-Videos.....	203
Changing Multi-Videos after Export.....	204
Checking the Validity of Exported Videos.....	205
Taking Screenshots.....	207
Adjusting Volume	208
Tours	208
Screen Recording (Windows Only)	209
Setting up Screen Recording	209
Performing Screen Recording	210
Upgrading Nx Witness	212
Troubleshooting and Contacting Support	213
Diagnosing Offline Cameras	214
Double Buffering	214
Restoring Broken Archive	215
Providing Remote Access	216
Recording Issue	216
Collecting Logs	217
Collecting Additional Information	218
Glossary	219

Working with Nx Witness

Opening and Closing Nx Witness Client

A few different ways are available to launch the application:

Windows

- From desktop: Nx Witness shortcut icon.
- From Start Menu: **Start** → **Programs** → **Network Optix** → **Nx Witness**.
- Directly from the installed folder:
 - For **x86** default is `C:\Program Files (x86)\Network Optix\Nx Witness\Client\1.5\2.3\Nx Witness Launcher.exe`
 - For **x64** default is `C:\Program Files\Network Optix\Nx Witness\Client\Nx Witness Launcher.exe`

Linux

- Using Nx Witness shortcut icon.
- Directly from the installed folder: `/opt/networkoptix/hdwitness/Client/2.3/Nx Witness`

MAC

- Using Nx Witness shortcut icon located in **Applications**.
- Directly from the installed folder: `/Applications/Nx Witness/Contents/MacOS/Nx Witness`

To close Nx Witness Client:

- Click on the "X" button located in the top right corner
- Go to *Main Menu* → *Exit* (or press **ALT+F4**).

It is possible to set up Nx Witness **Client** to launch at start (Windows/Linux only). To proceed:

1. Open [Main Menu](#) and go to *Local Settings*.
2. Select *Run Application when PC boots up* (see *Misc* section).
3. Click *OK* when done or *Cancel* to discard changes.

! IMPORTANT. In order to display video and graphics properly, it is important to have most current video drivers installed. If video drivers are not installed, the warning will be displayed.

Finally, Nx Witness Client can detect PC configuration automatically. If CPU and/or graphic adapter are insufficient to render all graphics, the configuration mode will be activated.

This mode restricts the following functionality:



- Only one video can be viewed in the same time
- No notifications in Client (see [Notifications](#))
- All animations are turned off.

Connecting to Nx Witness via Web-Client



Web Client has been removed in the current version. However the new management interface has been introduced. See "[Using Server's Web Interface](#)" for details.

Connecting to Enterprise Controller and Working Offline


In order to gain access to **Cameras**, User must be connected to **Server**.

The connection to **Server** can be established by pressing the *Connect* button ( or ) or via [Main Menu](#) → *Connect to (Another) Server*.

The current connection status is indicated by the color of the **Connect** button:


-  – connected
-  – disconnected


The connection dialog is displayed as follows:

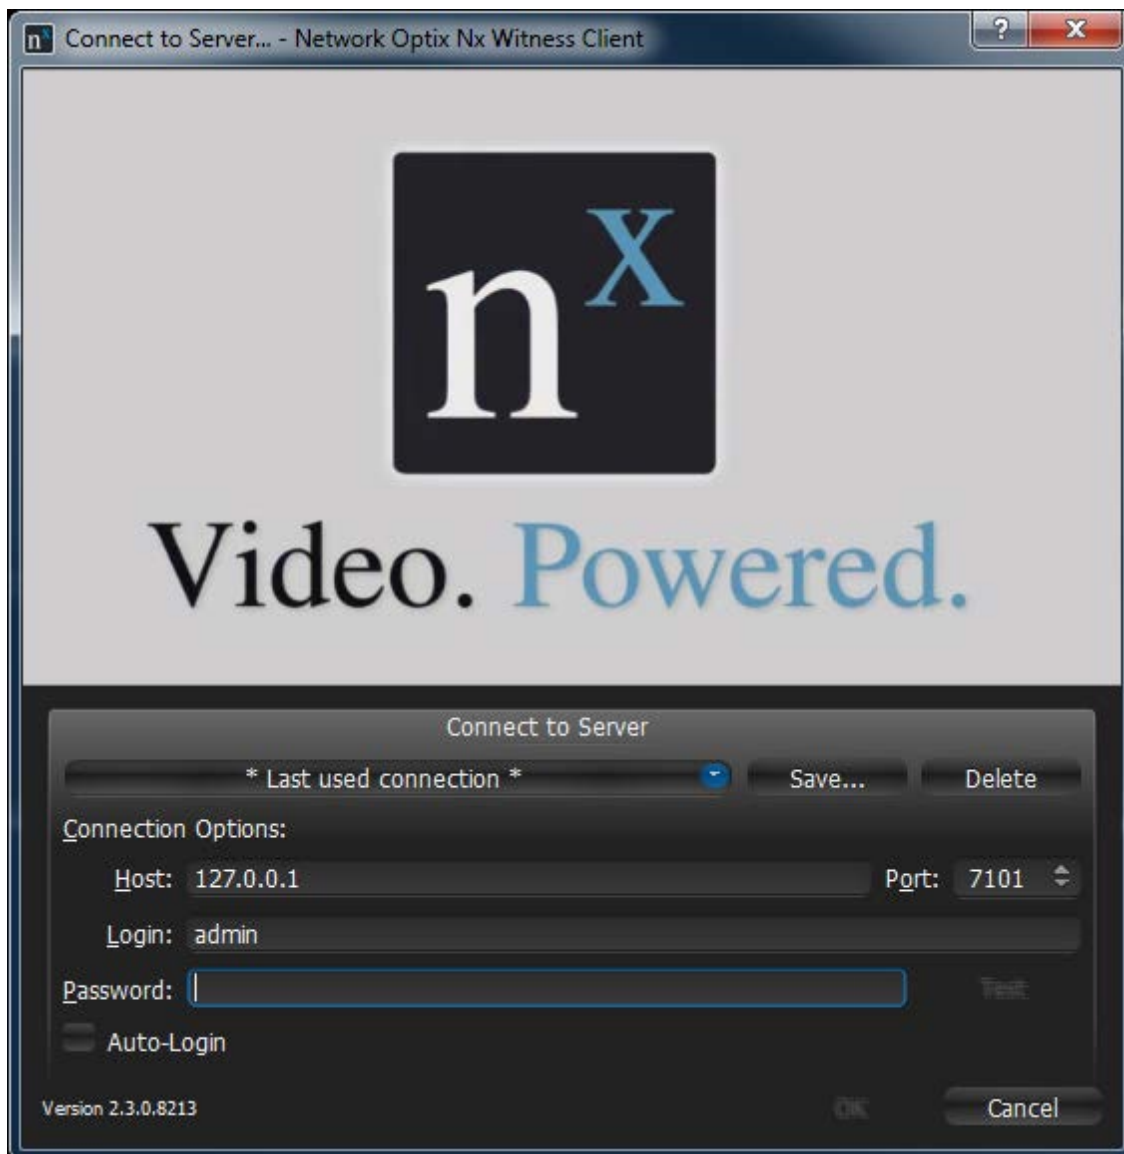

Nx Witness provides a powerful mechanism that can auto-discover **Servers** in **local network**. The easiest way to is to use one of the auto-discovered **Servers**.

To use predefined connections, click on the drop-down list. By default , **Last Used Connection** is recommended:

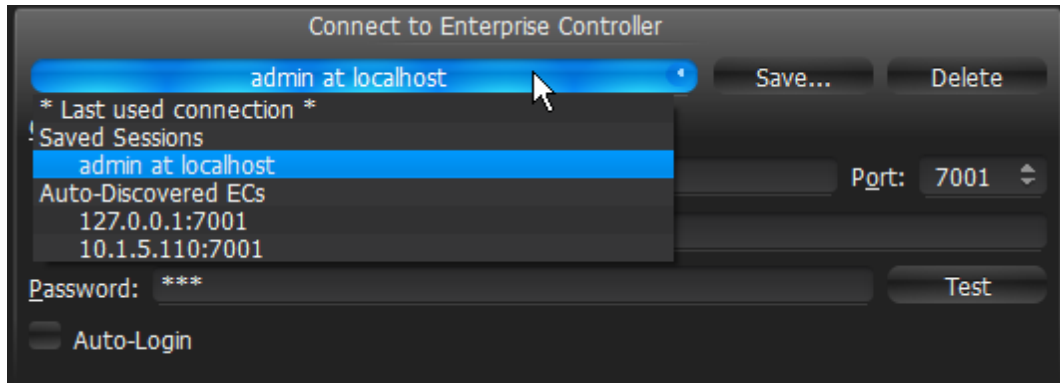

 **Note:** the computer **Server** is installed on may have several network interfaces. In this case, any available one is displayed on the Auto-Discovered Servers list.

Note that **Servers** with different versions are discovered automatically as well. However, they will be displayed in red. It is possible to connect to them in a compatibility mode (see "[Launching Nx Witness in Compatibility Mode](#)").

System name is displayed in parenthesis after the Server's IP address. In case of multi-server environment several servers with the same System Name can be discovered. In this case it is possible to connect **to any Server**. See "[Understanding Multi-Server Architecture and Basics](#)" for details.

Connection details can also be entered manually. The following values are required:

- *Host* – IP Address or name of the computer Server is installed on (`localhost` or `127.0.0.1` for All-in-One installation).
- *Port* – IP Port for access to Server (7001 by default).
- *Login* and *Password* to connect to Server. If connecting for the first time, "admin" should be used as a login name. Use the same password that was set up during the initial installation.

To check connectivity to Server, press *Test*. If ok, access is granted. The following may cause connection errors:

- Server is not available:
 - specified IP Address is incorrect or inaccessible
 - specified port is incorrect
 - Server is stopped
- login and/or password are incorrect
- Server and Client are incompatible with each other (different versions). In this case the compatibility mode will be suggested (see "[Launching Nx Witness in Compatibility Mode](#)").
- Server and Client are incompatible with each other (different customizations).

To save login details, select the *Auto-Login* option on the bottom. When Client is launched again, it will connect to the Server automatically through the pre-established login and password combination.

To save and restore connection details:

- If current connection details are used, press *Save* and create a connection name to store, which will appear in the drop-down list next time a user logs in.
- To delete details of a stored connection, select it from the drop-down list and press *Delete*.
- If the last connection was not properly saved, the software will use its connection data from the next launch (* *Last Used Connection* *).

 **Note:** passwords are not stored in saved connection details.

To log out, go to [Main Menu](#) and choose *Logout*.

If **Client** is not connected to **Server**, a user can only access **Local Files** (see "[Playing Back Local Files in Nx Witness](#)").

To connect to a different Server under a different user, open the login window and enter new Server coordinates or login credentials. If canceled, the current user will still be connected to Server.

Launching Nx Witness in Compatibility Mode

It is necessary sometimes to connect to Server with different versions. A good example would be when Nx Witness is installed at multiple sites (home, work, etc.) and only one installation is upgraded. In this particular case, Servers will have different versions and one Client should connect to another Server (Client at home connects to Server at work). Servers of different versions are highlighted in red in login dialog.

In this case, the following message will appear:


*You are about to connect to Server which has a different version.
Would you like to restart client in compatibility mode?*


By clicking *OK*, the application will restart in compatibility mode.

In some instances, it may be necessary to download additional files for compatibility pack. In this particular instance, the following message will be displayed:

*You are about to connect to Server which has a different version.
Client version X is required to connect to this Server
Download version 2.2?*

Once download is completed, restart is suggested.

 **Note:** Nx Witness recalls the Server it was last connected to and automatically suggests compatibility mode for the next launch.

 **IMPORTANT.** If some of the components of the Multi-Server System such as Server or Client have different versions installed, it may cause potential issues. When Client is connected to Server, all component versions are checked. The warning will appear if the component versions differ from one another.

It is recommended to have the same version installed on all system components. See [Upgrading Nx Witness](#).

Introducing User Roles

There are three types of user roles in Nx Witness:

- **Owner** (user with "admin" login). Unlimited control. This user cannot be deleted.
- **Administrator**. Full control, except:
 - Change **Super Administrator (admin)** settings
 - Delete or change own role
- **Viewers (Live Viewer, Viewer, Advanced Viewer)**. Limited control. A viewer cannot:
 - Manage users (except for changing their own password).
 - See servers and all connected cameras. Only the cameras assigned by the administrator are visible.
 - Change predefined layouts (layouts can be changed, but cannot be saved); however, it is possible to configure and save own layouts based on available resources (assigned cameras and local files).

Additional permissions can be assigned to users to be able to operate with available cameras (assigned by **Administrator**):

	PERMANENT	VIDEO WALL	CAM SETTINGS	PTZ	ARCHIVE	EXPORT	LIVE
Admin	√	√	√	√	√	√	√
Administrator		√	√	√	√	√	√
Adv. Viewer			√	√	√	√	√
Viewer					√	√	√
Live Viewer							√

- View archive, perform search and forensic analysis
- Perform export from archives
- Set up cameras
- Set up PTZ on cameras
- Create, modify and delete [Video Walls](#).

If none of these permissions are assigned, a user can only view live videos on available cameras.

! IMPORTANT. If any action or graphical element described in this document is not available to a specific user level, the following will apply (**Admin only**). If the action described in this document is unavailable to certain roles, it will be indicated in the corresponding topic.

The following represents a standard flow:

1. **Super Administrator** creates and configures all layouts for own use.
2. **Super Administrator** creates several users with a **Viewer** role.
3. **Super Administrator** creates and configures layouts for each **Viewer**.
4. **Viewer** logs into Nx Witness and is only able to work with assigned layouts and cameras.

Nx Witness User Interface Overview

Nx Witness **User Interface (UI)** includes the following main controls:

- **Scene** (main view). Displays video items from cameras or local files.
- **Tab Navigator** (top [Panel](#)). It contains [Main Menu](#), [Tabs](#) and the following buttons:
 - [Connect/Disconnect button](#). This button indicates the current connection status and allows to connect or disconnect from Server.
 - **Window Buttons** (go/exit fullscreen, minimize, close window)
 - [Screen Recording button](#). Starts/stops screen recording
- **Playback Panel** (located on the bottom [Panel](#)). Used for playing back local videos and live streams.
- **Resource Tree** (left [Panel](#)). Contains all servers, cameras, local files, users and layouts available to the current user.
- **Notifications** (right [Panel](#)). Contains notifications about system events.

Scene represents space for video [Items](#) can be placed on. Nx Witness allows viewing streams from **Cameras** as well as **Local Video Files**.

Items are placed on **Scene** and can be saved as [Layouts](#).

If several **Tabs** are opened, then each [Tab](#) contains its own [Layout](#) with **Items**.

Main Menu

Main Menu allows users to gain access to various Nx Witness features quickly and intuitively. **Main Menu** can be opened by clicking on the logo at the upper left corner and contains the following items:


- *Connect to (Another) Server* – allows connecting/disconnecting to/from Server (see "[Connecting to Server and Working Offline](#)")
- *Logout* – drop connection to a current Server and go offline
- *New:*
 - *Tab* – creates an empty tab in Tab Navigator (see "[Tabs](#)")
 - *Window* – opens a new window of Nx Witness (see "[Working with Multiple Nx Witness Windows](#)")
 - *User* – creates a new user (see "[User Management](#)")
 - *Video Wall* – create new Video Wall (see "[Video Wall Management](#)").
- *Open* – opens and plays back **Local Files** (see "[Playing Back Local Files in Nx Witness](#)"):
 - *File* – opens **Local Video File**
 - *Folder* – opens all **Local Video Files** in the selected folder and plays them back simultaneously (max **24** files for **x86** and max **64** files for **x64**).
- *Start/Stop Screen recording* (see "[Screen Recording \(Windows Only\)](#)").
- *System Administration* – opens up system-related settings (see "[System-Wide Configurations](#)").
- *Local Settings* – opens up client-related settings (see "[Customizing Look and Feel of Nx Witness](#)").
- *Merge Systems* – allows merging multi-server systems (see "[Full Screen and Window Mode](#)").
- *About* – opens information about the system (see "[Collecting Additional Information](#)").
- *Exit*.

Showing and Hiding Side Panels

Side Panels are extremely useful, though may be hidden by a user if needed. The ">" buttons show/hide **Panels** as well as *Hide Panel* [Context Menu](#) item.

If an item is expanded to fullscreen (see "[Expanding Items to Fullscreen](#)"), all **Panels** slide off the screen and disappear.

To bring **Panel** back, click on ">".

Additionally, both left and right sliding menu panels can be pinned ():

- If **Pinned**: side **Panels** are always visible. If a panel is hidden manually, it will not reappear automatically.
- If **Unpinned**: **Panel** is only visible when the cursor is on. As soon as a user clicks off the **Panel**, the panel will disappear. **Panel** can reappear if a user points or clicks on ">".


F11 hides all **Panels**. To undo, press **F11** again or use **Esc** (toggle [Fullscreen](#) will also apply if hit **Esc**).

Tabs and Layouts


Tabs are used to make layout navigation easier. Each **Tab** hosts a separate **Layout**. Tabs function very similar to any Internet browser.

The following actions can be performed with **Tabs**:

- Open a new tab:
 - **Tab Navigator's** [Context Menu](#) → *New Tab (Ctrl+T)*
 - [Main Menu](#) → *New* → *Tab*
 - "+" icon on the right of layout tabs
- Close a specific **Tab**: **Tab's** [Context Menu](#) → *Close (Ctrl+W)*
- Keep one **Tab** open – **Tab's** [Context Menu](#) → *Close All but This*
- Change the tab order – switch position by dragging and dropping a tab in the desired order.


 **IMPORTANT**: A warning message will appear every time **Tab** is modified, suggesting to the user to save changes. See "[Saving Layouts](#)".

If too many **Tab**s are opened at the same time, scrolling arrows will appear:

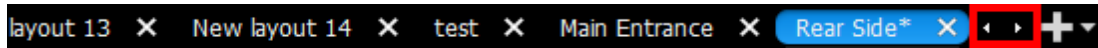

These arrows can be used to scroll **Tab**s left and right.

To navigate to a specific **Tab** or open a saved layout, use the following button located on the right (next to "+"):

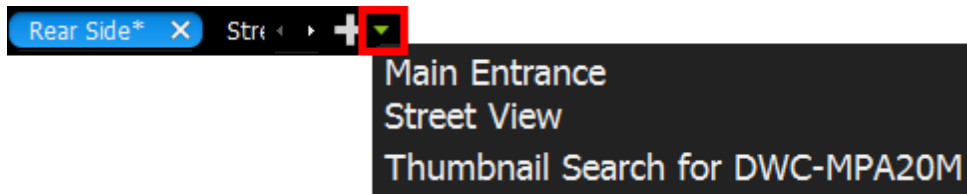

Initially, no **Layout**s are configured in the system. An empty default **Tab** is shown ("New Layout"). If **User** tries to configure **Layout** in this **Tab**, asterisk will automatically be added to the caption (indicating a **Layout** change). The **Layout** will remain **local**.

The layout information is automatically passed to **Server** once **Layout** is saved (See "[Saving Layouts](#)"). If **Layout** is saved successfully, it will be displayed in [Resource Tree](#) under the current **User**.

When closing all **Layout**s, the default blank **Tab** will still appear. If the current **Layout** is saved as "New Layout", the blank **Tab** located next to it will be renamed "New Layout 1" automatically.

Any saved **Layout**s that were previously opened, will appear automatically once **User** logs in.

See "[Layout Management](#)" and specifically "[Setting up Layout](#)" sections for more details.

Context Menu

Context Menu displays all available actions as they relate to the selected element. **Context Menu** will appear by right-clicking on the desired element (or on empty space).

Items on Layouts and Scene

Video Item represents video recorded by a camera that can be played back within Nx Witness.







Items displayed on **Scene** offer total video manipulation, a variety of features, streaming data and other related information.

Local videos are displayed as follows:



The file name is displayed in the upper left corner of **Local Video Item**.





The following buttons are displayed in the upper right corner of **Local Video Item**:

-  – [Image Enhancement](#)
-  – create Zoom Window (see [Zoom Windows](#))
-  – take screenshot from the item (see [Taking Screenshots](#))
-  – Rotation (see "[Rotate](#)")
-  – Information: displays additional information about the current stream (see below)
-  – Close (removes the item from the current layout)

Streams from cameras are displayed as follows:






The following information is displayed in the upper left corner of the camera item:


- Camera **Name**
- Current **Recording Mode** (Camera may be recording differently depending on its schedule):
 -  – **Recording Always** (green circle)
 -  – **Motion Recording** (red circle)
 -  – **Low Resolution** - always, **High Resolution** - only while in motion (red circle crossed green)
 -  – **Not Recording** (grey circle)

For more information on recording settings, see "[Setting up Recording Schedule](#)".


The following buttons are displayed in the upper right corner of **Camera** in addition to those displayed for local video:

-  – applies de-warping (is displayed if this is a fish-eye lens camera) – see "[De-warping Fish-Eye Cameras](#)"
-  – PTZ (if camera supports) – see "[Setting up PTZ on PTZ and Fish-Eye Cameras](#)"
-  – Smart Search – see "[Performing Smart Motion Search](#)".

The following information can be useful during camera setup to help adjust to the desired FPS and bitrate. It may also be useful for monitoring local files.

To view item information, click on  located in the top right corner of the item. To view information on multiple items at a time, select **Items** (see "[Selecting Items](#)"), open [Context Menu](#) and choose *Show Info* (**Alt+i**).

The following data will appear on the bottom:

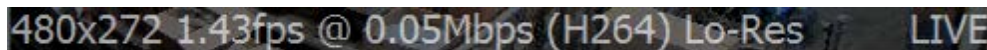

- Current **Resolution** of the stream
- Current **FPS** of the stream
- Current **Bitrate**
- Current stream **Codec** (**H264** or **MJPEG**)
- Current **Resolution** (if **Dual-Streaming** is enabled for the camera): *Hi-Res* or *Lo-Res*
- Current **Time** of video playback or *LIVE* if viewing live from a camera

Additionally, the following messages may appear for camera items:


- **NO SIGNAL** – camera is offline. It is possible to diagnose Camera in this case (see "[Diagnosing Offline Cameras](#)").
- **NO DATA** – no recording was performed. No data available.
- **Loading...** – awaiting data from Server
- **Unauthorized** – incorrect/missing login or password

Working with Resource Tree and Renaming Resources

Resource Tree is a convenient tool to display, search and manage available resources within the application. The format of **Resource Tree** depends on the current user's permission level.





Resource Tree is displayed on the left [Panel](#). It can be resized by dragging the right edge to the left or right.


Depending on a user level (see "[Introducing User Roles](#)") it may contain different elements. For **Administrators**, **Resource Tree** is displayed as follows:

-  **Servers** (admin only) – a list of servers registered in the system. Server IP addresses are also displayed (if the corresponding setting is enabled).



 **Note: Server** can have several network interfaces, so different IP addresses may be displayed.

Servers can have additional **statuses**:


-  – indicates Server the client is connected to.
-  – Server is offline for various reasons.
-  – Server is incompatible. This means the system is not fully updated and update is recommended. See "[Upgrading Nx Witness](#)".
-  – unauthorized Server. This means the password for user "admin" is not coincide with other servers so this server is not able connect to this system.

-  **Cameras**. Cameras are displayed under **Servers** (admin only) and **Layouts**. If **Camera** appears on more than one layout, the camera will be listed multiple times in **Resource Tree**.

Cameras can have additional **statuses**:

-  – Camera is offline for various reasons (see "[Diagnosing Offline Cameras](#)").
-  – unauthorized Camera (see "[Configuring Camera's Authentication](#)").



The following indicators are displayed on the left:





-  – a camera is in recording mode
- – recording is set up for the camera, but not recording at the moment.


Additionally **Cameras'** IP addresses are displayed (if the setting is enabled, see below).

If **Camera** is experiencing network issues over the past minute, "!" is displayed on the right. See "[Camera Disconnection/Malfunction](#)" for details.

When hovering over **Camera** with a mouse cursor, a thumbnail of a frame taken from the **Camera** will appear.

-  **Recorders** (admin only). Displayed under **Servers** and contain several channels (represented as **Cameras**).
-  Video Walls (admin only). See "[Video Wall Management](#)" for details.

-  **Users** (**Administrator** can view several users in **Resource Tree**).
-  **Layouts**. Contains resources (cameras and local files). Owned by users and displayed under each user. Locked layouts are displayed like this:  (see "[Locking Layouts](#)").
-  **Local Files ()**. Contains the following:
 - **Local Video files**
 - **Exported Video Files** (see "[Exporting](#)")
 - **Exported Multi-Video Files** and their contents: **Cameras**, or **Local Files** (see "[Exporting the Layout in Multi-Video Format](#)")
 - **Screen Recordings** (see "[Screen Recording](#)")
 - **Images**
 - **Screenshots** (see "[Taking a Screenshot](#)").

 **Other Systems** – Servers in local network that belong to different systems. See "[Configuring Multi-Server Environment \(Admin Only\)](#)".

[Items](#) that are currently placed on **Scene** are highlighted in bold in **Resource Tree**. A selected (focused) item has the ">" mark in both **Server** and **Layout** sections.

To enable/disable displaying IP addresses in **Resource Tree**:

1. Open [Main Menu](#) and go to *Local Settings*
2. Select/clear the flag in *Show IP in Tree* option (*Look and Feel* section).

Viewer's Resource Tree contains only **Layouts**, **Cameras** and **Local Files**.

If **Client** is not connected to **Server**, only **Local Files** are visible.

The following actions can be performed in **Resource Tree**:

- **Expanding/collapsing** a tree node (+/- on keypad)
- **Scrolling** (if the tree contains multiple elements)
- **Multi-Selection**. **Shift** to select multiple items and hold **Ctrl** to select/deselect items individually.
- **Drag and drop**. An efficient way to organize and configure resources in the tree. The following chapters will further explain the drag and drop capabilities.
- [Search](#).

Almost any resource (except **Local Files**) can be renamed by **Administrator** in **Resource Tree**. To rename a resource, simply select it and:

- **Left-Click** on it again (like Windows Explorer).
- **Right-Click** for [Context Menu](#) and choose *Rename* (or press **F2**).

Search

Nx Witness provides fast, powerful and flexible search engine that enables users to quickly locate the desired items on demand. To perform search, click on the *Search* tab in [Resource Tree](#) next to *Resources*.

! IMPORTANT: Search results will appear on Scene immediately. If the search comes back with a high number of found items, only the first 24 will be displayed for x86 architecture and 64 results - for x64 architecture. Search results are automatically added to the current scene.

Type any three consecutive characters from a resource **name**, **MAC** or **IP** into the box to activate search. Search results are displayed as follows:

To refine search, use the following tips:

- Specify the resource type: *Any Type, Video Files, Image Files or Live Cameras*.
- Use special symbols to combine several search criteria:
 - “+” – to add a new criteria to the search. Example, “out” + “100” will pull in all files containing “out” or “100” in file description.
 - “\” – to avoid files containing certain characters. Example, “out \hdtv” will pull in all files containing “out”, but no “hdtv”.

For instance, search string "00 + 254" shows the following results:

- Cameras, recorders and local files that contain "00" or "254",
- Cameras and recorders that contain "00" in their MAC Addresses,
- Cameras and recorders that contain "254" in their IP Addresses.

All results will disappear from the scene once all characters are removed from the search box.

 **Note:** It is not possible to rename resources in the Search tab.

Playback Panel

Nx Witness provides powerful and intuitive playback system. It includes seamless transition from live to archived footage, smooth archive playback, extensive search capabilities, local files playback, etc. All playback operations can be performed within the **Playback Panel**:





The following elements are displayed:

- **Playback Buttons** – used for playing back selected **Item(s)**
- **Speed Slider** – controls the playback speed of selected **Item(s)**
- **Pan-Temporal Time Line** – represents the archived data for selected **Item(s)**
- **Volume Control** – used to adjust volume for the selected **Item**
- **Additional Buttons:**
 - **LIVE** – switches selected camera(s) to a live playback mode or indicates that they are playing live. See "[Navigating through Archive and Live](#)"
 - **SYNC** – performs time synchronization of all cameras displayed on **Scene**. See "[Navigating through Several Cameras Synchronously](#)"
 - **CLND** – opens calendar to help navigate through archive (see "[Using Calendar](#)")
 - **THMB** – expands Time Line and shows small previews called **Thumbnails**. See "[Using Thumbnails for Better Navigation](#)".

Full Screen and Window Mode

Nx Witness is recommended to be operated in full screen. To toggle full screen or bring the application to a window mode:

-  and  buttons
- **Alt + Enter**
- **F11** (all side panels will be hidden).

Esc can be used to exit Fullscreen mode.

Moreover it is possible to expand a single item on fullscreen. See "[Expanding Items to Fullscreen](#)".

Getting Context Help

Nx Witness provides intuitive context help system on each interface element.

To invoke help:

1. Press  button.
2. **Left-Click** on the desired interface elements.

Context Help contains links to other topics that can be useful as well.


Customizing Look and Feel of Nx Witness

Nx Witness provides a number of ways to customize user interface. To start, open [Main Menu](#), choose *Local Settings*, then switch to *Look and Feel...*

The following settings can be changed:

- *Language* – interface localization.
- *Skin* – desired interface color scheme (*Dark* or *Light*)
- *Timeline mode* – display time when viewing recorded footage (*Server Time* or *Local Time*)
- *Show IP in tree* – display IP camera and recorder addresses in [Resource Tree](#)
- *Tour sequence cycle time* – time between cycling items in Tour Mode (see "[Tours](#)")

Also Nx Witness allows changing a variety of background settings as well:

- **Background Animation.** It is possible to set the color and intensity or completely disable it.
 **Note:** To disable animation once press CTRL + ALT + T. This may be useful on slow video adapters or in remote sessions.
- **Background Image.** Click *Browse...* to select a graphic file and set *Mode* (*Stretch*, *Fit* or *Crop*) and *Intensity* (transparency).

Click *OK* when done or *Cancel* to discard changes. If the changes require restart, the corresponding warning will be displayed.

Run Nx Witness when computer boots up

It is possible to automatically launch Nx Witness if a computer boots up. To do so open [Main Menu](#), choose *Local Settings (General tab)*, and set the "Run Application when PC Boots".

Nx Witness Quick Start

This section provides recommendations on system settings for Nx Witness to be configured properly.

If the system contains multiple **Servers**, it may be necessary to ensure they are merged in one system properly. See "[Configuring Multi-Server Environment](#)".

First, a sufficient number of **Licenses** should be obtained and activated (see "[Obtaining and Activating Nx Witness Licenses \(Admin Only\)](#)").

Then, **Storages** on each **Server** should be configured (see "[Configuring Server Storages \(Admin Only\)](#)").



All **Cameras** should be properly set up (see "[Camera Management](#)"). Same with **Recording Settings** (see "[Setting up Recording Schedule \(Admin Only\)](#)").


Once completed, it becomes possible to create multiple **Users**, configure **Layouts** for them and more.


Obtaining and Activating Nx Witness Licenses

Nx Witness's license policy is quite simple. Each **Camera** requires **License**. The application has no camera count restrictions.

The **License** allows viewing and recording of a single **Camera**. **Cameras** can be viewed live without **Licenses** allowing for an unlimited number of **Cameras** to be connected and viewed live at no charge.

 **Note:** If recording is enabled for **Camera License** is considered **used** even if recording is not performed ( icon in Tree). Recording is required to capture [Motion Detection](#) and [Input Detection](#) events on **Camera**.

For instance, the following screenshot illustrates the situation that all Cameras are offline and not recording. However recording is enabled on four Cameras (marked by ):

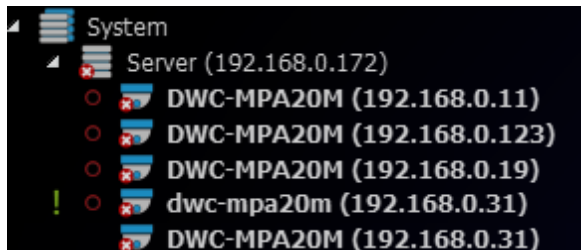



In this case 4 Licenses are being used.

See also "[Setting up Recording Schedule](#)".

Additionally there are **Video Wall Licenses**. Each one allows controlling video wall from a single computer (one session) or extend Video Wall on 2 displays. For instance 4 licenses allow user to display **Video Wall** on 8 monitors and control it from 4 clients concurrently.

Nx Witness comes with **four Trial Licenses** automatically (do not allow **Video Wall** feature). **Trial Licenses** are active 30 days only.

 **IMPORTANT:** In Multi Server System Licenses are activated on a certain **Server** (the one Client is currently connected to -  icon). If this server is offline, those licenses will be invalidated until the server is back online. If licenses are activated on different servers, they will be combined if those servers are merged into a single system.


To activate **Trial Licenses**:

1. Open [Main Menu](#) → *System Administration (CTRL+ALT+A)*.
2. Go to *Licenses* tab.
3. Click *Activate Trial License*.

If **Trial License** is about to expire, the corresponding warning will appear.

To get additional **Licenses**, contact the local Nx Witness reseller (or Network Optix customer service at support@networkoptix.com).


To activate **License Key** over the Internet:

1. Note **Server** the client is connected to (License Key will be bound to it). See the  icon in [Resource Tree](#). If it is necessary to activate **License Key** on a different **Server**, disconnect and connect to a desired one.
2. Select the *Licenses* tab in *System Administration*.
3. *Automatic activation via Internet* must be selected.
4. Enter *License Key* and click *Activate License*.

If Nx Witness is not connected to the Internet, then licenses can be activated offline.

To activate License (trial or commercial) offline:

1. Go to *Licenses* tab in *System Administration*.
2. Click *Manual Activation*.

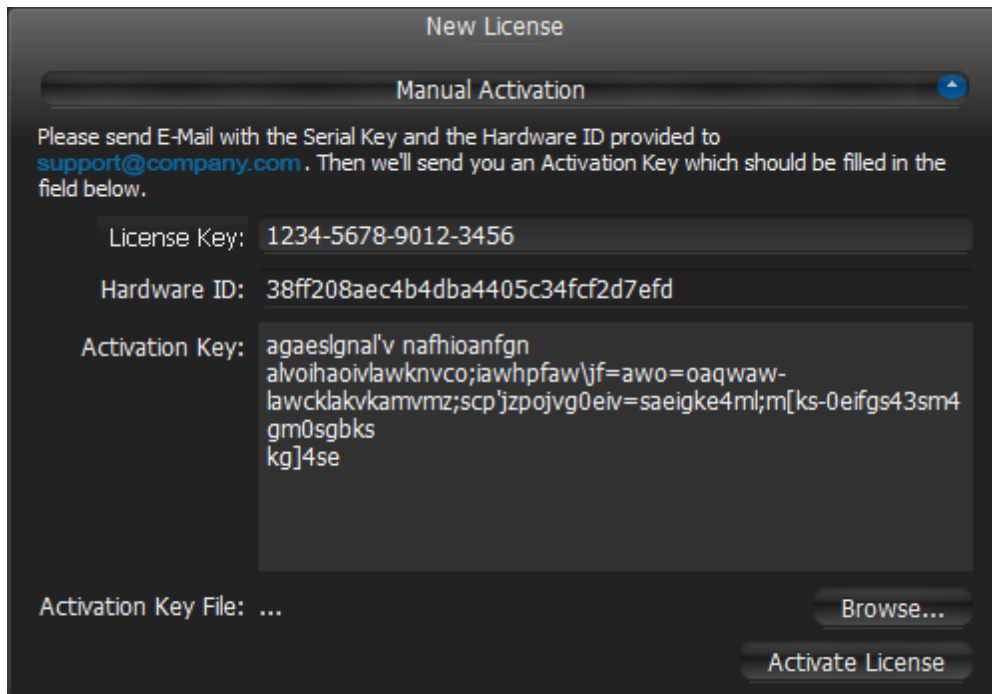

3. Copy Hardware ID and email to <http://www.networkoptix.com>
 - *License Key*: paste **License key** received from reseller.
 - *Hardware ID*: paste **Hardware ID** here.

An activation key will be provided upon request.
4. As soon as the activation key is received, proceed with one of the following:
 - Paste it into the *Activation Key* field and click *Activate License*.
 - Save it as a text file (i.e. `key.txt`), move to the target computer, browse the file and click *OK*.

It is also possible to delete an expired or invalid **License Key**. To do so:

1. Go to *Licenses* tab in *System Administration*.
2. Select the desired licenses (should be marked in red) and click *Remove* (or press **DEL**).

System-Wide Configurations

All system related settings are combined in the single dialog. That makes system administration much more simple. This dialog can be opened by clicking on [Main Menu](#) → *System Administration* (**CTRL+ALT+A**).

The dialog contains the following sections (tabs):

- *General:*
 - [Alarm/Event Rules](#) – invokes the dialog when Event/Actions can be configured
 - [Event Log](#) – opens up the list of events that occurred ([Viewing Events Log](#))
 - [Camera List](#) – opens up the list of cameras in the system
 - [Health Monitoring](#) – opens Layout and shows health information for all servers.
- *Camera Management* – ability to [Disable Automatic Discovery](#) and [Preventing Nx Witness from Changing Camera Streaming Settings](#).
- [Backing up and Restoring Nx Witness Database](#)
- *Licenses* – see "[Obtaining and Activating Nx Witness Licenses](#)"
- *E-Mail* – ability to [Configure Mail Server for E-Mail Notifications](#)
- *Updates* – see "[Upgrading Nx Witness](#)"
- [Routing Management](#)
- [Time Synchronization](#).

Obtaining and Configuring Server's Additional Settings (Admin Only)

In addition to the basic Server configuration that are setup during installation and configuration, administrator can also performs the following:

- Server Status Check (*Ping*). If Server is not responding for some reason this can help to check availability of the computer Server is hosted on
- Rename
- Failover Setup (see "[Configuring Failover](#)")
- Storages Configuration

To configure **Server** parameters open the desired **Server** in [Resource Tree](#) open [Context Menu](#) and choose *Server Settings*.

The following Server parameters can be checked and configured:

- *Name* – can be changed here or in [Resource Tree](#)
- *IP Address* – cannot be changed. Displayed in [Resource Tree](#) as well if the corresponding setting is enabled (see "[Working with Resource Tree and Renaming Resources](#)")
- *Port* – cannot be changed from the client
- *Ping* – check availability of the computer Server is hosted on
- *Failover* (see "[Configuring Failover](#)")
- *Storages* – see "[Configuring Server Storages \(Admin Only\)](#)"
- *Rebuild Archive Index* – restore recorded footage if moved. See "[Restoring Broken Archive](#)".

Configuring Server Storages (Admin Only)


Nx Witness provides an easy and flexible storage management policy. Each **Server** can use unlimited number of local and network **Storages**. If more than one **Storage** is used, **Server** will automatically balance the space consumption. The more free space the storage has, the higher the usage intensity will be.

Storage is considered to be a separate hard disk partition. If a partition has more than **100 Gb** of free space, Nx Witness uses it automatically.

Additionally it is possible to add network storages.

To configure **Server Storages**:

1. Open the [Server Settings](#).
2. Go to *Storages*:

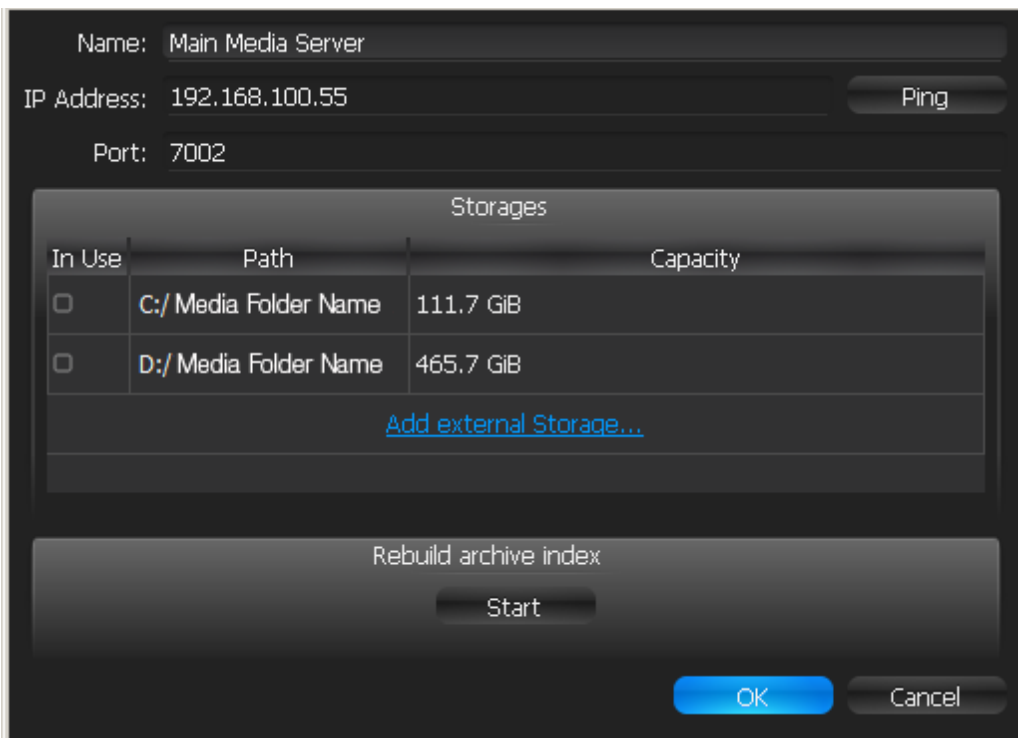

As displayed above, the computer has 2 partitions and only disk D is used for storage because disk C has less than 100 Gb of free space.

3. To select Storage to be used check *In Use* flag

4. To add **NAS/External Storage** (Windows only), click *Add* and enter the storage Samba path (*URL*), *Login* and *Password*.

! **IMPORTANT.** On Linux the most convenient way is to mount it as local disk (via **Samba/cifs**).

5. Click *OK*. At this point, all **Storages** will be checked for validity and ability to write to. If the drive has insufficient space, a warning will appear.


The **Storage** structure on the partition is as follows: `<drive>/Nx Witness Media/$Resolution/$MAC/$YYYY/$MM/$DD/$HH:`

- **\$Resolution:**
 - **hi_quality** – full resolution streams
 - **lo_quality** – low resolution streams
- **\$MAC** – MAC address of the recorded device
- **\$YYYY** – Recorded Year
- **\$MM** – Recorded Month
- **\$DD** – Day
- **\$HH** – Hour

! **IMPORTANT.** 5 GB of free space is always preserved on **Storage**.

Deleting Server (Admin Only)

In some instances, it may be necessary to delete **Server** from the system.

 **Note:** **Server** can only be deleted when **offline**.

To delete **Server**, locate it in [Resource Tree](#), **Right-Click** for [Context Menu](#) and select *Delete*.

! **IMPORTANT.** All cameras that are hosted on this specific server will be deleted as well. Recorded data will be kept in server's storages.


Server will automatically discover all **Cameras** and start operating once it is back online. The deleted camera's archive will remain available. It will be required to perform all storage settings and configure all discovered **Cameras** again.

Monitoring Servers (Admin Only)

Nx Witness enables users to perform monitoring the health of **Server s** in the real-time mode. To proceed, perform one of the following:


- Drag **Server** from [Resource Tree](#) to **Scene**
- Open Server 's [Context Menu](#) and choose *Monitor (Monitor in a New Tab or Window)*.

The information is displayed as follows:

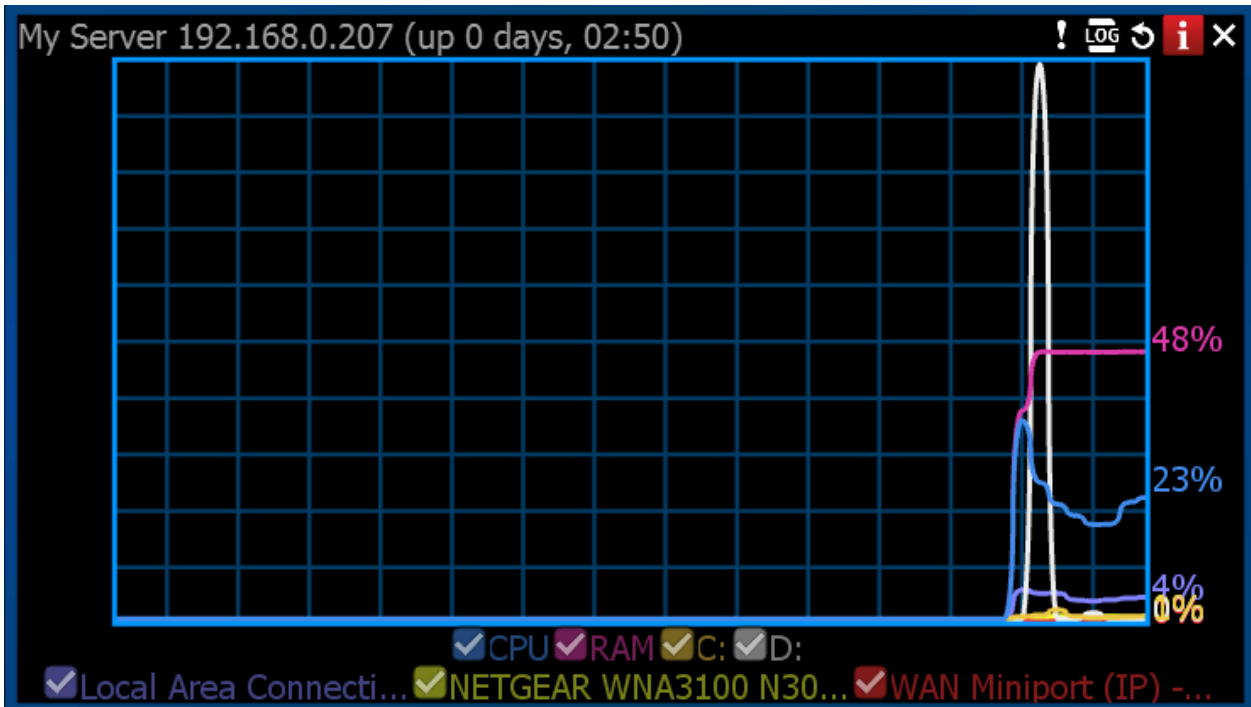

- Uptime (the time since the server is started)
- CPU Load
- Memory Usage (*RAM*)
- Hard disk partitions usage (*C:* and *D:* in this case)
- Network Interfaces Usage

To enable/disable graphs check/uncheck them. If hover with a mouse cursor on a check, the corresponding graph will be clearly visible, the rest-ones will be faded:

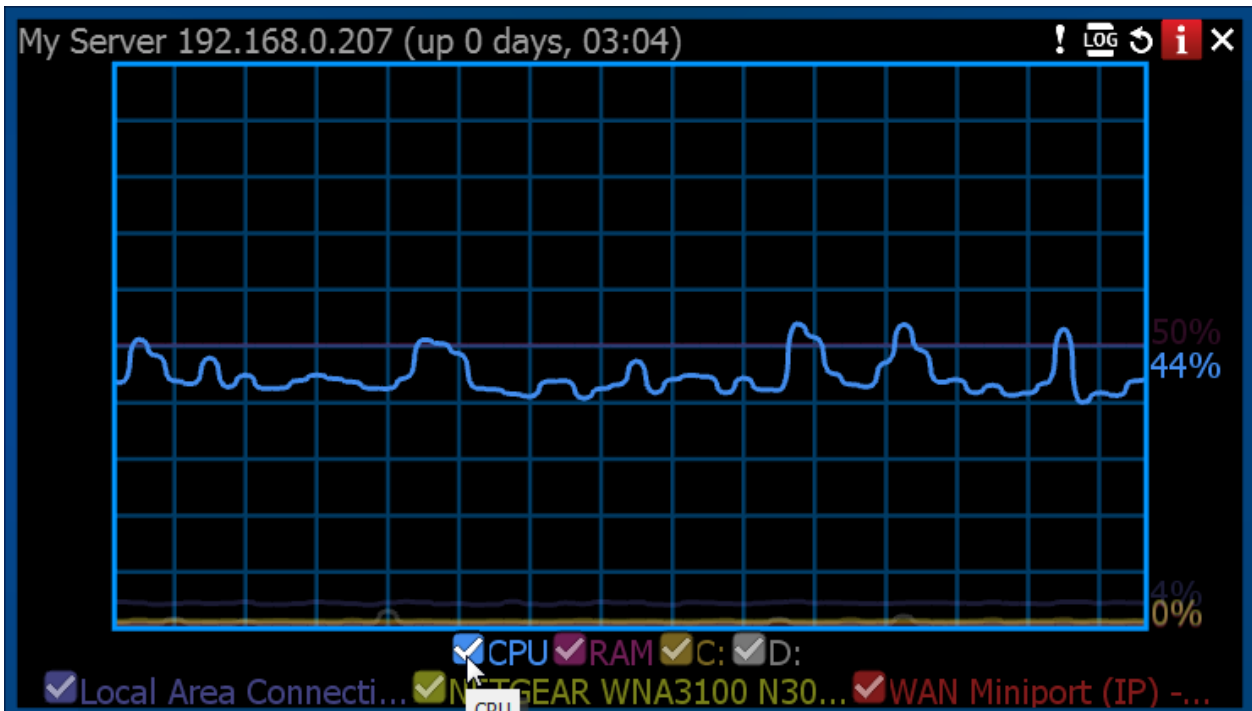

User can perform standard manipulations with **Monitoring Item**: move, resize, swap, duplicate etc (see "[Items on Layouts](#)").

To stop monitoring, remove the corresponding item from **Scene**.

Multiple **Server s** can be monitored simultaneously.

Additionally it is possible to monitor all **Servers** on a single **Layout**. To do so open [Main Menu](#), choose *System Administration (CTRL+ALT+A)*, then click *Health Monitoring*.

Using Server's Web Interface



Nx Witness provides simple and convenient way to control Servers remotely through **Server's Web Interface**.

To access it from a browser enter the following address: <http://<ip>:<port>>, then login (`admin`) and password:

- `<ip>` – IP address of Server (the current computer should be able to connect to this Server)
- `<port>` – network port of Server (default 7001).

To access it from Nx Witness Client:

1. Connect to a desired **Server** via **Client**.
2. Right-click on *System*, invoke [Context Menu](#) and choose *Open Web Client*.

 **Note:** If System contains multiple Servers, Web Interface will control Server Client is connected to (note the  icon in [Resource Tree](#)).

Web Interface provides the following features:

- Obtaining list of Servers in System and ability to connect to them (click corresponding links at the bottom of the *Settings* page)
- Merging/Splitting Systems (see "[Configuring Multi-Server Environment](#)")
- Changing Server's *Port*
- Restarting Server (*Restart* button on *Settings*)
- Gathering Server Information (*Information* tab): version, storages, health monitoring
- [Web client](#)
- Developer Resources (Server API and Camera Integration SDK)
- A variety of useful links (Support, Mobile Apps). See the *Help* tab.

Configuring Multi-Server Environment (Admin Only)


Nx Witness is a very scalable solution and it allows many **Servers** to work together in a single **System**.

This section describes how to manage multi-server environment to maintain maximum system reliability and performance:

- [Understanding Multi-Server Architecture and Basics](#)
- [Joining and Splitting Servers](#)
- [Configuring Failover](#)
- [Configuring Routing within Multi-Server Environment](#)
- [Configuring Time Synchronization within Multi-Server Environment.](#)

Understanding Multi-Server Architecture and Basics

Nx Witness implements the unique hive architecture that enables high redundancy, performance and provides almost unlimited scalability. Servers can be located in a local network, behind NAT or even in a different location – they will act as a single cluster allowing users to view cameras and control the whole system from a single workstation.

If several **Servers** are working together they should somehow connect to each other. To do so servers have the unique identifier - **System Name**, that allows server to group together. If Server discovers another Server with the identical System Name in a local network, they merge automatically. If System names are different, Server will display other one in [Resource Tree](#) under  *Other Systems*.

If Servers are in different subnets, it is necessary to specify other Server's IP to make them merge in separate networks (behind NAT or over the Internet).

When Servers are merged, they are constantly synchronizing all data between each other so it doesn't matter what server Client is connected to. If a video is requested from a remote Server, the one Client is connected to will be proxying the video traffic. Licenses are combined as well: if 4 licenses were activated on server 1 and 10 – on Server 2, System will have 14 Licenses total after the servers are merged.

Thus, the only thing Administrator should do to merge systems, is to assign the same system names to all Servers. Opposite, to split Systems Administrator needs to assign different system names.

Joining and Splitting Servers


There is several ways to join and split servers:

- [Join Server from Different System to Current-One](#)
- [Split Server to Different System](#)
- [Merge all Servers to Another System.](#)

Join Server from Different System to Current-One

This action can be useful if there is a single Server in a different System in local network. To join such server to the current system it is possible to use Nx Witness Client or [Server's Web Interface](#).

Client:

1. Expand  *Other Systems* under [Resource Tree](#) and locate the desired system
2. Expand desired system and locate Server to connect to the current System.
3. Open [Context Menu](#) and choose Merge to Currently Connected System...
4. Enter the admin password **of the other System**.

Web Interface:

1. Log in to web-interface of Server that should be connected to the current System
2. Change *System Name* to the desired value and click *Save*.

After some time the desired Server will be joined.

If it is necessary to connect several Servers in a different System to the current-one, this method may not be an option. Also, this method won't work if the server that should be joined, is outside local network. [Merge all Servers to Another System](#) should be used for these purposes.

Split Server to Different System


This action can be useful if it is necessary to isolate Server from current System. This is pretty rare operation.

To split Server to another System use [Server's Web Interface](#):

1. Log in to web-interface of Server that should be split off the current System
2. Change System Name to the any other value and click *Save*.

Merge all Servers to Another System

This operation can be useful if there is System A that contains several Servers and all of them should be joined to another System B. Also this method should be used to join remote server(s) to a current system.

 **Note:** If Licenses have been previously activated on this server, they will be gone from the current System.

To split Server from System use Web:

1. Launch Nx Witness Client and connect to any Server in system A.
2. Right-click on *System*, invoke [Context Menu](#) and choose *Merge Systems*.
3. Enter Server URL (any server of System B or remote Server). To find Systems in local network use drop-down menu. For Remote Server type [http://<ip>:<port>](#):
 - <ip> – IP address of Server (the current computer should be able to connect to this Server)
 - <port> – network port of Server (default 7001).
4. Enter *Password* to System B (or to remote Server) and click *Find System*.
5. Select the new System Name (System A or System B).
 - System A – System B will be merged to System A
 - System B – System A will be merged to System B
6. Click *Merge with <System Name>*.

Configuring Failover

Nx Witness can automatically manage failover in multi-server environment. If Server goes down, all cameras are transferred to other Servers and Client is being reconnected to other Servers as well. The archive playback will remain seamless, however this may be a 30 seconds gap in recording during the transfer.

Failover should be configured on backup servers. For instance if System contains Server A and Server B it should configure Server A to take over Cameras from Server B and vice versa.

! IMPORTANT. To be able to do failover, both server should be able to access cameras.

To configure Failover:

1. Find **Server B** in [Resource Tree](#), open [Context Menu](#) and choose *Server Settings*.
2. Click *Enable Failover*.
3. Enter the number of **Cameras** the server can handle.
4. Click OK. Now If **Server A** goes down, all cameras will be transferred to Server B.
5. To make **Server A** handle the cameras from Server B, make the same on **Server A**.

! IMPORTANT. To be able to do failover, Server should be able to handle double amount of cameras.

Configuring Routing within Multi-Server Environment

Nx Witness provides built-in automatic routing mechanism that enables users to seamlessly work with the large sites as a single cluster. However there may be custom network configurations that may require custom routing settings. For instance, Servers may have several IP addresses (Public and Private) and it may be necessary to allow or restrict traffic flow for some of them.

Initially Nx Witness tries to discover all available IP addresses of servers (including Public ones). However it is not possible in some network environments.

To setup routing open [Main Menu](#) → *System Administration (CTRL+ALT+A)* and go to *Routing Management* tab.

On the left all Servers are displayed. If click on Server all available interfaces are displayed in the right hand side.

- To add an address manually click "+" and add URL like <http://<ip>:<port>>:
 - <ip> – the desired IP address of Server (i.e. Public IP)
 - <port> – network port Server is listening on (default 7001).
- To allow/deny traffic to go through the specific network interface click *In Use* to set/release checkbox.

For instance, Server can have Public IP address and is connected to the Internet via 100 Mbit network and local NIC with local IP address (1Gbit). If it is not necessary to provide public access to this server it may be useful to restrict traffic flow through Public IP.

Configuring Time Synchronization within Multi-Server Environment

Nx Witness provides built-in time synchronization mechanism. However this mechanism synchronizes the time with the Internet and if no Internet connection available, it may be necessary to configure time settings manually. Even in this case Nx Witness tries to synchronize time across servers. Manual settings are needed if it is necessary to specify **Master Time Server**: the one all other Servers will synchronize to.

To do so open [Main Menu](#) → *System Administration (CTRL+ALT+A)* and go to *Time Synchronization* tab.

Initially Nx Witness tries to discover all available IP addresses of servers (including Public ones). However it is not possible in some network environments.

To go to routing setup open [Main Menu](#) → *System Administration (CTRL+ALT+A)* and go to *Routing Management* tab.

The table shows all Servers that are currently online, current time and offset from Internet time or master server time.

To specify **Master Time Server** tick it in the table and click *OK*.

Cameras and Encoders Management

It is extremely easy to configure **Cameras** in Nx Witness.

The following **Camera Settings** are crucial for the application to function properly:

- **Recording schedule** (see "[Setting up Recording Schedule](#)")
- **Authentication** (the default password has been changed for cameras). See "[Configuring Camera Authentication](#)".

! IMPORTANT. Most camera parameters can only be configured by **Advanced Viewer** (permission level is required). A basic viewer can access camera configuration, but cannot make any changes. See the "[User Management](#)" section for more.

The section describes the following functions related to **Cameras**:

- [Viewing Full Camera List](#)
- [Adding Cameras and Encoders](#)
- [Setting Up Cameras](#)
- [Setting Same Parameters for Multiple Cameras](#)
- [Swapping Cameras between Servers \(Admin Only\)](#)
- [Deleting Cameras \(Admin Only\)](#)

Viewing Full Camera List


All **Cameras** registered in Nx Witness are displayed in [Resource Tree](#). It may be problematic to find a particular camera when too many **Cameras** appear in **Tree**. It is possible to use [Search](#) to locate **Cameras** on **Scene**.

To use a more organized list, open [Main Menu](#) and select *Camera List...* (or press **CTRL + M**).

The information is broken down by the following columns:

Recording	Name	Vendor	Model	Firmware	IP/Name	ID/MAC	Server
Not recording	vivo_ironmanVS8801-channel 6	VIVOTEK	VS8801	VS8801-VVTK-0200a	192.168.0.39	urn_uuid_d9b0a41f-d26b-fcc8-9342-f19b48886a2c_channel=6	Server (192.168.0.172)
Continuous	3105	ArecontVision	3105	64127	192.168.0.80	00-1A-07-01-18-D1	Server (192.168.0.172)
Not recording	vivo_ironmanVS8801-channel 7	VIVOTEK	VS8801	VS8801-VVTK-0200a	192.168.0.39	urn_uuid_d9b0a41f-d26b-fcc8-9342-f19b48886a2c_channel=7	Server (192.168.0.172)
Not recording	DWC-MPTZ20X	Digital Watchdog	DWC-MPTZ20X	1.1.3.0	192.168.0.169	00-1C-A6-01-48-5A	Server (192.168.0.253)
Not recording	vivo_ironmanVS8801-channel 8	VIVOTEK	VS8801	VS8801-VVTK-0200a	192.168.0.39	urn_uuid_d9b0a41f-d26b-fcc8-9342-f19b48886a2c_channel=8	Server (192.168.0.172)
Continuous	HI9712_51◆◆◆LR01	HI9712_51ÉÔîã	LR01	V0.2.0.1.3_H_BETA	192.168.0.142	uuid_LR01-T368130729-008F01ED073F946C71	Server (192.168.0.172)
Continuous	IPCLR01	IPC	LR01	V0.2.0.1.3_H_BETA	192.168.0.7	uuid_LR01-T368130729-008F01ED0749946C78	Server (192.168.0.172)
Not recording	vivo_ironmanVS8801-channel 2	VIVOTEK	VS8801	VS8801-VVTK-0200a	192.168.0.39	urn_uuid_d9b0a41f-d26b-fcc8-9342-f19b48886a2c_channel=2	Server (192.168.0.172)
Continuous	hs0130LR01	hs0130	LR01	V0.2.0.1.3 H BETA	192.168.0.73	uuid_LR01-HI3518A130722-008D8DC88EBE36EF41	Server (192.168.0.172)

- **Recording** – recording of **Camera** (*Not recording, Continuous, Motion only, Motion + Lo-Res*). See "[Setting up Recording Schedule](#)".

 **Note:** this is not an indication on how **Camera** is being recorded.

- **Name** – **Camera** name.
- **Driver** – **Camera's** manufacturer/maker. When interacting with a 3rd party Cameras via Onvif protocol, *OnvifDevice* is displayed.
- **Model of Camera**.
- **Firmware** – the current firmware version.
- **IP/Name** – **Camera's** IP address.
- **ID/MAC** – **Camera's** MAC address. It is not possible at times to determine the MAC address. In this instance, a unique identifier is shown (i.e. `urn_uuid_207f19b2-d5a6-407f-8fec-6265a3111058b`)
- **Server** – the Server **Camera** is hosted on.

The following tools are available to manage **Camera List**:

- **Sort data** by column. **Left Click** on column's header.
- **Filter data**. Type the filter sub-string into the *Search String* field (on the top). The results will be refresh as typing. To disable filtering, clear the sub-string.
- **Select several rows** from the table. Drag the mouse, use **CTRL + Click/Up/Down** arrows, or **Shift + Click/Up/Down** arrows. Use **CTRL + A** to select all **Cameras**.
- **Open one or several Cameras**. Select the desired **Cameras**, open [Context Menu](#) and choose *Open*, *Open in New Tab*, *Open in New Window*.
- **Rename Cameras**. Select **Camera**, open [Context Menu](#) and choose *Rename*.
- Viewing **Camera's event history**. Select **Camera**, open [Context Menu](#) and choose *Check Camera Issues...* [Event History](#) form will open and filtering against the selected **Camera** will apply.
- **Delete** one or multiple **Cameras**. Select the desired **Cameras**, open [Context Menu](#) and choose *Delete*.
- Go to [Cameras Settings](#). Select the desired **Cameras**, open [Context Menu](#) and choose *Camera Settings...*
- **Export** data from one or multiple **Cameras** to an external file. Select the desired **Cameras**, open [Context Menu](#) and choose *Export Selected to File...* Select file name and format. The following formats are supported:
 - HTML File
 - CSV file (text file with delimiters). This file type can easily be imported into Microsoft Excel.
- Copy one or several rows to clipboard. Select the desired rows, open [Context Menu](#) and choose *Copy Selection to Clipboard*. The data can be pasted into any text editor or Microsoft Excel.

Adding Cameras and Encoders

This section provides information on how to add cameras to the Nx Witness resource list.

Choose one of the following methods:

- [Discovering Cameras Automatically](#)
- [Disabling Automatic Discovery \(Admin Only\)](#)
- [Adding Cameras and Encoders Manually \(Admin Only\)](#)
- [Adding RTSP or HTTP Streams as Cameras \(Admin Only\)](#).

Discovering Cameras Automatically

Nx Witness provides a powerful and easy-to-use mechanism for automatic camera discovery. It is required that a camera should be accessible via **Broadcast**.

As soon as **Server** is started and connected to **Server**, it automatically performs camera discovery in its network. Once a camera is discovered, its parameters will be displayed in [Resource Tree](#) automatically.

If a camera does not transmit media data, it is marked as **Offline**.

If **Server** is offline, all **Cameras** the server is hosting are switched to the offline status **automatically**.


Once **Camera** is discovered, <%PRODUCT NAME%> tries to configure the following settings on **Camera**: the best possible image settings for the main video stream (best possible resolution and FPS) and optimal ones for the secondary stream (240p to 320p, 2 to 7 FPS). To disable this feature, see "[Preventing Nx Witness from Changing Camera Streaming Settings](#)".

If **Camera** was deleted (see "[Deleting Cameras \(Admin Only\)](#)") and connected again, it will be re-discovered. Disable this feature to avoid auto camera discovery. See "[Disabling Automatic Discovery \(Admin Only\)](#)".

Disabling Automatic Discovery (Admin Only)

Once **Camera** is discovered, the only way to delete it is to unplug it from the network (see "[Deleting Cameras \(Admin Only\)](#)"). However, if **Camera** is plugged back again, it will be re-discovered. To avoid this it is possible to disable this feature:

1. Open [Main Menu](#) → *System Administration (CTRL+ALT+A)* → *General* tab.
2. Uncheck *Enable camera auto discovery* in the *Camera Management* section.

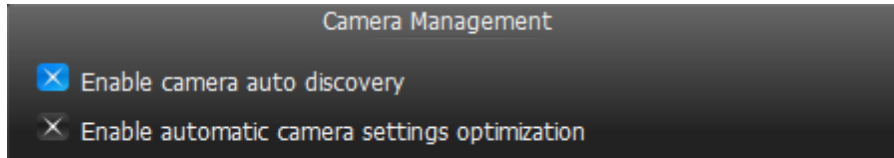

3. When finished, press *OK* to apply or *Cancel* to discard settings.


! IMPORTANT. Once the feature is disabled, new cameras will no longer be auto-discovered, only added manually.

Adding Cameras and Encoders Manually (Admin Only)

If **Camera** or **Encoder** is not accessible via broadcast (usually if it is located in a different network), it will not be discovered automatically. In this case Nx Witness provides an ability to add **Camera** manually. For instance, it can be useful if **Camera** or **Encoder** is located in a different network or can even be accessed via Internet only. It is also possible to add several **Cameras** simultaneously by scanning a range of IP addresses.


To add one or more **Cameras/Encoders**:

1. **Right-Click** on server in [Resource Tree](#) and open [Context Menu](#).
2. Choose *Add Camera(s)...* The following view will appear:

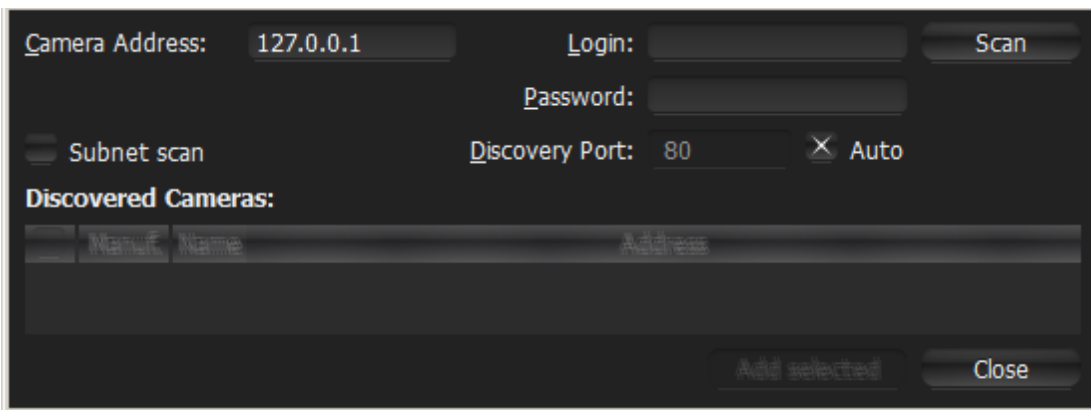

3. Choose one of the following:

- To add a single **Camera**, enter camera's *Address* (**IP** or **Host Name** the **Camera** can be resolved on)
- **! IMPORTANT.** Nx Witness allows adding **Cameras** by **IP Address**, **Host Name** or **Generic RTSP/HTTP Link** (advanced). See "[Adding RTSP or HTTP Streams as Cameras \(Admin Only\)](#)".
- To add several **Cameras** at once, select *Subnet Scan*:

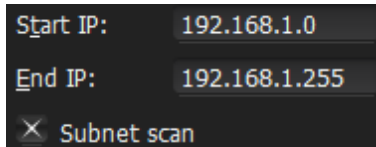


The screenshot shows a dark-themed dialog box with the following fields and options:


Start IP:	192.168.1.0
End IP:	192.168.1.255
<input checked="" type="checkbox"/> Subnet scan	

4. Enter the desired IP range to start scanning. By default, addresses 0–255 of the same subnet are suggested. As a result, the entire specified network will get scanned for **Cameras**.
6. Specify authentication parameters in *Login* and *Password* fields (if needed).
7. Specify *Discovery Port* if needed. Most **Cameras** are discovered on port 80, so it is better to leave on *Auto* setting.
8. Press *Scan* to initiate search. This can take a lengthy period of time (especially if IP Range is being scanned).

9. If **Cameras** are located, they will be displayed in order.

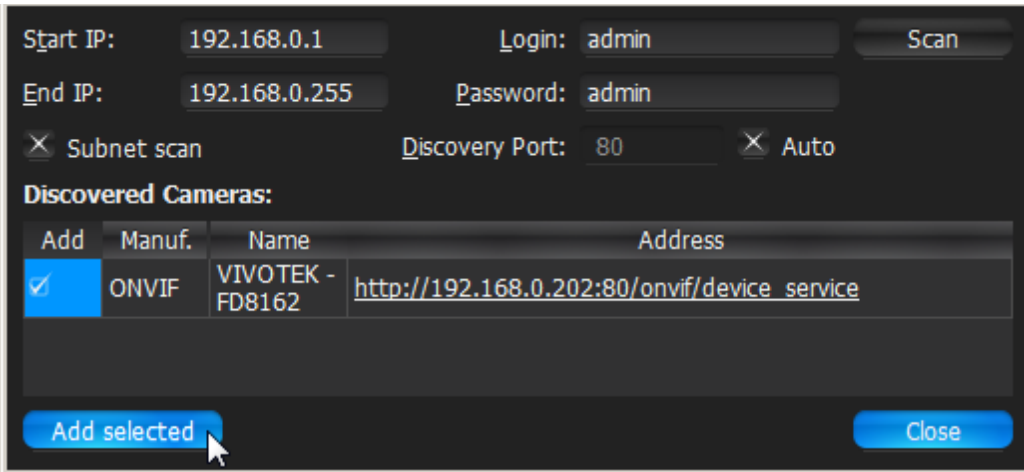

If **Camera** is already registered (manually or automatically), it will be displayed though cannot be selected for addition:

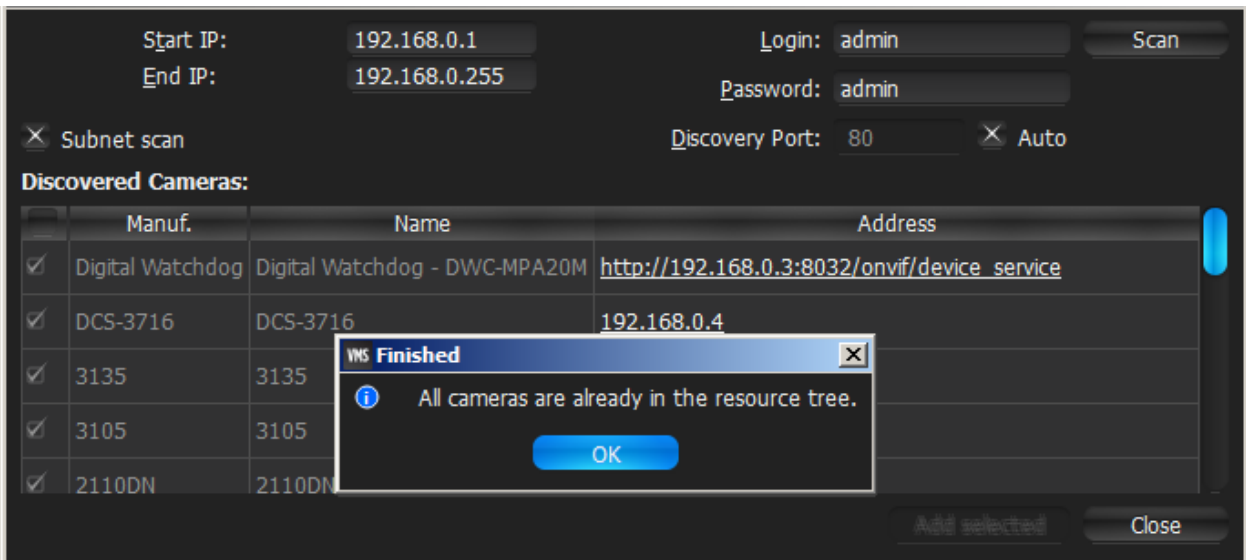


10. Select desired cameras and click *Add selected*.

Cameras should be added to [Resource Tree](#).

Adding RTSP or HTTP Streams as Cameras (Admin Only)


Some camera models are not fully compatible with **Onvif Profile S**; therefore, will not work properly in Nx Witness. However, if such **Cameras** can provide streams by **RTSP** or **HTTP**, they can still be viewed and recorded.

 **Note:** to add, it is important to check if a particular camera model supports this option plus know the exact **RTSP/HTTP URL** of the stream. This information can be found in camera's guide or by contacting the manufacturer.


To add the stream use the standard manual addition procedure (see "[Adding Cameras and Encoders Manually \(Admin Only\)](#)").

First, Make sure *Subnet Scan* is unchecked, then enter **RTSP** or **HTTP URL** (i.e. `rtsp://<camera IP>:554/hi_stream`) instead of **Camera IP**.

Once added, **Camera** will be displayed in [Resource Tree](#) as follows way:

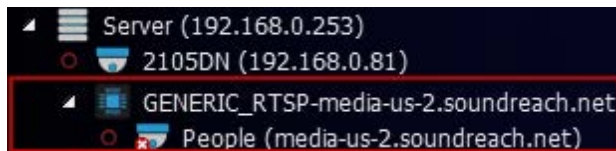

It can now be configured as any regular **IP Camera** (see "[Setting Up Cameras](#)").


 **Note:** only one stream can be added per **Camera**, so **Dual-Streaming** benefits will not be available (see "[Dual Stream Recording Specifics \(RADASS\)](#)"). Lastly, if resolution is greater than 720*576, software motion detection will not be available.

Setting Up Cameras


It is possible to configure **Cameras** for **Administrators** and **Viewers** that have the appropriate access **Permission**. **Administrators** can configure all cameras and **Viewers** can only use the ones that are assigned to them by **Administrators**.

A user can locate *Camera Settings* from **Camera's Context Menu**.

From [Resource Tree](#):

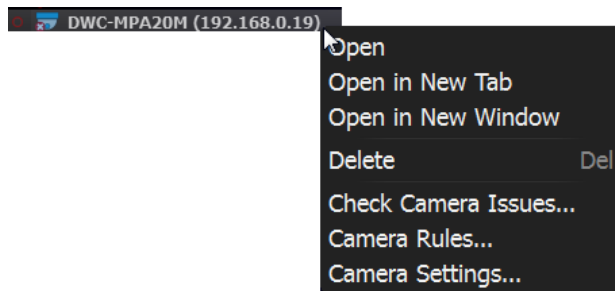

From **Scene**:

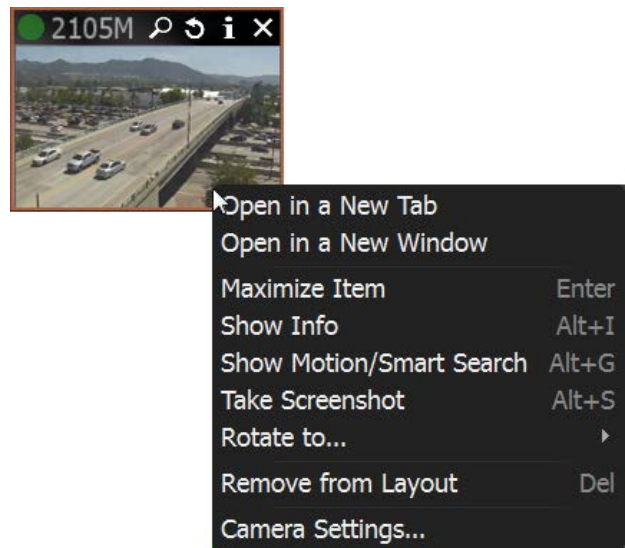


The following actions can be performed when configuring **Camera Parameters**:

- [Renaming Cameras](#)
- [Obtaining Camera's IP, MAC , Firmware and Model](#)
- [Configuring Audio on Camera](#)
- [Configuring Camera's Authentication](#)
- [Forcing Aspect Ratio for Cameras](#)
- [Setting up PTZ on PTZ and Fish-Eye Cameras](#)
- [Setting Up Fish-Eye Cameras](#)
- [Setting up Recording Schedule](#)
- [Setting up Motion Mask and Motion Sensitivity](#)
- [Configuring Proprietary Camera Parameters](#)
- [Adjusting Secondary Stream Quality](#)
- [Forcing Aspect Ratio for Cameras.](#)

Setting up Analog Cameras

Typically, Analog Cameras are connected to via **Analog Recorders**. Each **Recorder** has a number of channels that indicates the number of **Analog Cameras** it can handle. If **Recorder** is plugged into the network, it can either be discovered automatically or added manually (see "[Adding Cameras and Encoders](#)"). **Encoder** with discovered channels looks as the following:

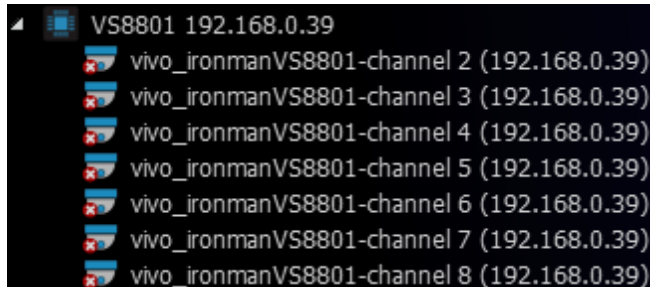


The following types of **Analog Cameras** are supported:


- **Analog Cameras** plugged into **Encoder**. Those cameras act like regular Cameras: it is possible to configure [Recording Schedule](#) for them as well as [Motion Detection](#).
- **Analog Cameras** plugged into **Recorder**. Those cameras are recorded somewhere else so Nx Witness only pulls the desired stream from the recorder. It is not possible to configure [Recording Schedule](#) and [Motion Detection](#) for those **Cameras**.

Renaming Cameras (Admin Only)


If a camera is discovered automatically (see "[Discovering Cameras Automatically](#)"), it is displayed in [Resource Tree](#) as a predefined sequence ("model" or "manufacturer + model"). For instance, 10005 for Arecont Vision cameras or **DWC-MD421D** for Digital Watchdog.

 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** with an appropriate **permission** level.

It is recommended to rename same camera models for easier identification. Cameras can be renamed directly from [Resource Tree](#) using [Context Menu](#) (or **F2**):

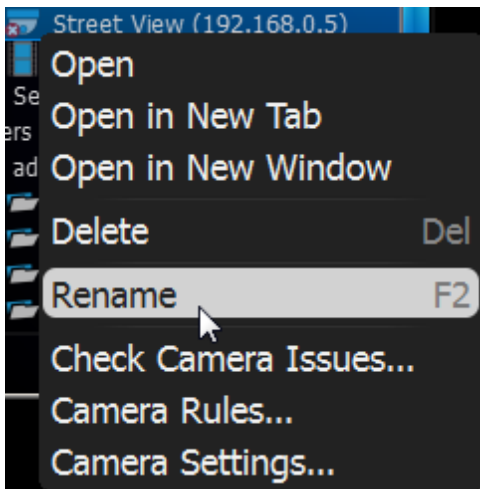


or in [camera settings](#):

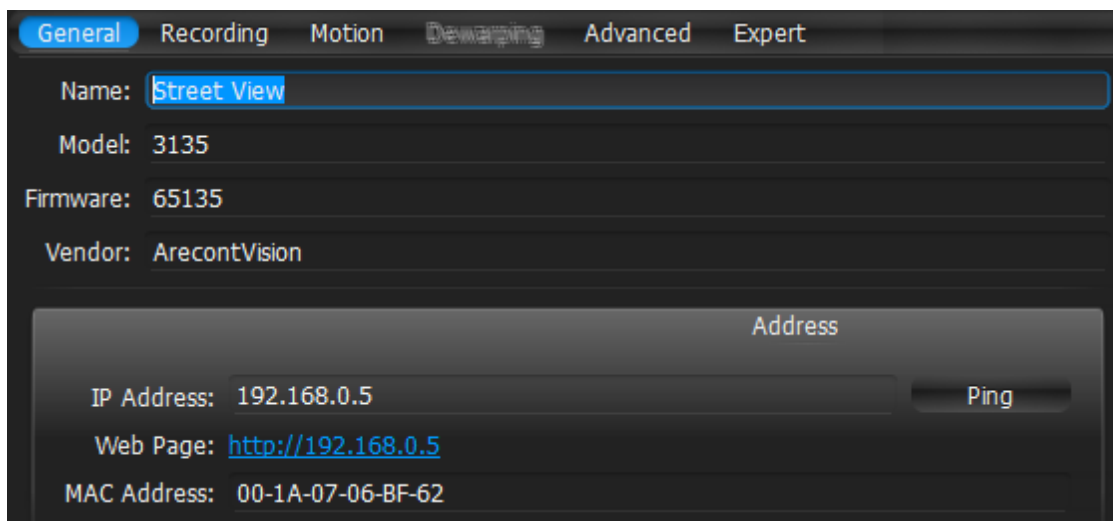

IP-addresses are added to a camera name automatically and are **non-editable**. It is possible to deactivate displaying IP addresses in [Resource Tree](#).

Obtaining Camera's IP, MAC, Firmware and Model

To obtain Camera's IP and MAC, open [camera settings](#) and go to *General*:

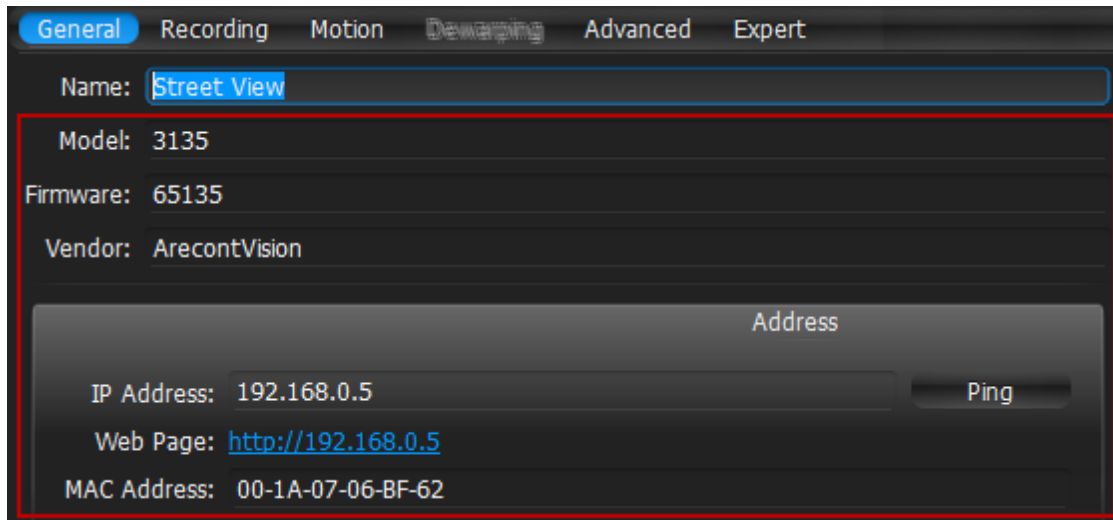

The fields are non-editable.

 **Note:** this information is available for **Administrators** and **Viewers** with an appropriate **permission** level.


It may be useful to go to **Camera's** web page by clicking on the appropriate hyperlink to check or set up **Camera's** parameters. See "[Configuring Proprietary Camera Parameters](#)" for details.

It is possible to check if a camera is accessible by pressing the *Ping* button.

Configuring Audio on Camera

Nx Witness allows to record audio from Cameras (if camera has this feature and the microphone is connected to it).

To set up audio recording for the camera open [camera settings](#) and go to *General*:

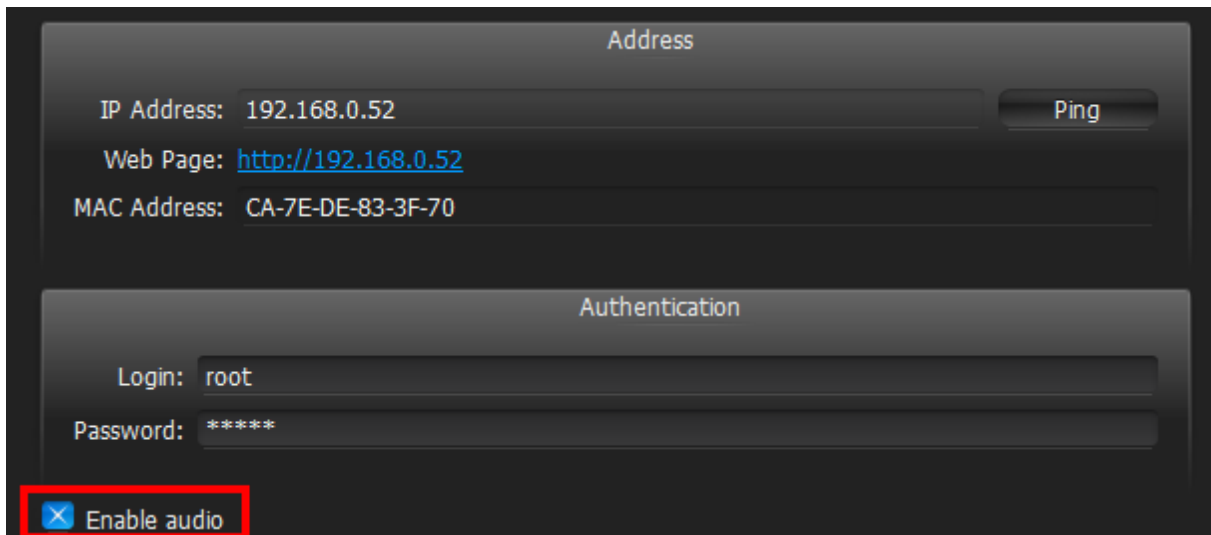

The screenshot shows a web interface for camera configuration. It is divided into two main sections: 'Address' and 'Authentication'.
The 'Address' section contains:
- IP Address: 192.168.0.52 (with a 'Ping' button to its right)
- Web Page: <http://192.168.0.52>
- MAC Address: CA-7E-DE-83-3F-70
The 'Authentication' section contains:
- Login: root
- Password: *****
At the bottom of the interface, there is a checkbox labeled 'Enable audio' which is checked and highlighted with a red rectangular box.

To enable/disable audio enable or disable the corresponding flag. The settings are applied right after *Apply* or *OK* are clicked.

It may be useful to go to **Camera's** web page by clicking on the hyperlink. See "[Configuring Proprietary Camera Parameters](#)" for details.

! **IMPORTANT.** It is possible to configure audio for multiple cameras at a time. See "[Setting Same Parameters for Multiple Cameras](#)".

Configuring Camera's Authentication

All **Cameras** come with a predefined login and password combination. During the discovery process, Nx Witness attempts to use manufacturer's default credentials to access a camera.

However, default login and passwords may vary between models/lines or can be changed deliberately, which prevents Nx Witness from accessing **Cameras** and acquiring media streams. As a result, **Camera** is shown as **Unauthorized** (🚫) in [Resource Tree](#). The following message will appear if a user attempts to view a live stream:


UNAUTHORIZED


Please check authentication information in camera settings.

 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** that have the appropriate **permission** level.

To get **Camera** working it is necessary to setup **Authorization Parameters**:


1. Open [Camera Settings](#) and go to *Network*.
2. Enter *Login* and *Password* in the *Authentication* section and click *Apply* or *OK*. To discard changes, click *Cancel*.

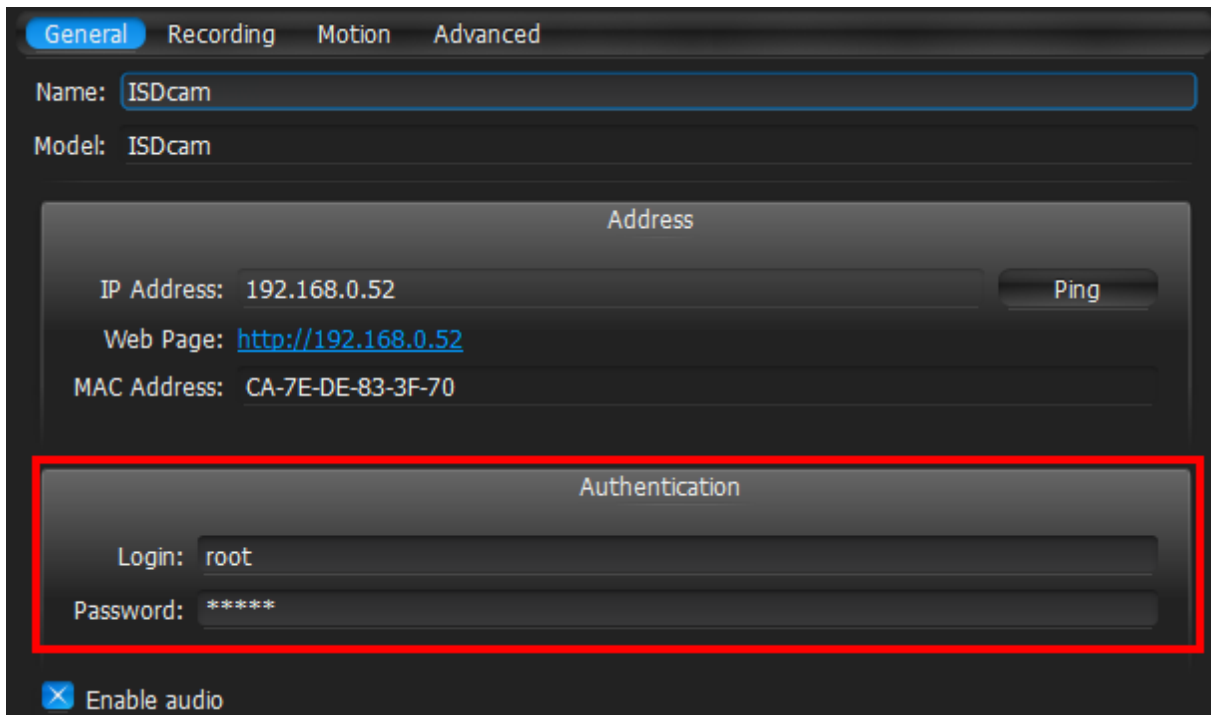

 **IMPORTANT.** It is possible to configure same authentication credentials for several cameras simultaneously. See "[Setting Same Parameters for Multiple Cameras](#)".


Forcing Aspect Ratio for Cameras

Occasionally, **Cameras** report an incorrect **Aspect Ratio**. In such instance, Nx Witness automatically corrects **Aspect Ratio** for **Cameras**.

 **Note:** this correction **will require transcoding** if exporting videos from **Camera**. See "[Exporting Recorded Region from Single Camera](#)".

To specify **Aspect Ratio**:


1. Open [Camera Settings](#) and go to *General*.
2. Enable *Force aspect ratio* flag and select the desired ratio. The following AR are available: 1:1, 4:3, 16:9.

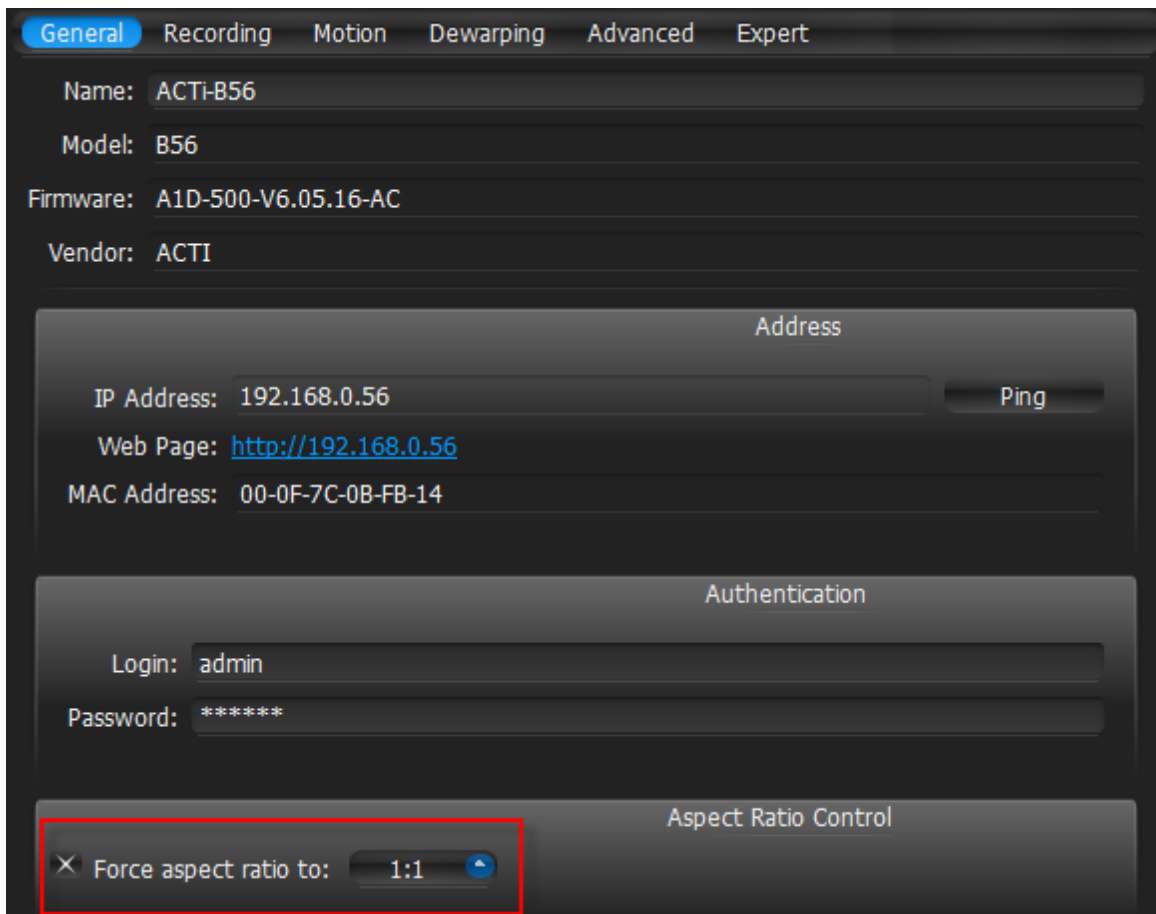

3. Disable the flag to restore the original **Aspect Ratio**.
4. The settings are applied once *Apply* or *OK* are clicked.

Setting up Camera Orientation

Sometimes Cameras can be mounted rotated by 90 degrees or upside down. In such instance, Nx Witness can **display proper orientation**.

 **Note:** this correction **will require transcoding** if exporting videos from **Camera**. See "[Exporting Recorded Region from Single Camera](#)".


To specify **Orientation**:

1. Open [Camera Settings](#) and go to *General*.
2. Enable *Default Rotation* flag and select the desired orientation.
3. Disable the flag to restore the original orientation.

Setting Up Fish-Eye Cameras


Nx Witness provides advanced capabilities to operate with fish-eye cameras. Such cameras use a specific type of lens that can cover a much larger viewing area. This particular type of lens warps a picture and a de-warping algorithm must be enabled to display the picture correctly:




 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** with an appropriate **permission** level.


In order for Nx Witness to distinguish cameras with fish-eye lens, the following configuration must be performed:

1. Open [Camera Settings](#) and go to *General*.
2. Check *This is a fish-eye lens camera* to activate the *Dewarping* tab:

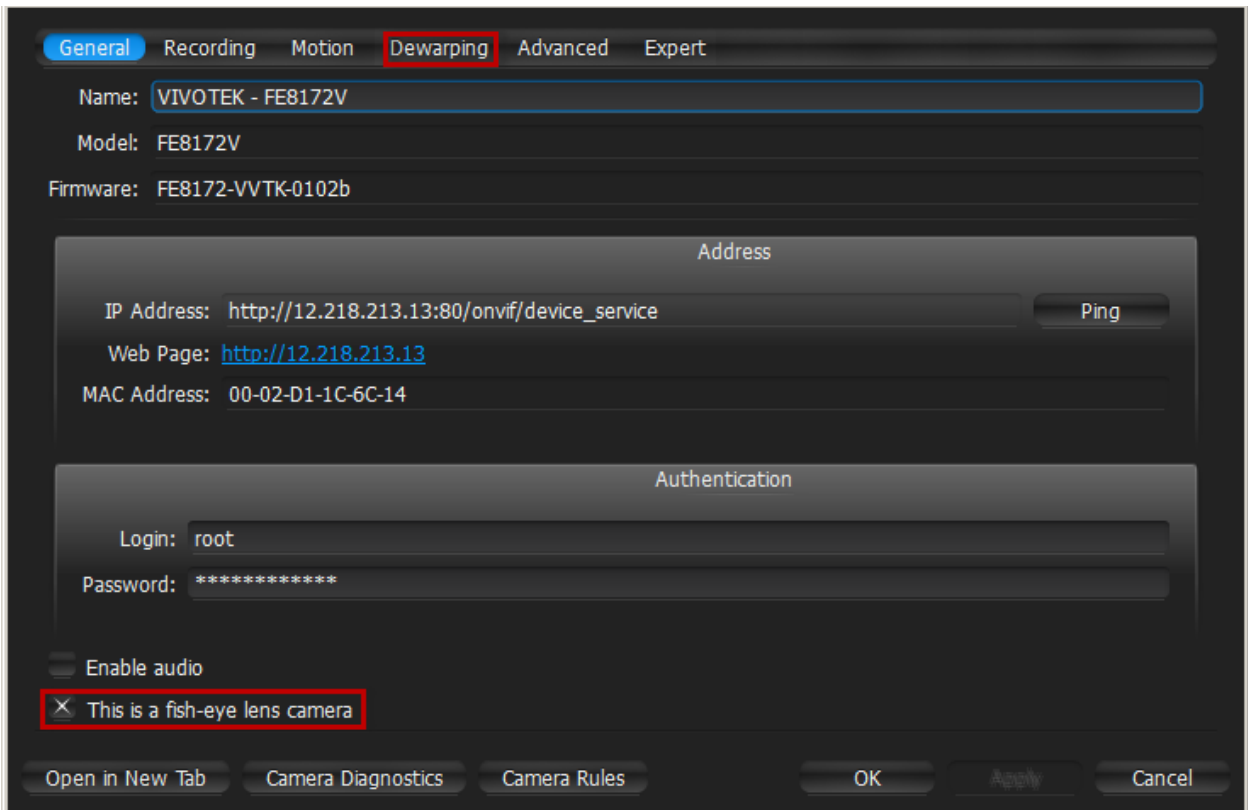

3. Go to the *Dewarping* tab to select the following parameters:

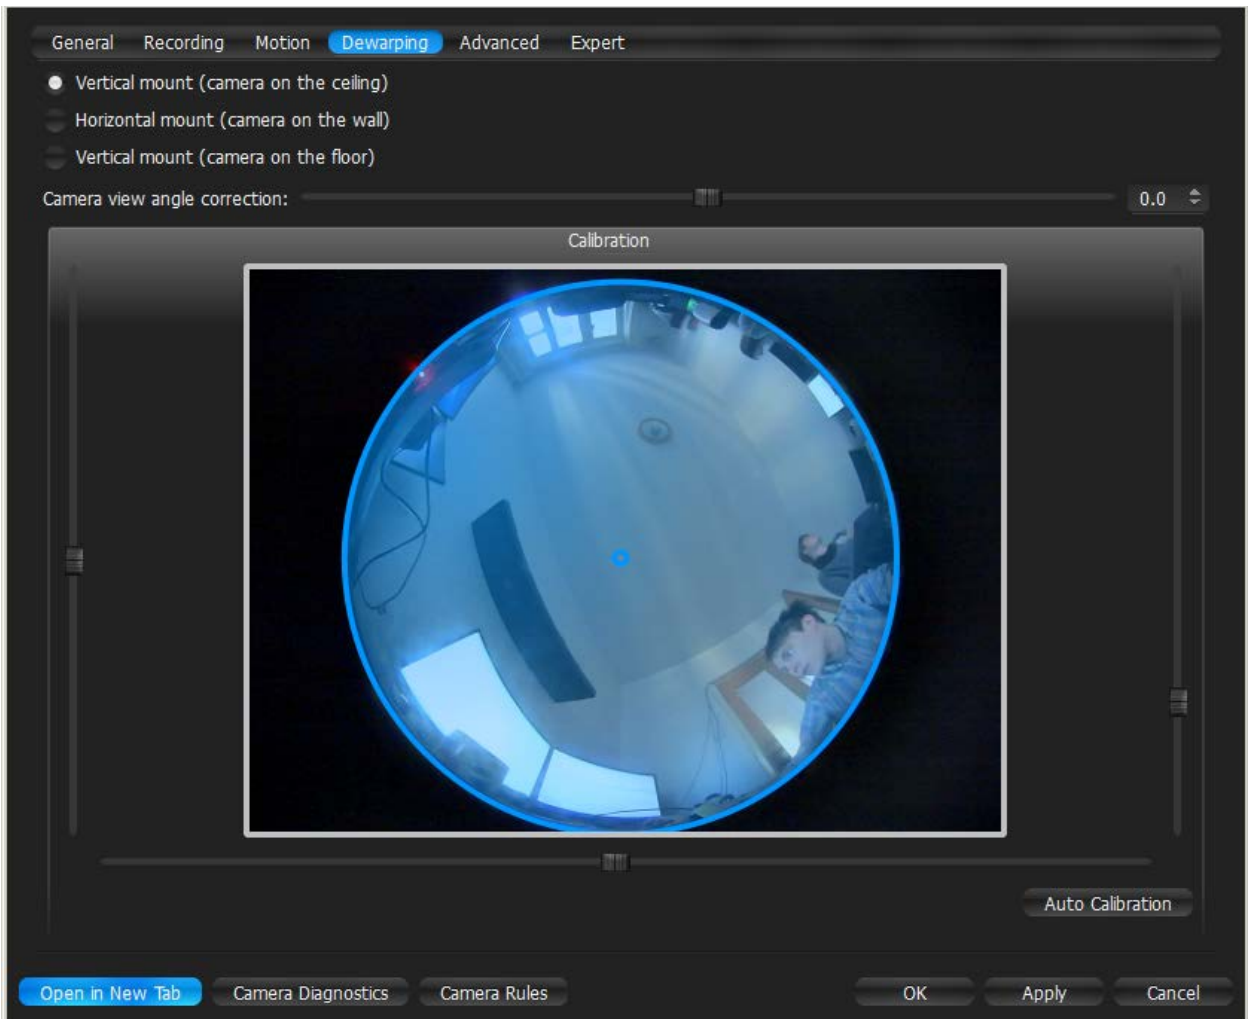

- **Camera's** orientation - type of de-warping algorithms based on orientation.
 - **Calibration** - to avoid de-warping artifacts, it is important to position the calibration circle within the **Camera's** view as accurately as possible. First, try *Auto Calibration*, then manually adjust the viewing range (if needed):
 - Use scrollers to move the circle horizontally or vertically (or drag it with a mouse)
 - Use the bottom scroller to specify the shape of the lens (panamorph lens support)
 - Use a mouse wheel to resize the circle
 - **Camera's** view angle.
-  **Note:** It is recommended to keep **Camera** on **Scene** to monitor any image changes while adjusting settings.

4. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Once **Camera** is established as a fish-eye camera, de-warping can be performed. See "[De-warping Fish-Eye Cameras](#)" for details.

Setting up PTZ on PTZ and Fish-Eye Cameras

Nx Witness provides a smart and intuitive way for setting up **PTZ** on **Cameras**, in addition to easy controls for **PTZ** on **Fish-Eye Cameras** and **Screenshots** (see "[De-warping Fish-Eye Cameras](#)").

PTZ on **PTZ Cameras** can be set by either **Administrator** or **Viewer** (a corresponding permission level is required – see "[User Management](#)"). **PTZ** on **Fish-Eye Cameras/Screenshots** is accessible to all users.

This feature is available **for PTZ Cameras** if:

- It is supported by the **Camera** model (**Onvif Cameras only**)
- **Camera** is in **Live** mode

If the requirements are met,  will display on the corresponding camera item.

These restrictions do not apply to **Fish-Eye Cameras** and **Screenshots**.

The following PTZ modes are available:

- **Simple (Zoom only)**. Refer to the following image:



Use + and - buttons to zoom in/out.

- **Regular (Zoom and Point)**. Refer to the following image:



Use + and - buttons to zoom in/out. **Left-Click** on the center circle, **Hold Left Mouse Button** and **move the cursor** to move **Camera** to the desired position.

Additionally, if Camera supports **Absolute Move**, the following features will be available:

- [Save and restore PTZ positions](#)
- [Setting Up PTZ Tours](#)
- Setting Up Home Positions or Tours (see "[Home Positions and Tours for PTZ and Fish-Eye Cameras](#)")
- **Extended (Zoom, Point and additional features)**. Requires the support for **Absolute Move** from **Camera** and **custom integration**:



In this case **Camera** allows moving and zooming as in previous case, plus:


- Move to a certain position – **Left Click** to the desired position
- Zoom to a certain range – Hold **Left Mouse Button** and draw the rectangle to zoom into (see the above picture)
- Full Zoom Out – **Double Click**.
- **Fish-Eye Cameras/Screenshots** support full PTZ functionality.

After all settings are configured press  once again to hide PTZ controls.

Saving and Restoring PTZ Positions

In addition to standard PTZ controls, Nx Witness allows for managing of predefined PTZ positions. It is basically possible to set up several points, tilt and zoom presets and restore them with only two clicks or one hot key.


Then PTZ presets can be used for composing **PTZ Tours** (see "[Setting Up PTZ Tours](#)") or serve as a **Home Position** (see "[Home Positions and Tours for PTZ and Fish-Eye Cameras](#)").

 **Note:** It is possible to configure PTZ on **Cameras** for **Administrators** and **Viewers** with the appropriate **permission** level.


The following is possible:

Saving PTZ positions (simple):

1. Set up a desired **PTZ Position** on **Camera** using **PTZ Controls** (see "[Setting up PTZ on PTZ and Fish-Eye Cameras](#)")
2. Open [Context Menu](#) and select *PTZ... -> Save Current Position...*

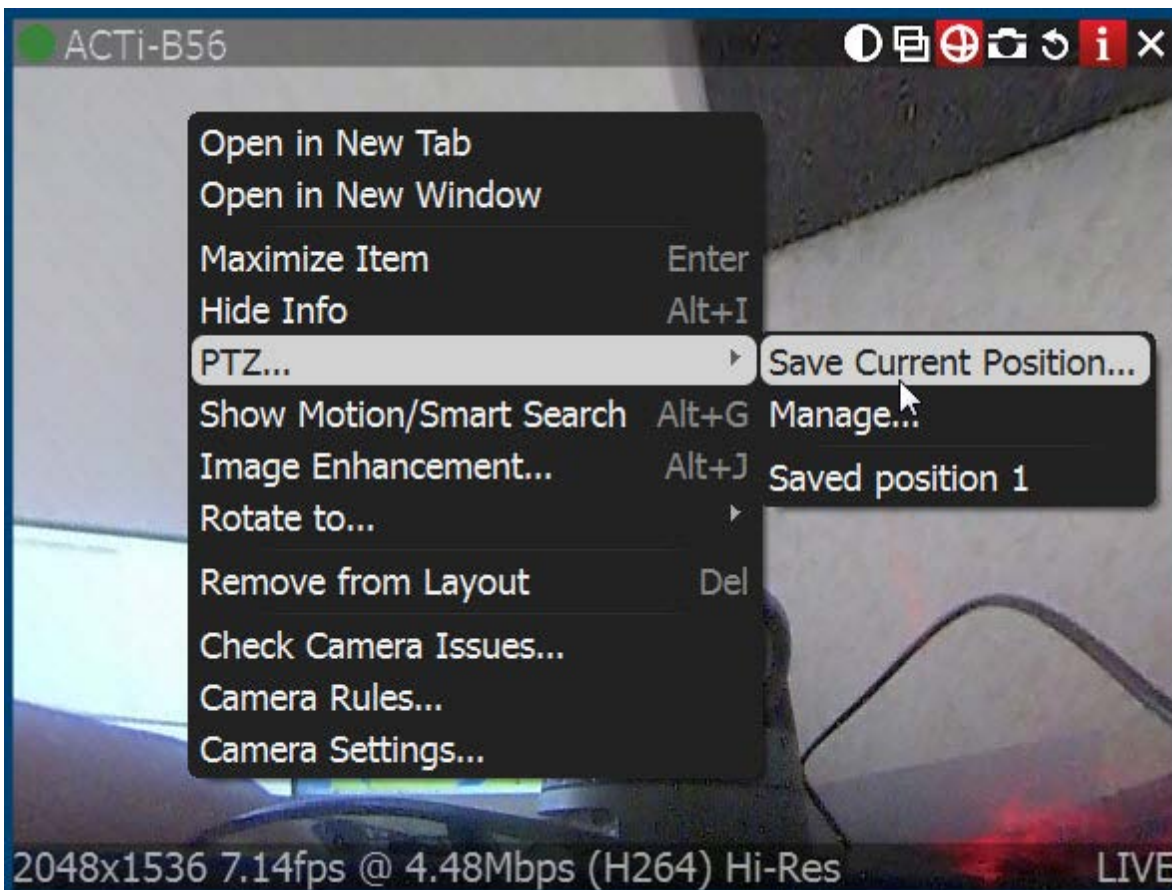


3. Type a desired preset name.

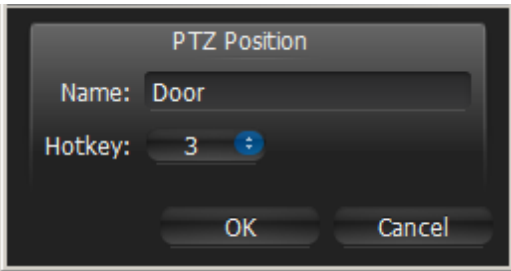

4. If needed, select a hot key for preset (**0-9**).

Saving and Editing PTZ positions (advanced):


1. Open [Context Menu](#) and select *PTZ... -> Manage*. The following form will appear:

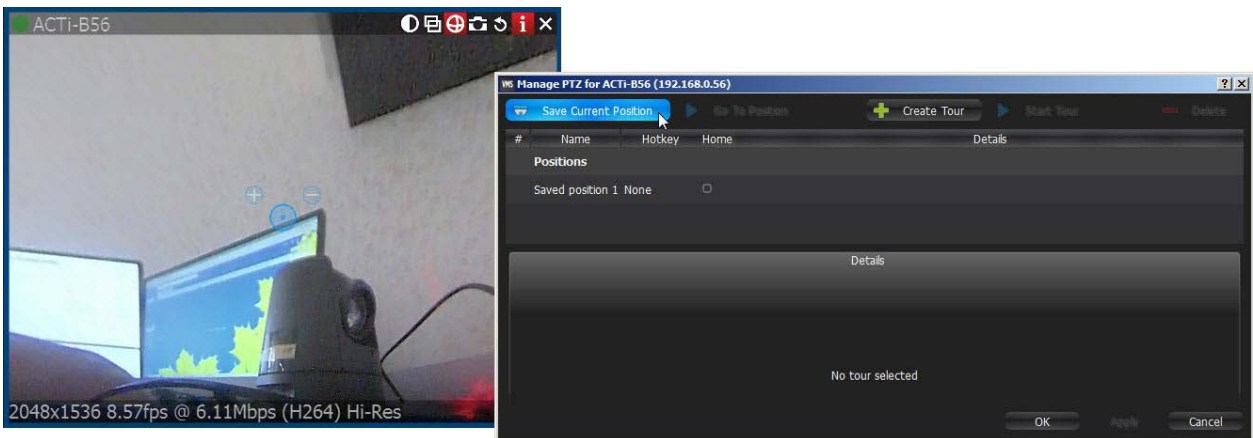


2. Move the form aside, so that the item and its PTZ controls are fully accessible (as shown at the picture above).
3. Set up a desired **PTZ Position** on **Camera** using **PTZ Controls** (see "[Setting up PTZ on PTZ and Fish-Eye Cameras](#)").
4. Click *Save Current Position*.
5. To edit positions set *Hotkey* and *Name* if necessary.
6. Set **Home Position** if necessary (see "[Home Positions and Tours for PTZ and Fish-Eye Cameras](#)")
7. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Restoring PTZ positions:

Open [Context Menu](#) and choose *PTZ...* -> *Go to Position...* -> **<Desired position>** or press the predefined hot key (**0-9**).

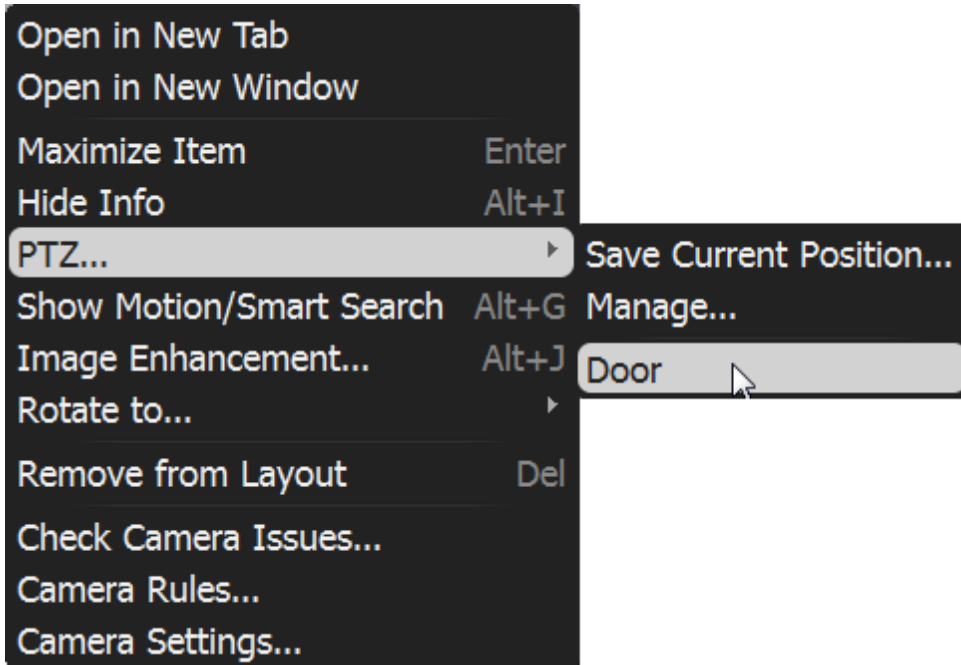


It is also possible to restore **PTZ Positions** in **Manage PTZ** window (*Go to Position*):

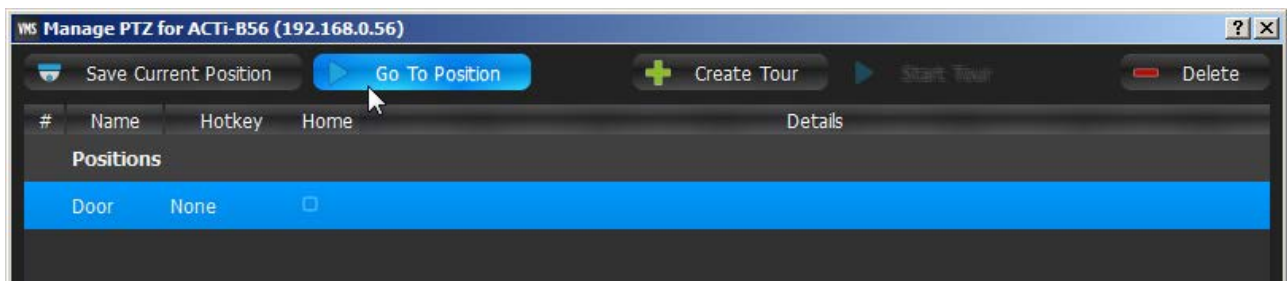

Deleting PTZ positions:

1. Open [Context Menu](#) and select *PTZ...* -> *Manage ...*
2. Select a desired preset and Click *Delete*.

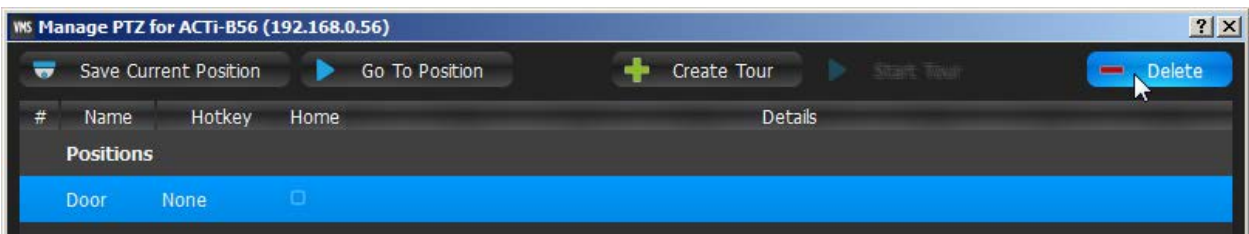

! **IMPORTANT.** If **Position** is included in **Tour**, the deletion may make this **Tour** invalid.

3. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Setting Up PTZ Tours


Nx Witness allows to create **PTZ Tours**. **PTZ Tour** is a sequence of **PTZ Positions**. It may be useful to move from one position to another automatically in a cycle to observe large locations by a single **Camera**.

The following parameters can be configured for **PTZ Tours**:


- **Positions. Tour** can contain an unlimited number of **PTZ Positions**.
- **Stay Time** - the duration of time for **Camera** to stay on **PTZ Positions**.
- **Speed** - the speed of **Camera** moving between **PTZ Positions**.

To configure **PTZ Tours**:

1. Open [Context Menu](#) and select *PTZ... -> Manage*. The following window will appear:

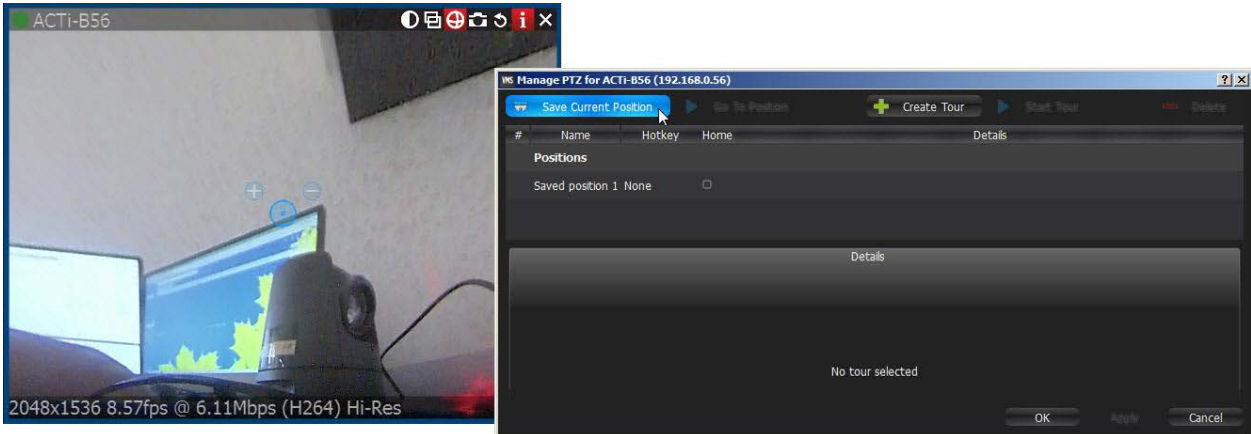


2. Move the form aside, so that the item and its PTZ controls are fully accessible (as shown at the picture above).
3. Make sure the list of positions contains a minimum of two positions.
4. Click *Create Tour*. A new item will appear in the bottom section:

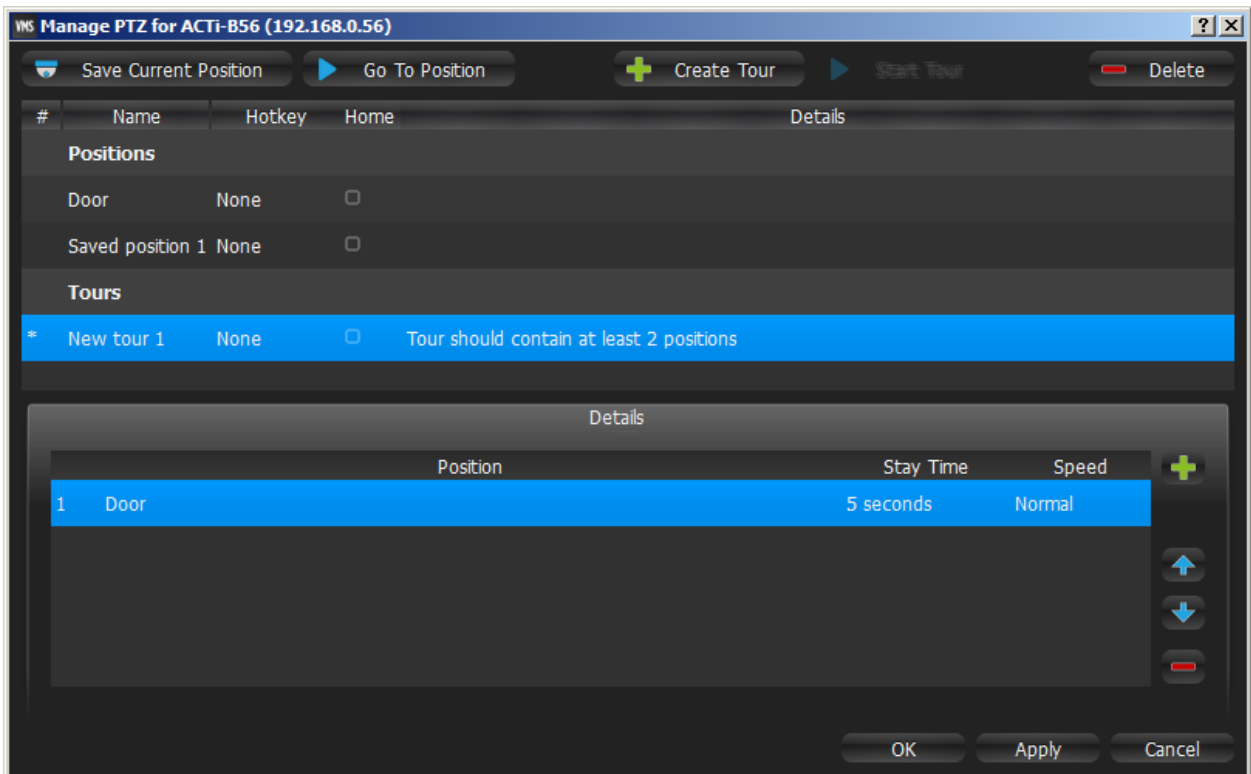


5. Select **PTZ Positions** to include in **Tour**:

- To add **Position** click on "+" button
- To change, click on the desired **Position** and select another one:

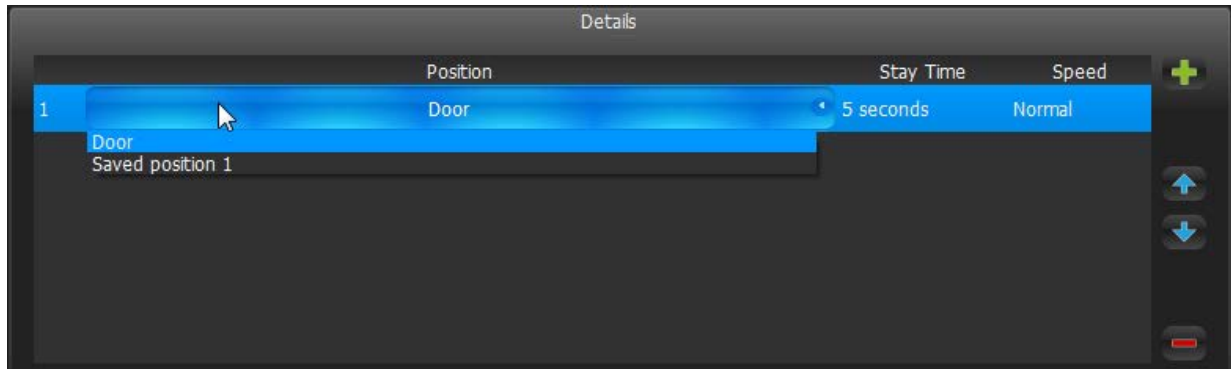

- To change the order of **Positions**, select desired **Position** and use arrows on the right to move it up and down the list.
- To delete **Position** select the desired **Position** and click on "-" button.

 **Note:** the following restrictions are applied to **Tours**:

- **Tour** should contain at least two **Positions**.
- It is not recommended to use the same **Positions** in a row or select the same ones for the first and last **Position**.
- Warning appears if **Tour** has several identical positions.

6. Set *Stay Time* and *Speed* for each **Position**.

7. Test **Tour** by clicking *Start Tour* in the upper table.

8. Rename **Tour** if necessary (in the upper table) or set it as **Home Tour** (see "[Home Positions and Tours for PTZ and Fish-Eye Cameras](#)").

9. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.


Home Positions and Tours for PTZ and Fish-Eye Cameras

Nx Witness allows setting **Home Position** or **Tour** for any **PTZ** or **Fisheye Camera**. **Home Position** or **Tour** will be activated on **Camera** automatically in the following cases:

- If there is no active **PTZ Tour**
- If **PTZ Position** is not changed for **Camera** for 2 minutes.

To set up **Home Position** or **Tour** for **Camera**:

1. Configure the desired **Position** (see "[Saving and Restoring PTZ Positions](#)") or **Tour** (see "[Setting Up PTZ Tours](#)").
2. Open PTZ Positions and Tours management dialog:

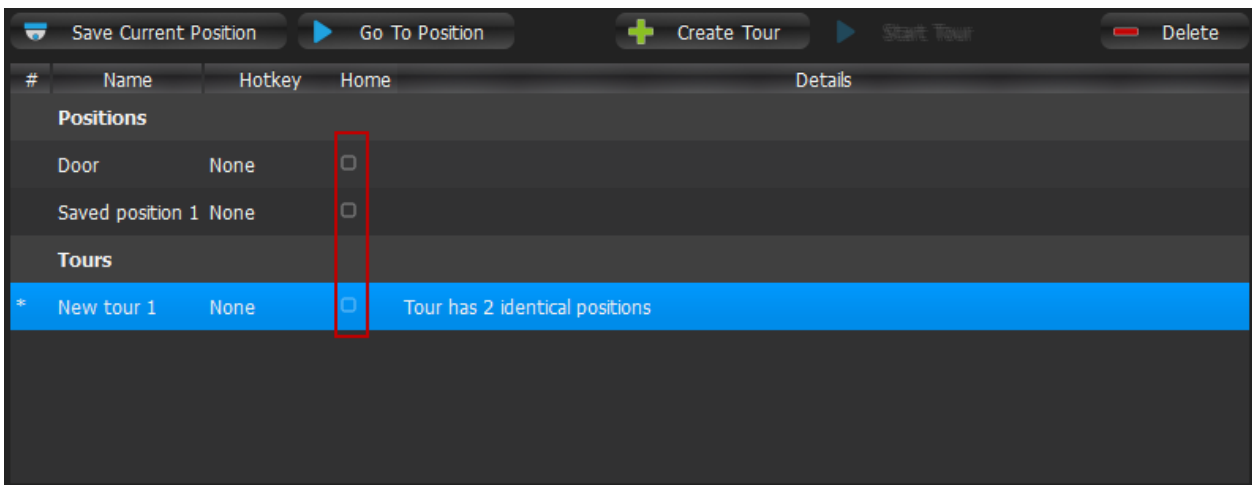

3. Choose the desired **Position** or **Tour** on top and check *Home*.


 **Note:** only one **Position** or **Tour** can be active.

4. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Setting up Recording Schedule

To record **Camera**, **Recording Schedule** must be set up first.

 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** with an appropriate **permission** level.


 **Note:** To record one camera, **License** is required. See "[Obtaining and Activating Nx Witness Licenses \(Admin Only\)](#)". Even if recording is not performed immediately, the **License** will still be considered as **used**.

The recording schedule specifies the following recording parameters:

- **Recording Type:**
 - **Record Always**
 - **Motion Only** – records only when motion occurs. Motion recording may require for the camera to support motion detection.
 - **Motion + Lo-Res Always** – by default, a camera is set to record at low resolution unless motion occurs, at which point it switches recording to high resolution automatically. High resolution recording requires dual streaming (if supported by camera). See "[Dual Stream Recording Specifics \(RADASS\)](#)"

Motion Mask and Motion Sensitivity may need to be configured as well (see "[Setting up Motion Mask and Motion Sensitivity](#)").

- **FPS**
- **Quality**

 **Note:** **FPS** and **Quality** recording settings will affect live stream viewing as well. For example, if **1 FPS** and **Low Quality** are set in the recording schedule, Nx Witness will stream live as per selected settings even if the camera is capable of more. If recording is not set, Nx Witness will stream live at **Maximum FPS** and **Quality**.

Those settings are applied to **Recording Schedule**. See "[Modifying Recording Schedule](#)" for details.

Dual Stream Recording Specifics (RADASS)

Some **Recording Parameters** may need **Motion** to be supported by the **Camera**. **Motion + Low Quality Always** recording requires **Dual-Streaming** to be supported by **Camera**.

If **Dual-Streaming** is supported, the second stream settings are set automatically based on the main recording settings:

- 2 to 7 FPS
- 320p to 480p

Not only is the second stream used for recording, it is also used for **Software Motion Detection** and **bandwidth and CPU saving during playback**. See "[Setting up Motion Mask and Motion Sensitivity](#)" and "[CPU and Bandwidth Saving during Playback \(RADASS\)](#)".

If primary stream is 480p or less, it can be used for **Software Motion Detection** as well.

Modifying Recording Schedule

Nx Witness provides a powerful and flexible schedule for configuring recording parameters.


A specific date and time can be set in the recording schedule as well.

Examples:

- Workdays 8AM-8PM – record Always, 24 FPS, high quality
- Weekends and Workdays 8PM-8AM – record motion only, 10 fps, low quality


The cameras recorded by Servers are marked with a small red circle in [Resource Tree](#):

- – camera in recording mode
- – camera recording is setup, though not recording at the moment (a license is still being used)

 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** that have appropriate **permissions**.

To set up **Recording Schedule**:

1. Select the desired Camera(s) in [Resource Tree](#) (use **SHIFT** or **CTRL** to select several) or on Scene, open [Camera Settings](#) and go to *Recording*:

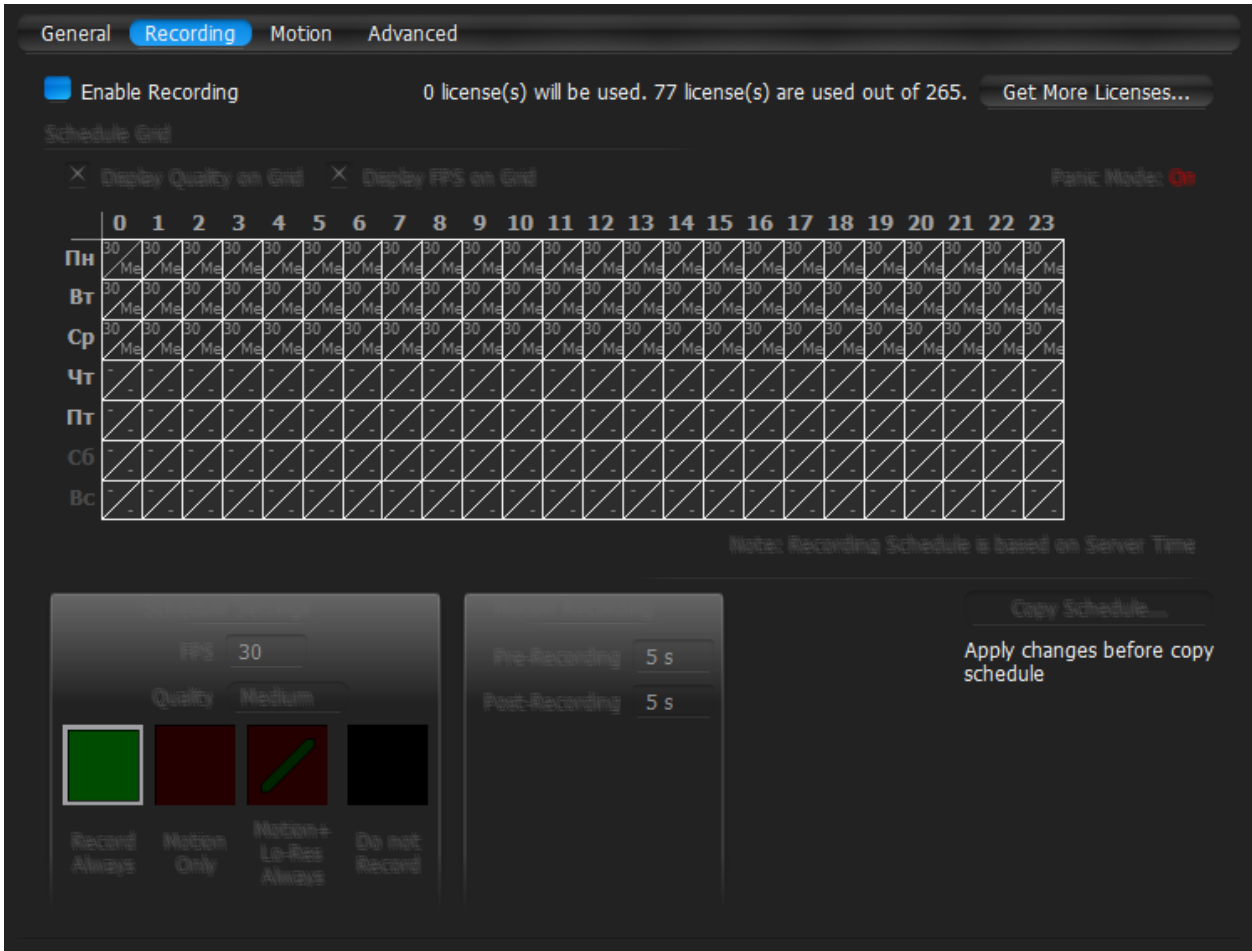

! IMPORTANT. If **Server** and **Client** are in different time zones the schedule displays **Server Time**.


2. Click *Enable Recording*. Check the number of licenses used. If the number is insufficient, click *Get More Licenses* and proceed with activation.

Click on *Display FPS on Grid* and *Display Quality on Grid* to show/or hide FPS and quality in grid cells.

3. Select **Recording Mode**:

- **Record Always**
- **Motion Only** – recording will start if motion occurs. To specify a range for motion recording, use *Record before motion* and *Record after motion* selectors. Motion detection must be supported by the camera (Software or Hardware).
- **Motion + Low Quality Always** – low quality stream is recorded always and is switched to high quality streaming once in case of any motion. To use this recording setting, make sure the camera supports dual-streaming.

If not the following will be displayed:

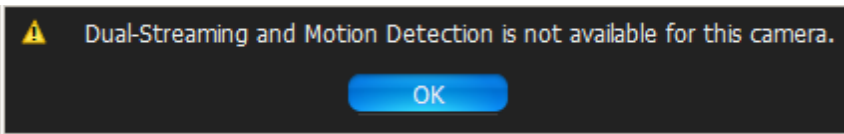

- **Do not Record**

4. Select **Recording Quality**

5. Select **FPS**

! **IMPORTANT.** If making any changes to image parameters for **Camera** is prohibited for Nx Witness, then **FPS** and **Recording Quality** changes will not take effect. See "[Preventing Nx Witness from Changing Camera Streaming Settings \(Admin Only\)](#)" for details.

6. As soon as all the parameters are selected, click on **Schedule Grid**:

- **Click and Drag** to select multiple cells
- Click on **hour** to select an entire column
- Click on **weekday** to select an entire row
- Click **Schedule Grid's** top left corner to select all cells


Note: to select same values, hold **Alt** and click on the cell to choose a recording mode, FPS and values.

7. Repeat to set another recording for different cells

8. If **Motion Recording** is set, it is possible to adjust *Pre-recording* and *Post-Recording* intervals (the time range between the start and end of motion recording).

9. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

In case of insufficient licenses, the following warning will appear:

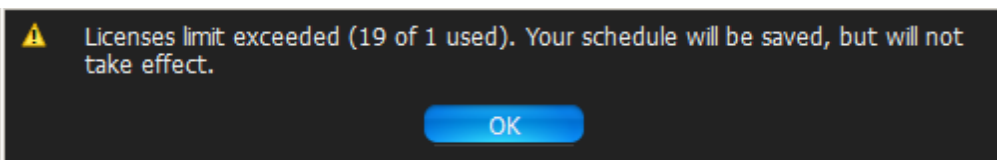

Enable Recording flag will be disabled; however, all schedule settings will be saved.

Example:

- Workdays 8AM-8PM – Record Always, 24 FPS, High
- Workdays 8PM-8AM – Motion + Low Quality Always, 24 FPS, Medium
- Weekends – record motion only, 10 fps, Low

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Lo	24 Lo	24 Lo	24 Me	24 Me	24 Me
Tue	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Lo	24 Lo	24 Lo	24 Me	24 Me	24 Me
Wed	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Lo	24 Lo	24 Lo	24 Me	24 Me	24 Me
Thu	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Lo	24 Lo	24 Lo	24 Me	24 Me	24 Me
Fri	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Me	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Hi	24 Lo	24 Lo	24 Lo	24 Me	24 Me	24 Me
Sat	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo
Sun	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo	10 Lo

Note: Recording Schedule is based on Server Time

! IMPORTANT. Make sure to apply all recording selections to the schedule once selected (recording type, FPS and quality). The following message will appear in case the selection is not applied.

Your recording changes have not been saved. Pick desired Recording Type, FPS, and Quality and mark the changes on the schedule. Press APPLY to save changes.


Retry
Ignore

Copying Recording Schedule between Cameras


If **Recording Schedule** is already set up on **Camera** it may be needed to copy the settings to a different one. For instance, if a new camera is plugged in it is much more convenient than set up a schedule separately.

To copy Recording Schedule:

1. Open **Camera** the schedule should be copied from, go to [Camera Settings](#) -> *Recording*:
2. Click on the *Copy Schedule* button. The following form will be opened:

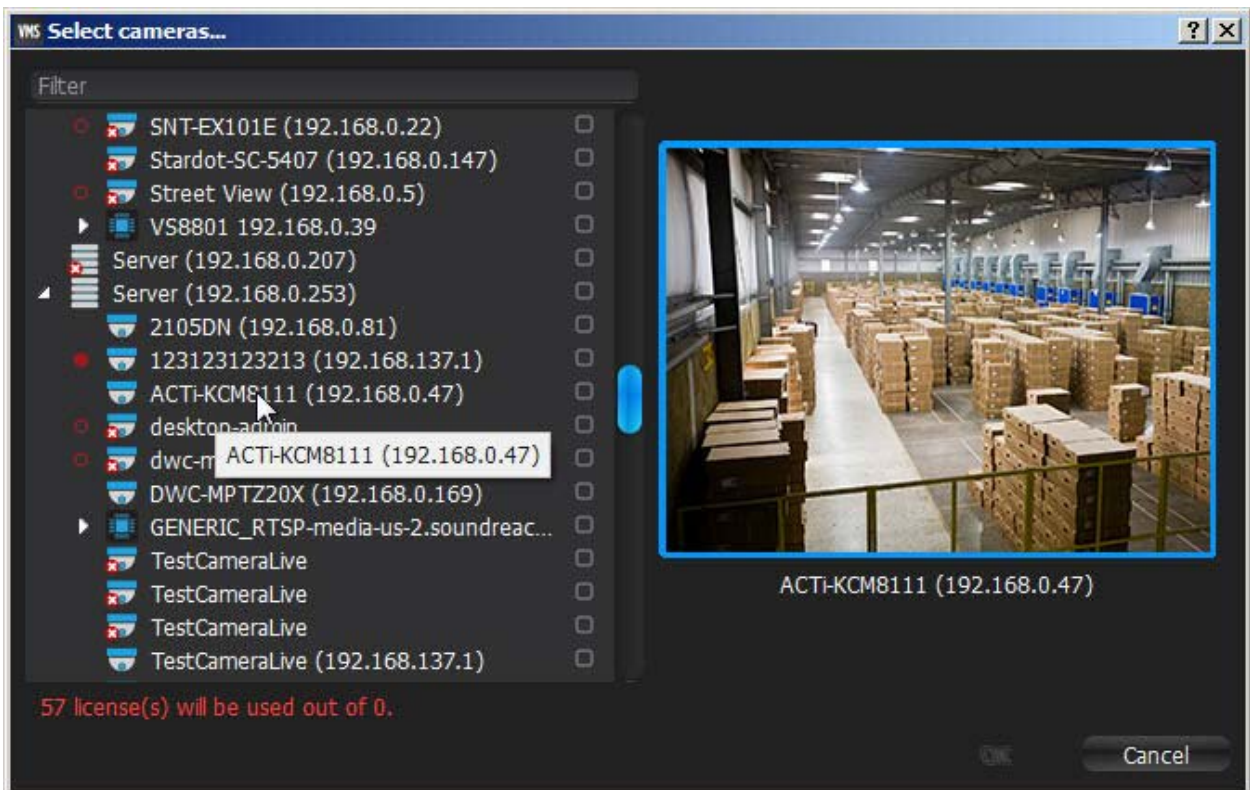

3. Check desired **Cameras** the schedule should be copied to. To select all **Cameras** on specific **Server** check it. To filter search use the *Filter* box. Filter criteria is the same as search (see "[Search](#)"). If hover with a mouse cursor on **Camera**, the actual picture from this **Camera** will be displayed on the right.

 **Note:** additional **Licenses** may be needed. See "[Obtaining and Activating Nx Witness Licenses](#)" for details.

4. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Configuring Maximum and Minimum Recording Time for Camera

Some governmental regulations require the footage to be stored for a specific amount of time. Nx Witness supports the ability to set up maximum and minimum recording amount.

! IMPORTANT. Be careful with **minimum amount**. These settings do not guarantee this to be kept, they just set the **priority**. So, in case of insufficient space Nx Witness will delete the records on cameras that do not have minimum amount of footage. However if there is no space to store such amount of data, **no other cameras will be recorded**.

To specify minimum and maximum amounts:

1. Select the desired Camera(s) in [Resource Tree](#) (use **SHIFT** or **CTRL** to select several) or on Scene, open [Camera Settings](#) and go to *Recording*.
2. Set *Min. Days* and *Max. Days*.

Setting up Motion Mask and Motion Sensitivity

In order to detect motion more properly and accurately, Nx Witness provides a powerful and flexible **Motion Detection** configuration. For example, if a camera is pointed at a parking lot, motion mask can be set on all the surrounding areas that are not targeted for recording. In this case, any motion appearing in the areas surrounding the main target area, will not trigger motion detection and recording.


! IMPORTANT. This particular feature in Nx Witness works only if the selected camera supports **Motion Detection**.

The following **Motion Detection** types are supported:

- **Hardware Motion Detection** – implemented on **Cameras** directly. In this case only motion mask can be configured. To configure additional parameters it may be necessary to go to **Camera Settings web page** (see "[Configuring Proprietary Camera Parameters](#)"). For **Arecont Vision** this mode is set **automatically**.
- **Software Motion Detection** is performed on **Server**. It consumes more resources, though it provides better and more flexible motion detection. In this case, it is possible to set up unlimited number of motion regions and adjust its sensitivity. **Software Motion Detection** requires **Dual-Streaming** supported by **Camera**. If supported, **Software Motion Detection** is set **automatically** (excluding **Arecont Vision** cameras). If primary stream is 480p or less, it can be used for **Software Motion Detection** as well.

To set up **Motion Detection**:

1. Open [Camera Settings](#) and go to *Motion*:

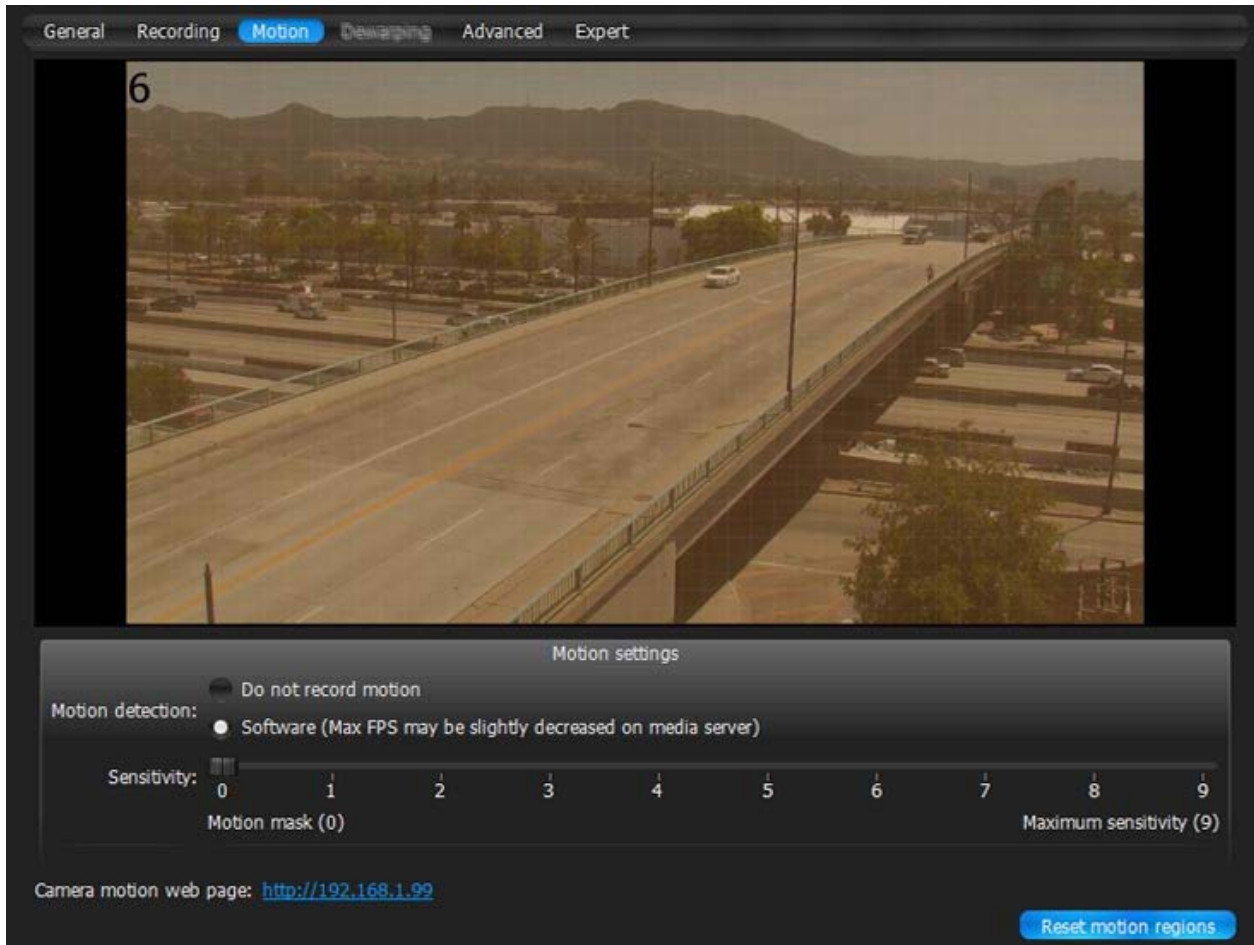

If red zones appear on the grid during motion, **Motion Detection** is supported. Red cells indicate the level of motion (the higher the motion level, the brighter the cells).


2. Select the type of motion detection (**Hardware** or **Software**). If none are active, the camera does not support Motion Detection at all.
3. Select *Sensitivity* on the slider. 0 is motion mask (minimal sensitivity, motion will not be detected on the selected region); 9 is the highest sensitivity.

4. Select the desired regions the sensitivity will be applied to:

- **Click and Drag** to select a single region
- **Ctrl + Click and Drag** to add another region
- **Click** on a region to fill it with desired sensitivity

To set **Motion Mask** just **Click and Drag**. There is no need to adjust *Motion Sensitivity*.

5. Repeat for each desired sensitivity. Use *Reset Motion Regions* to start over.

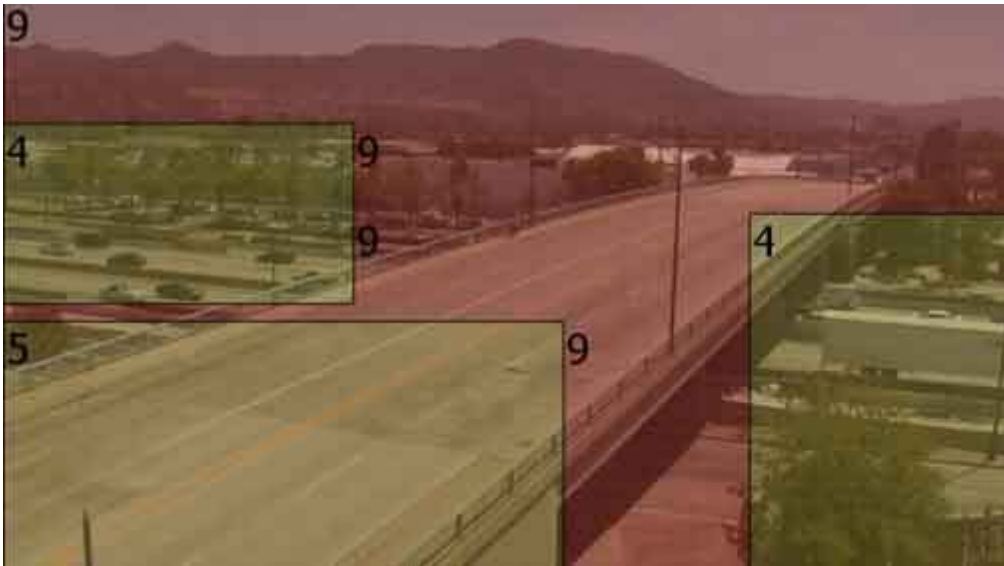

The above picture illustrates the following:

- the area marked in grey will not capture motion (**Motion Mask**)
- the green area will capture motion with very low sensitivity
- top right and bottom left corners will capture motion with standard sensitivity
- for other regions, the sensitivity will be high.

6. Click *Apply* or *OK* when finished. To discard any changes, click *Cancel*.

It is possible to set up motion directly from camera's web page. For this purpose, use *Camera Motion Web Page* link on the *Motion* tab.

Configuring Proprietary Camera Parameters


Nx Witness allows configuring basic image settings inside the software. These settings are available for **Onvif-compliant cameras only**.

Additionally, Nx Witness allows displaying native camera web page inside the software (approved models only).


 **Note:** It is possible to configure **Cameras** for **Administrators** and for **Viewers** that have the appropriate **permissions**.

To go to proprietary camera settings:

1. Open [Camera settings](#) and select *Advanced*.
2. Configure desired **Camera Parameters**:

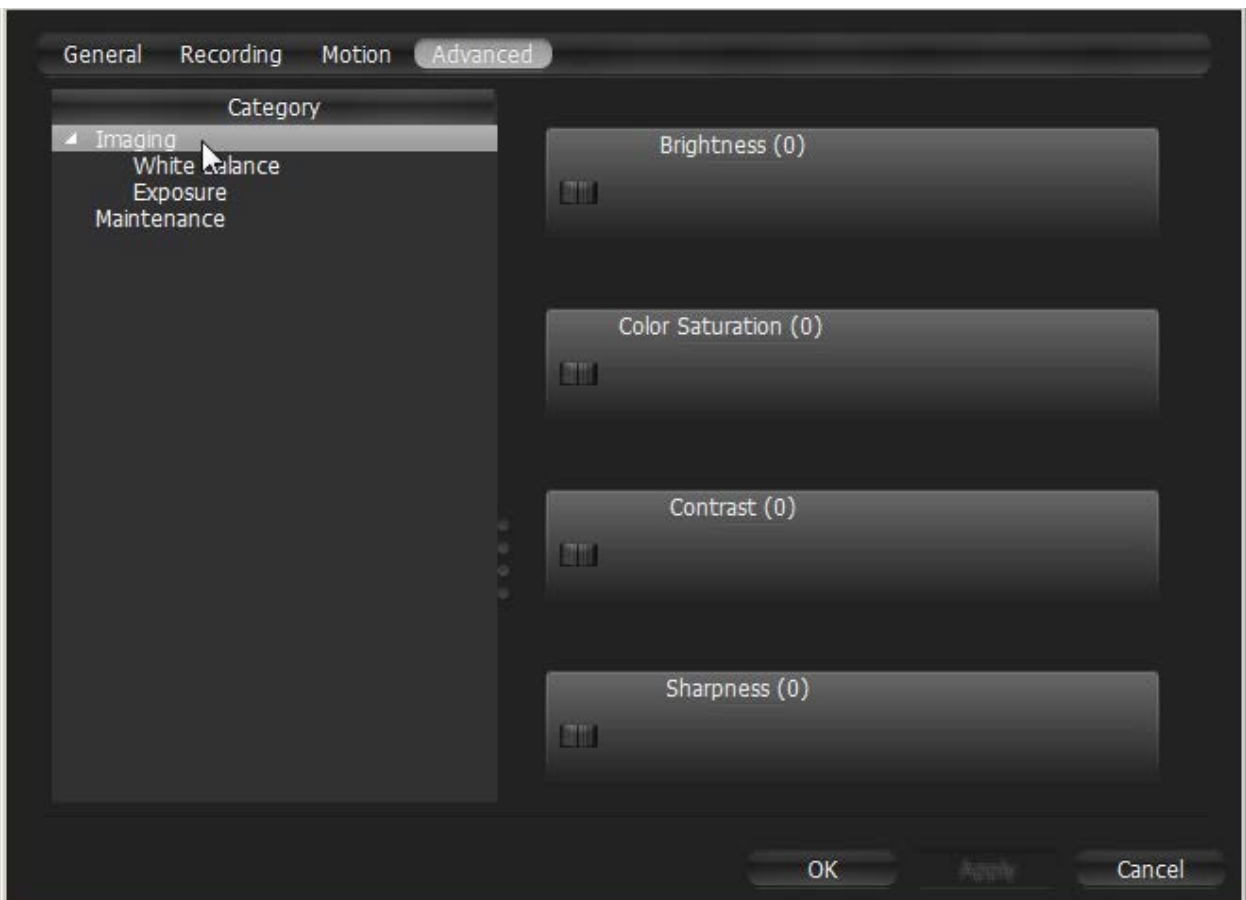

If Nx Witness supports the specific **Camera**, it displays **Camera Web Page** inside this tab.

 **Note:** If the list is empty, Camera does not support configuring (not Onvif-Compliant).

All settings are applied **immediately**. Best practice is to leave a video [Item](#) on the **Scene** while configuring its parameters.

Other proprietary camera parameters such as Authorization, Network Settings etc. can be configured directly from camera's web page.

1. Open [Camera settings](#) and select *General*.
2. Enter **Authentication Parameters** if the camera requires authentication (Admin only).
3. Click on *Web Page*. The browser will open camera's web page.


Web page may be inaccessible because it can be located on a different network. To check camera accessibility, press the *Ping* button prior to opening the web page.

Additionally, the following can also be performed:

- [Resetting Camera](#).


Resetting Camera

Nx Witness allows for cameras to be reset to factory defaults. These settings are available for **Onvif-compliant cameras only**.


 **Note:** It is possible to configure **Cameras** for **Administrators** and **Viewers** with an appropriate **permission** level.

To go to proprietary camera settings:

1. Open [Camera settings](#) and select *Advanced*.
2. Go to *Maintenance*.

 **Note:** If the list is empty, Camera does not support configuring (not Onvif-Compliant).

3. Choose one of the following:
 - *System Reboot* – reboot **Camera** and save settings
 - *Soft System Factory Default* – reboot **Camera** and restore all settings related to the image
 - *Hard System Factory Default* – reboot **Camera** and restore all settings (Network, Authorization, etc).

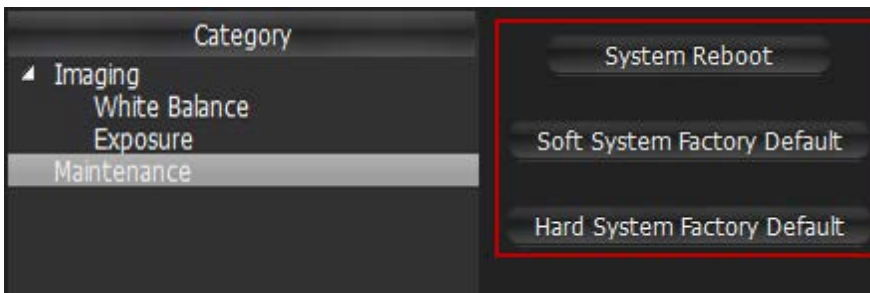

The reboot is performed instantly once selected.

It is also possible to reboot **Camera** from its **Web Page**. See "[Configuring Proprietary Camera Parameters](#)".

Adjusting Secondary Stream Quality

Nx Witness's architecture provides significant CPU and network bandwidth savings by acquiring multiple streams from a single camera: **High Resolution** (regular) and **Low Resolution** (approximately x10 less bandwidth). The second stream is always decoded by Server and is used for the following:


- Software Motion Detection
- [CPU and Bandwidth Saving during Playback \(RADASS\)](#)

The quality of the second stream is set automatically, however, it is possible for **User** to adjust the quality of the stream.

! IMPORTANT. Higher quality of the second stream provides for a much better look and feel (especially on larger monitors), but can significantly increase CPU load on **Server** . It is not recommended to change these settings.

To adjust the quality of the second stream:

1. Open [Camera Settings](#) and go to *Expert*.
2. Check *I have read the manual and understand the risks*.
3. Adjust *Secondary stream quality*.

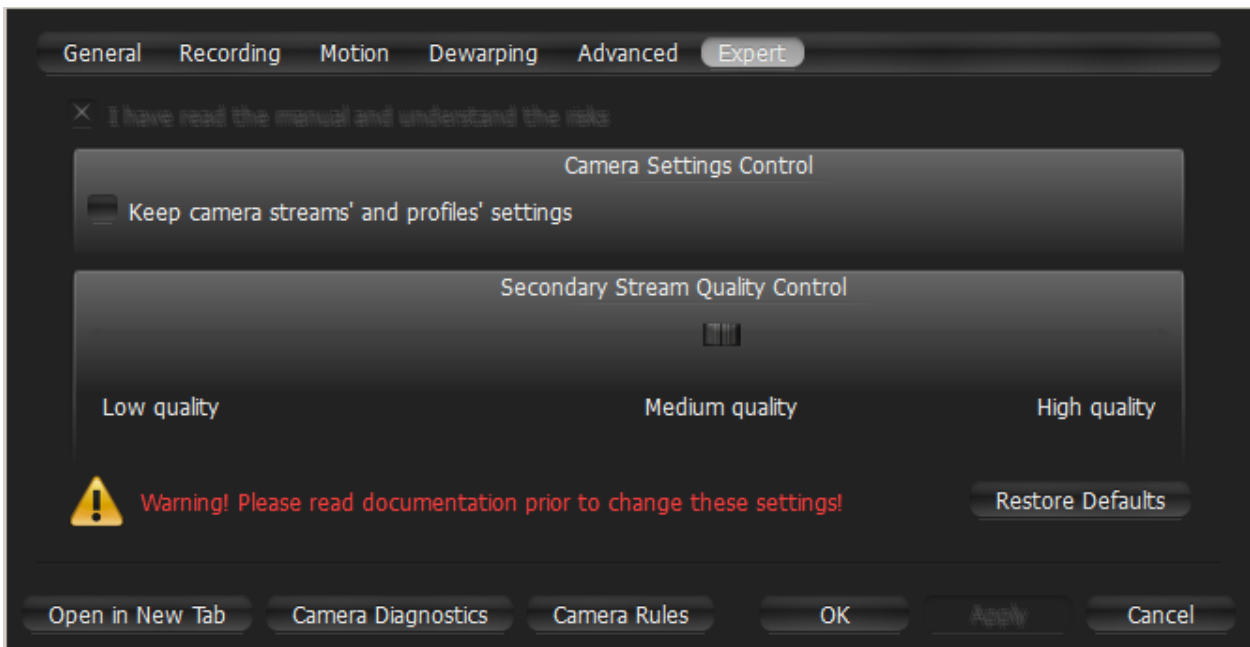

4. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

 **Note:** If **Camera** does not support dual-streaming, the above settings are unavailable.

Disabling Recording of Primary/Secondary Stream

For some reasons it may be necessary to disable recording of primary or secondary streams. For instance:

- **Primary** – to save space. Instead it is recommended to set "**Motion + LQ**" recording type
- **Secondary** – if secondary stream's bitrate is too high. In this case Nx Witness server will still do software motion detection (by decoding a secondary stream for this purpose), but won't record it.

To disable recording of primary or secondary streams

1. Open [Camera Settings](#) and go to *Expert*.
2. Check *I have read the manual and understand the risks*.
3. Tick *Do not archive primary stream* or *Do not archive primary stream*.

Setting Up Camera Transport Protocol

Some cameras stream data in a different way. Usually 2 protocols are used for streaming: **UDP** (faster, but less reliable) and **TCP** (more reliable, but slower). Nx Witness tries to determine the best protocol for the camera. However, sometimes camera may have issues when streaming via the chosen protocol. In this case setting the protocol manually may help.

To do so:

1. Open [Camera Settings](#) and go to *Expert*.
2. Check *I have read the manual and understand the risks*.
3. Choose *RTP Transport* and click *OK* or *Apply*.
4. Restart the camera.
5. If the changes do not help, choose a different protocol and restart once more.

Preventing Nx Witness from Changing Camera Streaming Settings (Admin Only)


Once **Camera** is discovered, Nx Witness attempts to configure the following settings on **Camera**: the best possible image quality for the main video stream (best possible resolution and FPS) and optimal quality for the secondary stream.

In some cases it may be necessary to set up custom stream settings on Cameras. Nx Witness allows this as well.

! IMPORTANT. In this case Nx Witness can record Camera with specified settings only. It will not be possible to set up FPS and Quality when configuring Recording Schedule (see "[Modifying Recording Schedule](#)").

To disable automatic adjustment for one or multiple **Cameras**:


1. Stop recording of the desired Cameras and close them.
2. For each **Camera** go to its **Web Page** and set all desired image settings.
3. Select one or multiple **Cameras**, then open [Camera Settings](#) and go to *Expert*.
4. Check *I have read the manual and understand the risks*.
5. Check *Keep camera streams' and profiles' settings*.

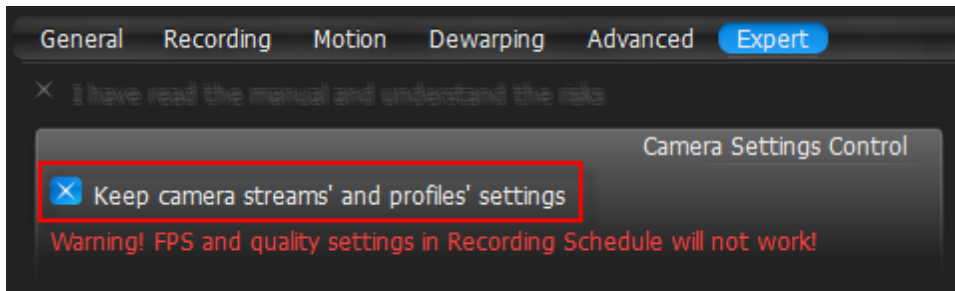

6. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

To disable automatic adjustment for all **Cameras**:

1. Disable recording for all cameras and close them (if opened for viewing).
2. For each **Camera** go to its **Web Page** and set desired image settings.
3. Open [Main Menu](#) and go to [System Administration](#) → *General* tab.
4. Remove *Enable automatic camera settings optimization* flag.

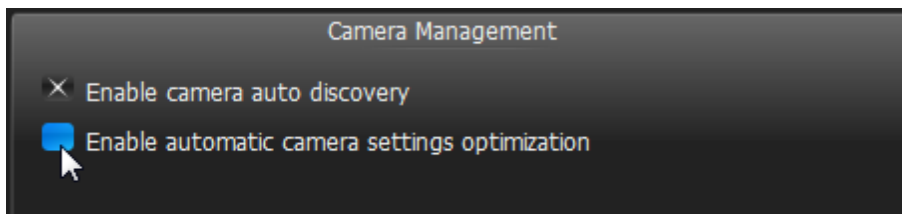

5. Click *OK* when done or *Cancel* to discard changes.

Setting Same Parameters for Multiple Cameras

In order to simplify the configuration process, Nx Witness enables users to apply same parameters to more than one camera at a time.


The following can be performed as a batch:

- **Authentication** setup
- **Schedule** configuration


To set the same parameters for multiple **Cameras**:

1. Use [Multi-Selection](#) to select desired cameras:
 - In [Resource Tree](#), hold **Ctrl** or **Shift** and **Click**
 - On **Scene** – use **Ctrl** and **Click**
2. Open [Context Menu](#) and go to *Camera Settings*.


From [Resource Tree](#):

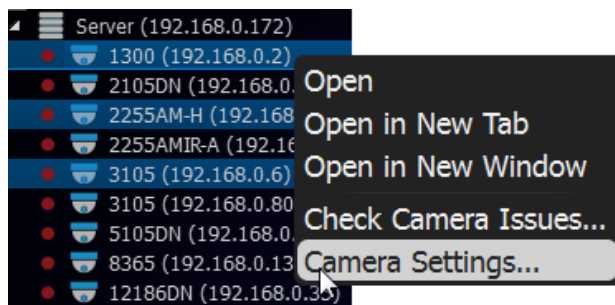

From **Scene**:

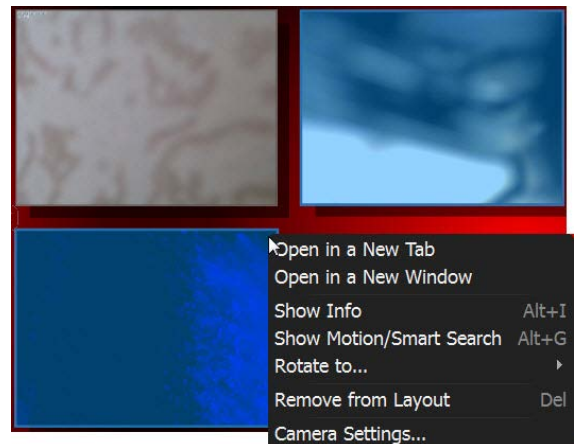


- If the selected cameras share the same **Authentication Credentials**, they will be displayed.
- If the selected cameras share the same **Recording Settings**, they will be displayed.
- If the selected cameras have different *Enable recording* field values, the field will be displayed as follows:

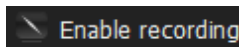

3. Set the desired parameters and click Apply.

- If needed, a user can add a camera to the selection by holding the **Ctrl** button and clicking on the desired camera in [Resource Tree](#).
- To set up another camera(s), select the desired camera in [Resource Tree](#). It is not necessary to close the settings dialog.
- If the changes are not applied, the following warning message will appear:

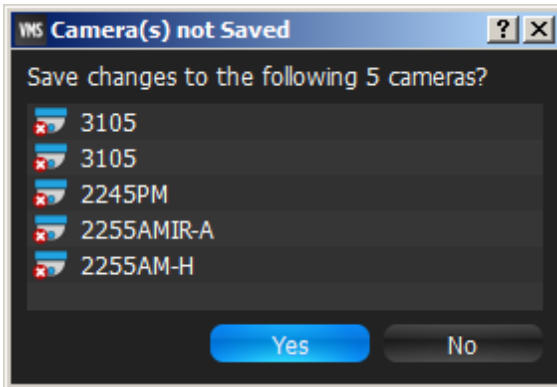

4. When finished, press *OK* to apply or *Cancel* to discard settings.

Swapping Cameras between Servers (Admin Only)

If too many cameras are used on the network, it may be helpful to set up an additional server for load balancing and redundancy purposes. If several servers are set up on the same network, it is possible to perform **manual load-balancing**.

This is how camera swapping works:

1. Step 1: **Server** is connected to **Server** and starts discovering **Cameras**. As soon as **Cameras** are discovered, they will appear in the **Client**.
2. Step 2: **Server** is connected to **Server** and starts discovering **Cameras**. As soon **Cameras** are discovered, their **MAC Addresses** are checked. If **Camera** is registered on **Server**, it will not appear in the **Client** and a “**Disabled**” flag is set in the database.
3. Once **Camera** is moved to another **Server**, it becomes **Enabled** in the second Server and automatically disables itself in the first one.

! **IMPORTANT**. When moving **Camera** from one Server to another, recording will be restarted automatically (with predefined parameters). Also, **Archive** is seamlessly **combined** from all servers.

To move camera(s) from one server to another:


1. Hold **Ctrl** or **Shift** to select the desired cameras in [Resource Tree](#)
2. **Drag and drop** the selected cameras to the desired server

! **IMPORTANT**. In order to be able to see video from Camera on a new Server, the cameras must be discovered by this server. Otherwise it will be displayed offline.

Deleting Cameras (Admin Only)

To delete **Camera(s)**:

1. Expand the **Server** hosting the desired server in [Resource Tree](#).
2. Find and select **Camera**.
3. **Right-Click** for [Context Menu](#) and choose *Delete* (or the **Del** button on a keyboard).
4. Click **Yes** to confirm.

 **Note:** If **Camera** is online it will be auto-discovered again in some time (this doesn't apply to cameras that have been added manually). To avoid this either unplug the camera or disable [automatic camera discovery](#).

If **Camera** is back online, it will start working **immediately**. Recorded archive will be available as well; however, a user will need to reconfigure **Camera** as its settings have been erased. To prevent this from happening, **User** must disable automatic discovery. See "[Disabling Automatic Discovery \(Admin Only\)](#)" for details.

Configuring Events and Actions (Admin Only)

Nx Witness provides powerful and flexible event bus than can be used for simple and intuitive programming of any algorithm.

Algorithms are a set of **Rules**. Each **Rule** is a combination of **Event-Action**. As soon as **Event** is fired up, Nx Witness triggers the appropriate **Action**.

The following events and actions are supported:

Events:

- [Motion on Camera](#)
- [Camera Disconnection/Malfunction](#)
- [Storage Failure](#)
- [Network Issue](#)
- [Camera IP Conflict](#)
- [Input Signal on Camera](#)
- [Server Failure](#)
- [Server s Conflict](#)
- [Server Connection Lost](#)
- [Licenses are Not Configured](#)
- [E-mail is not Set for Users](#)
- [Storages are not Configured.](#)

Actions:

- [Notifications](#)
- [Visual Event Indication](#)
- [Mail Notifications](#)
- [Start Recording on Camera](#)
- [Start Panic Recording](#)
- [Trigger Camera Output](#)
- [Play Sound](#)
- [Speak.](#)

Every **Event** that has occurred is automatically saved in system's **Event Log**. If no **Rules** are active, only system issues will be saved. See "[Viewing Events Log](#)" for details.


! **IMPORTANT.** Some default **Rules** are already configured. See "[Default Rules](#)" for details. It is possible to reset all **Rules** configurations to default settings. To reset, click on *Reset Default Rules* and *Apply* or *OK*. All previously configured Rules will be discarded.

To configure **Rules**:

1. Do one of the following:

- To configure **Global Rules**: open [Main Menu](#) and go to *Alarm/Event Rules* (or press **CTRL + E**). It is possible to configure Rules for specific Camera(s). To proceed, type the desired **Camera** name, IP or MAC address into the *Filter* box. Only **Rules** that are applied to a corresponding **Camera** will be displayed.
- To configure **Rules for a single Camera**: open Camera's [Context Menu](#) and select *Camera Rules* or open [Camera Settings](#), then click *Camera Rules...*

The following dialog will open:

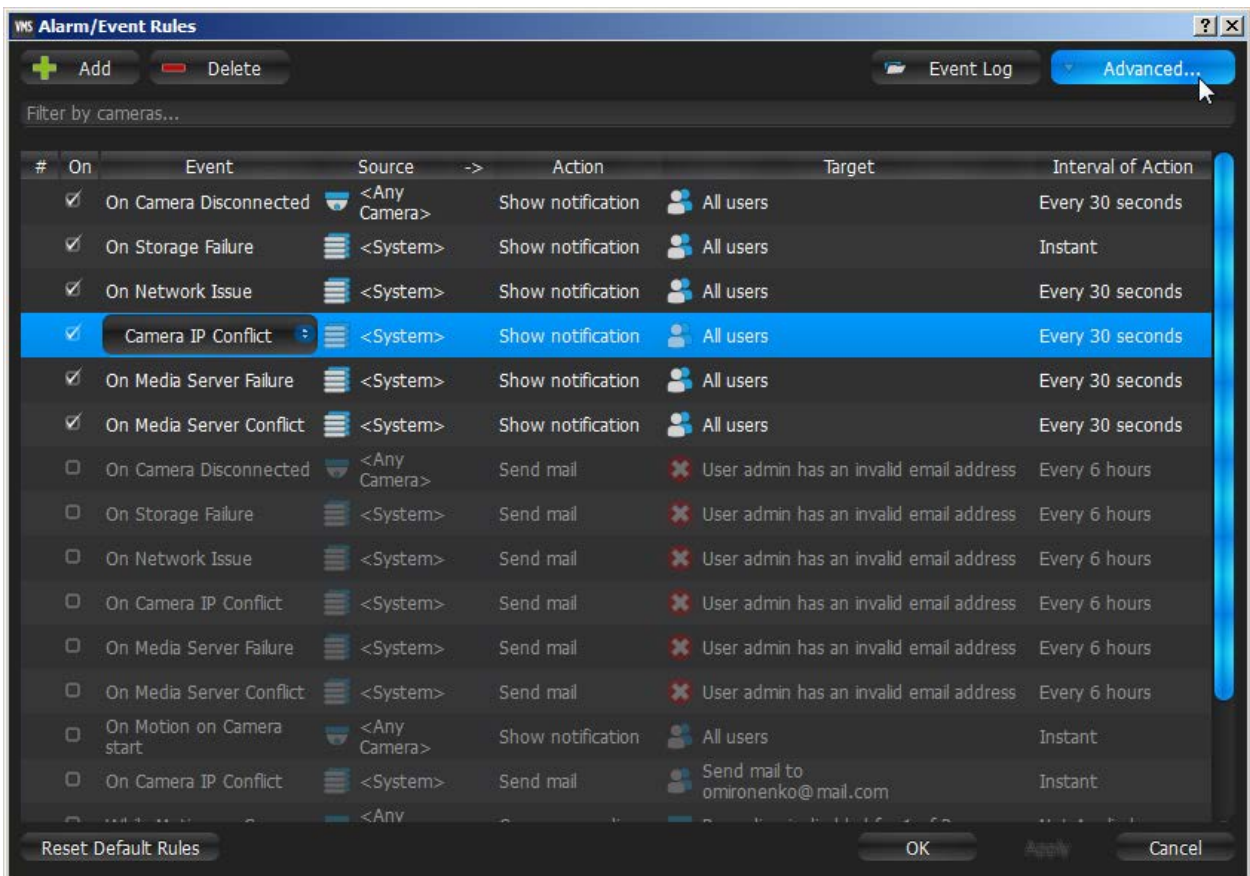

2. To add a new **Rule**, click *Add*. To delete an existing-one, click *Delete*.

3. Once added, **Rule** should be configured.

- Select **Event** on the left-hand side that needs to be monitored. See "[Tracked Events](#)" for more information
- Select **Action** on the right-hand side that needs to be performed once **Event** occurs. Refer to "[Actions](#)" for details
- Specify basic parameters for **Event** and **Action**. Click on *Source* or *Target* column in the **Rule** row and choose the desired value.

! IMPORTANT. If some fields are missing or incorrect, **Rule** is considered invalid. In this case, it will turn red:




- Set *Aggregation* period. Once set, all **Actions** will be executed once per the specified period. If not, **Actions** will be executed every time **Events** occur. Applies to [Notifications](#), [Mail Notifications](#), [Play Sound](#), [Speak](#).
- If any additional configuration is needed, click *Advanced...* The advanced settings will be displayed on the bottom. Those settings differ from each other depending on **Events/Actions** that are being configured. See this chapter for more information on a specific **Event/Action**.
- Add *Comments* for **Rule** if needed.

4. Set or clear the flag (on the left-hand side of each **Rule**) to enable or disable it.

5. As soon as all configurations are done, click *Apply* to accept changes or *Cancel* to discard. Click *OK* to apply changes and close the form.

! IMPORTANT. If any **Rule** is considered invalid, the warning displayed below will appear. If apply the changes, incorrect **Rules** will be disabled.

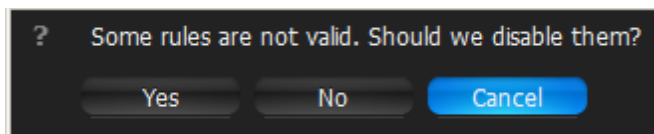

Tracked Events

Nx Witness can react as soon as a particular **Event** occurs.

Every tracked event may have its own parameters. Refer to the particular **Event** description for more information:

- [Motion on Camera](#)
- [Camera Disconnection/Malfunction](#)
- [Storage Failure](#)
- [Network Issue](#)
- [Camera IP Conflict](#)
- [Input Signal on Camera](#)
- [Server Failure](#)
- [Server s Conflict](#)
- [Server Connection Lost](#)
- [Licenses are not Configured](#)
- [E-mail is not Set for Users](#)
- [E-Mail Server is not Configured](#)
- [Storages are not Configured](#)
- [Server Started.](#)

As soon as Event occurs, the **Action** can be performed. See "[Actions](#)".

Additionally, **Events** can be tracked based on the schedule. For instance, [Motion](#) can be tracked only on weekends and [Input Signal](#) – at 8PM-8AM. See "[Setting up Schedule for Tracking Events](#)" for details.


Finally, all **Events** are recorded in **Log**. See "[Viewing Events Log](#)" and "[Write to Log](#)".

Setting up Schedule for Tracking Events

Events can be tracked based on the schedule. For instance, [Motion](#) can be tracked only on weekends and [Input Signal](#) – at 8PM-8AM.

The schedule can be configured as advanced parameters for the desired **Event**:

1. Open **Event** Advanced Parameters by clicking on *Advanced* on the *Alarm/Event Rules* form. The advanced settings will be displayed on the bottom.
2. Click on *Schedule...* The following form will be displayed:

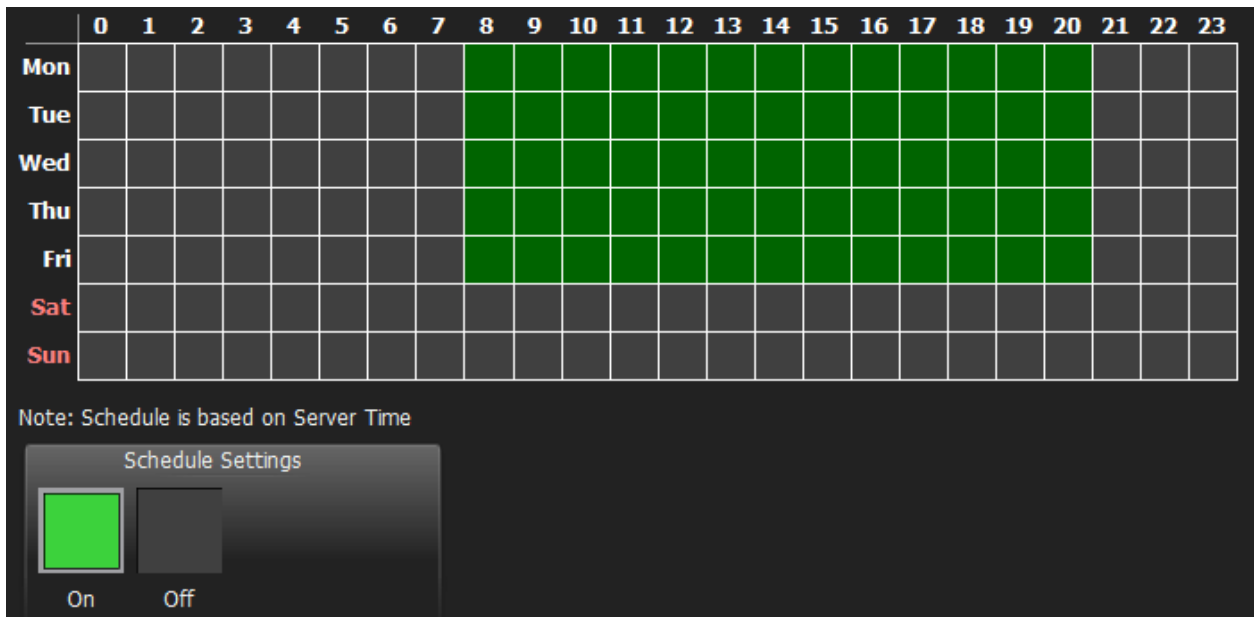

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon									On	On	On	On	On	On	On	On	On	On	On	On	On	Off	Off	Off
Tue									On	On	On	On	On	On	On	On	On	On	On	On	On	Off	Off	Off
Wed									On	On	On	On	On	On	On	On	On	On	On	On	On	Off	Off	Off
Thu									On	On	On	On	On	On	On	On	On	On	On	On	On	Off	Off	Off
Fri									On	On	On	On	On	On	On	On	On	On	On	On	On	Off	Off	Off
Sat									Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
Sun									Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	

Note: Schedule is based on Server Time

Schedule Settings

On
 Off

3. Select *On* or *Off* to enable/disable monitoring in particular cells.
4. Click on **Schedule Grid**:
 - **Click and Drag** to select multiple cells
 - Click on **hour** to select an entire column
 - Click on **weekday** to select an entire row
 - Click **Schedule Grid's** top left corner to select all cells

The above example shows that the event is tracked on workdays (Sun-Fri) since 8AM till 8PM.

By default, events are always tracked.


Motion on Camera

Occurs if motion is detected on **Camera(s)**.

Basic Parameters

Camera(s) motion is detected on. To specify:

1. Click on *Any Camera* at the desired row on the Alarm/Event Rules form. The following form will appear:

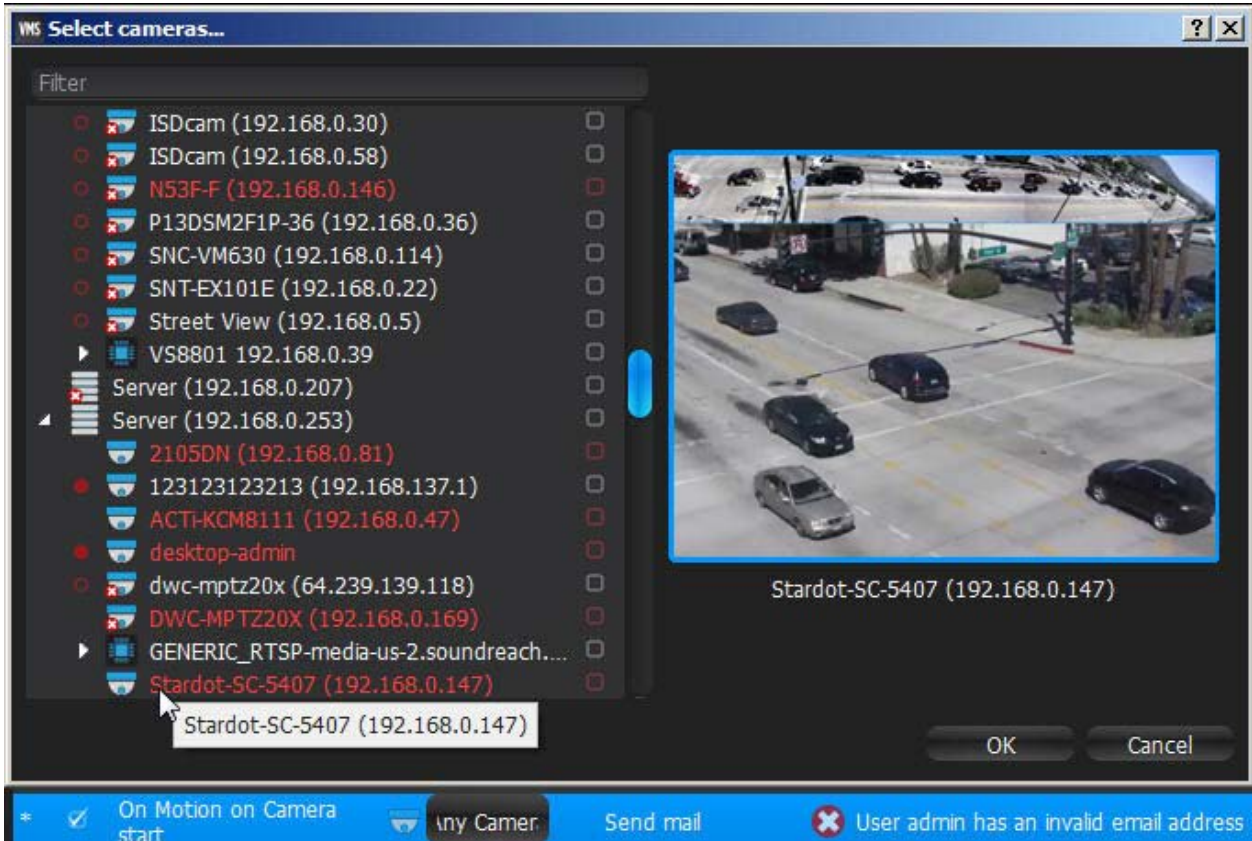

2. Check the cameras to detect motion, then click *OK* (*Cancel* will discard changes).

To select all **Cameras** on a specific **Server**, set the flag on it. To filter search, use the *Filter* box. Filter criterias are the same as search (see "[Search](#)"). It is possible to **Drag'n'Drop** the selected **Cameras** from [Resource Tree](#) onto the **Event's** advanced settings form.

! IMPORTANT. To detect motion, recording must be **enabled** on **Camera**. Refer to "[Modifying Recording Schedule](#)" for information on how to enable recording. If the selected **Camera** is not being recorded, then the corresponding message will be displayed (see above).

If cameras are not specified, motion will be detected on all the cameras that support it.

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Starts/Stops. Available only for instant actions ([Send Mail](#), [Show Notification](#), [Camera Output](#)). If no motion occurs for 3 seconds, the current motion **Event** is considered stopped. When motion occurs again, a new motion **Event** is generated.

May result in

[Camera Recording](#).

[Panic Recording](#).

These actions are performed while motion is taking place on at least one camera out of the selected.

[Send Mail](#).

[Show Notification](#).

[Camera Output](#).

These actions will be performed if motion is detected on at least one camera out of the selected.

Why Event may work incorrectly

Recording is disabled for **Camera(s)** that are being monitored. Refer to "[Modifying Recording Schedule](#)" for information on how to enable recording for **Camera**.

Motion Mask is not set properly. See "[Setting up Motion Mask and Motion Sensitivity](#)".

Too many **Cameras** are monitored and too many **Events** occur.


Cameras that are monitored are offline.

Action is not configured properly. See the **Action**'s description for details.

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Camera Disconnection/Malfunction

Occurs if **Camera(s)** is/are disconnected for whatever reason (network, **Camera** malfunction etc.). **Camera** is considered disconnected if no data is received for 10 seconds. Once data is received from **Camera**, the status is automatically changed back to Online.

If **Camera** is experiencing network issues over a minute, then  is appear in [Resource Tree](#).


Additional **Events** may occur as well and may help to investigate the issue:

- [Network Issue](#). This means that network is unable to transfer data between **Camera** and **Server** , which may be the reason why a camera goes offline.
- [Server Failure](#). If **Server** is down, all hosted **Cameras** drop offline.
- [Camera IP Conflict](#). If another **Camera** with the same IP enters the network, one of these two **Cameras** will go offline.
- [Server s Conflict](#). If a new **Server** is connected to another **Server** on the same network and pulls data from the same **Cameras**, then some **Cameras** may drop offline because they may not provide several streams simultaneously.

Basic Parameters

Camera(s). To specify:

1. Click on *Any Camera* at the desired row on the Alarm/Event Rules form. The following form will appear:

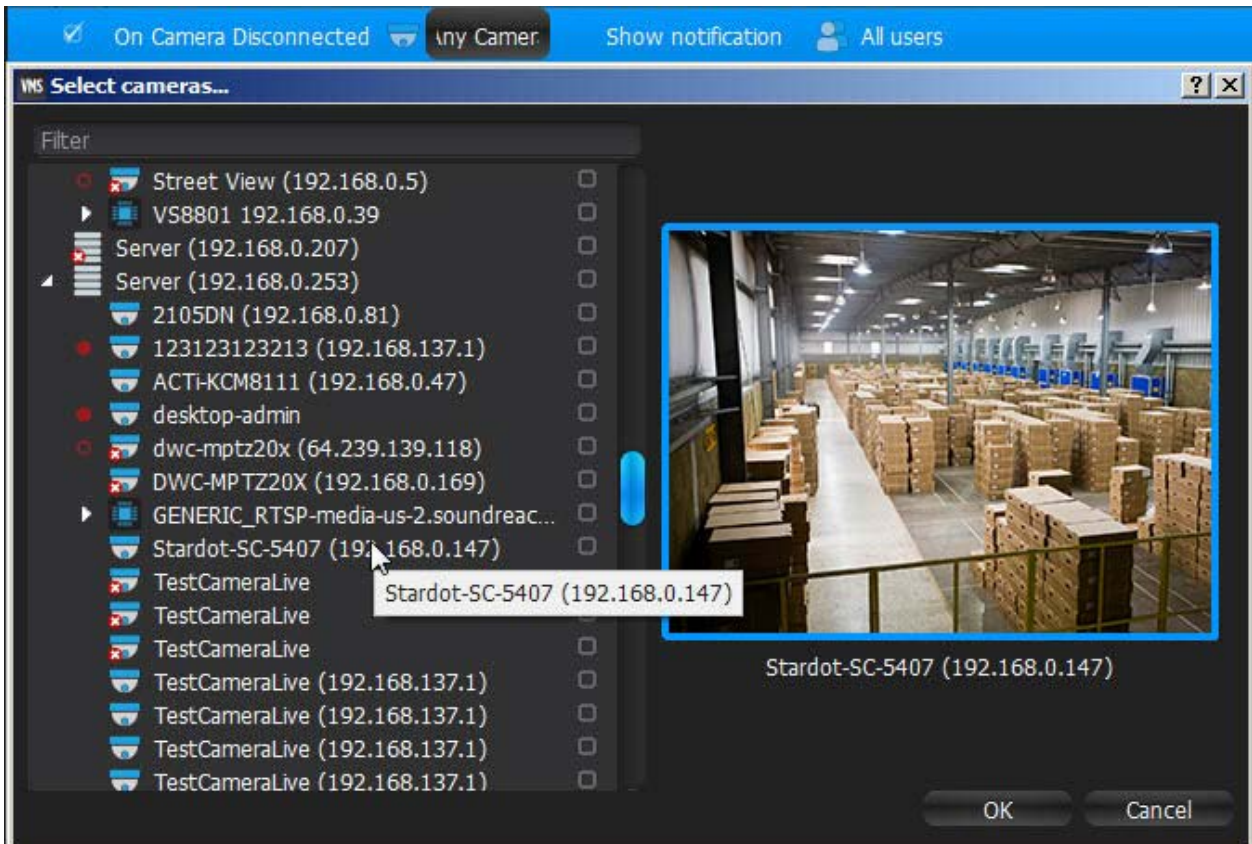

2. Check the cameras to track, then click *OK* (*Cancel* will discard changes).

To select all **Cameras** on a specific **Server**, set the flag on it. To filter search, use the *Filter* box. Filter criteria are the same as search (see "[Search](#)"). It is possible to **Drag'n'Drop** the selected **Cameras** from [Resource Tree](#) onto the **Event's** advanced settings form.

If **Cameras** are not specified, all **Cameras** will be monitored.

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

May result in

[Send Mail](#).

[Show Notification](#).

[Camera Output](#).

Why Event may work incorrectly

Too many **Cameras** are monitored and too many **Events** occur.

Cameras being monitored are offline.

Action is not configured properly. See the **Action's** description for details.

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Storage Failure

Occurs if **Server** is unable to write data on one or more **Storages**. This may be caused by the following:

- **Hard disk malfunction.**
- **Insufficient rights.** The permission to write on disk or recorded folder may be restricted by the computer Administrator.
- **Hard disk is too slow:** too many cameras are recorded and hard disk cannot record on such speed. It may be useful to add another hard disk drive.
- **Disk is full.** By default, **Server** writes data to disk in a circular pattern: as soon as free disk space falls below 5 Gb, oldest data will erase automatically. However, if the disk is full by any foreign data and free space is less than 5 Gb, **Server** writes data on disk and erases it immediately. In this particular case, the following **Event** occurs.

If no **Storages** are selected to write to, [Storages are not Configured](#) is fired up.

Basic Parameters

None

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Network Issue

Occurs if network is unable to transfer data between **Camera** and **Server** and packet loss is detected. That may cause for frame rate to drop on **Camera(s)**. If no frames are received from **Camera** for 10 seconds, **Camera** is considered offline. [Camera Disconnection/Malfunction](#) event is then generated in this particular case.

Basic Parameters

None

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Camera IP Conflict

Occurs If another **Camera** with the same IP has entered the network, resulting in one of these two **Cameras** to go offline. [Camera Disconnection/Malfunction](#) event is then generated in this particular case.

Basic Parameters

None

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Input Signal on Camera


Occurs if input signal is detected on **Camera(s)**. Nx Witness may detect input signals on the following cameras:

- ONVIF-compliant (input support via ONVIF may vary from camera to camera)
- Axis.

Basic Parameters

Camera(s) the input signal is detected on. To specify:


1. Click on *Any Camera* at the desired row on the Alarm/Event Rules form:

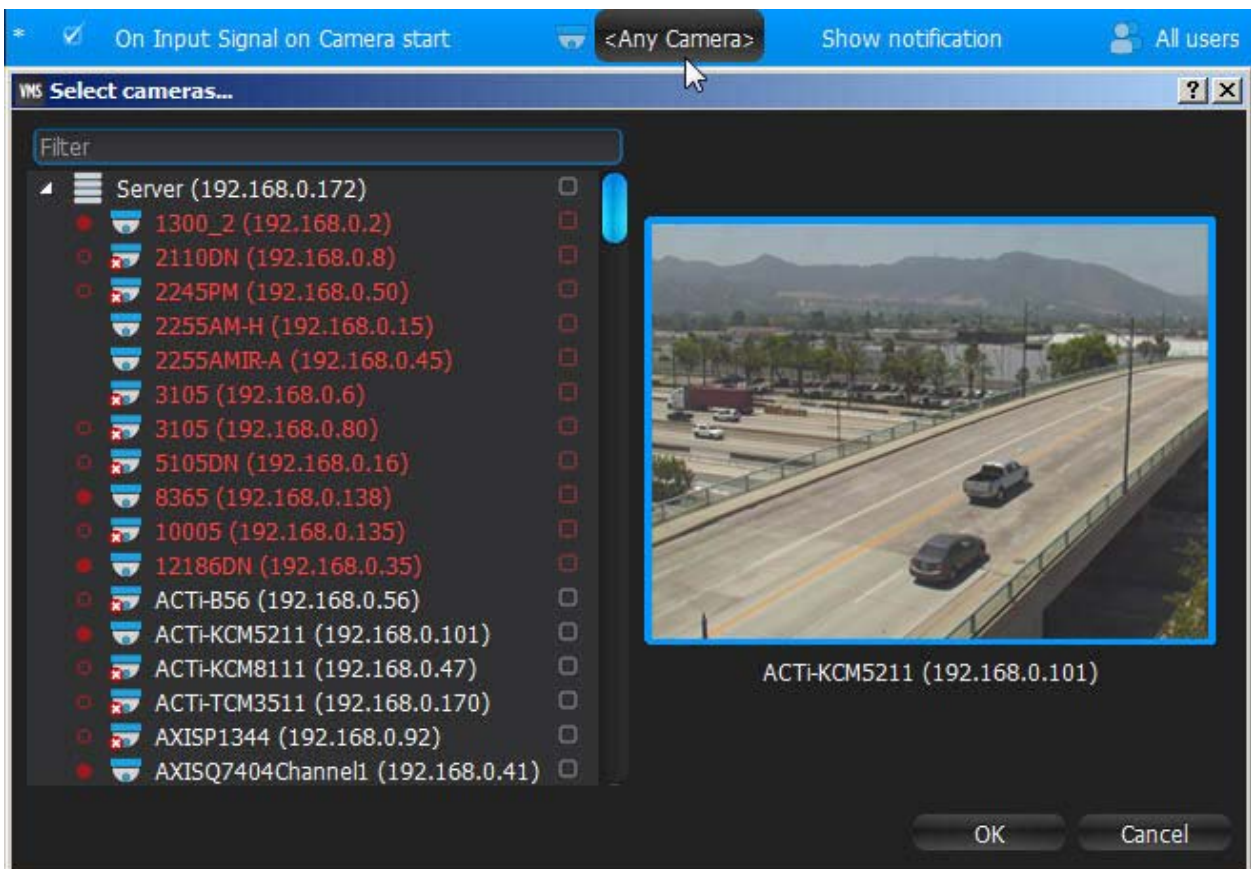

 **Note:** Cameras that do not support input, are highlighted in red.

2. Check the cameras to detect input, then click *OK* (*Cancel* will discard changes).

To select all **Cameras** on a specific **Server**, click on the check box. To filter search, use the *Filter* box. Filter criteria are the same as search (see "[Search](#)"). It is possible to **Drag'n'Drop** the selected **Cameras** from [Resource Tree](#) onto the **Event's** advanced settings form.

 **IMPORTANT.** To detect input signals, input must be supported on **Camera**. If the selected **Camera** does not support input, then the corresponding message will be displayed (see above).

If do not specify the particular cameras, then input signal will be detected on all the cameras that support input.

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Starts/Stops. Available only for instant actions ([Send Mail](#), [Show Notification](#), [Camera Output](#)).

May result in

[Camera Recording](#).

[Panic Recording](#).

These actions will be performed while input signal is taking place on at least one camera out of the selected.

[Send Mail](#).

[Show Notification](#).

[Camera Output](#).

These actions will be performed once input signal is detected on at least one camera out of the selected.

Why Event may work incorrectly

Motion is not supported on **Camera(s)** that is being monitored.

Too many **Cameras** are monitored and too many **Events** occur.

Cameras that are being monitored are offline.

Action is not configured properly. See the **Action's** description for details.

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Server Failure

Occurs if **Server** is down (either hardware/software issue or manual shutdown). In this case, all hosted on **Server Cameras** are dropped offline.

Basic Parameters

None

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Servers Conflict

Occurs if a new **Server** is connected to another **Server** on the same network and pulls data from same **Cameras**. In this case, some **Cameras** may drop offline because they may not provide several streams simultaneously. This results in [Camera Disconnection/Malfunction Event](#). Message contains the specific list of cameras that are used by both servers.

Basic Parameters

None


Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

EC Connection Lost

Occurs if connection to **Server** is lost for whatever reason (network issue or Server is down). In this case, the connection icon in the top right corner becomes red () and Client tries to connect to another Server (if in multi-server environment) or reconnect to the current Server.

If **User** clicks on the notification, then login dialog will automatically open. See "[Connecting to Server and Working Offline](#)".

This notification will hide automatically as soon as the connection is restored.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Licenses are not Configured

Occurs if no [Licenses](#) are activated. In this case, [Notification](#) is displayed.

In this case, it is not possible to record **Cameras** and view **Analog Cameras**.

If **User** clicks on the notification, then license dialog will automatically open. See "[Obtaining and Activating Nx Witness Licenses](#)".

This notification will hide automatically as soon as one **License** is activated.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

License Issue

Occurs if Server [Licenses](#) are activated on, went offline. In this case, [Notification](#) is displayed every 30 seconds.

In this case, it is not possible to record **Cameras** and view **Analog Cameras**.

If **User** clicks on the notification, then license dialog will automatically open. See "[Obtaining and Activating Nx Witness Licenses](#)".

This notification will hide automatically as soon as one **License** is activated.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

E-mail is not Set for Users

Occurs if E-Mail address is not set up:

- **Viewer** is notified if an email address is not configured.
- **Administrator** is notified if a **User** does not have an email address specified.

In this case, [Notification](#) will be displayed.

If click on the notification, **User's** mail settings dialog will open. See "[Changing User Settings](#)".

If **User** does not have an e-mail address, that user is unable to receive [mail notifications](#).

This notification will hide automatically as soon as all email addresses are configured (for Admin) or individual email address is set (Viewer).

[Mail Notifications](#) may not work if [E-Mail Server is not configured](#). In this case, [Error while Sending E-Mail](#) notification will appear.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

E-Mail Server is not Configured

Occurs if E-Mail Server is not configured. In this case, [Notification](#) is displayed.

If E-Mail Server is not configured, [mail notifications](#) cannot not be sent.

If click on the notification, Mail Server settings dialog will open. See "[Mail Notifications](#)" for details.

This notification will hide automatically as soon as all E-Mail Server parameters are configured.

[Mail Notifications](#) may not work if [E-mail is not Set for Users](#). In this case, [Error while Sending E-Mail](#) notification will appear.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Error while Sending E-Mail

Occurs when [E-Mail Notification](#) fails. In this case, [Notification](#) is displayed.

If click on the notification, Mail Server settings dialog will open. See "[Mail Notifications](#)" for details.

Storages are not Configured

Occurs if no **Storages** are selected (recording flag might have been removed accidentally).

In this case, [Notification](#) is displayed.

If **Storages** are not configured, it is not possible to record **Cameras**.

If click on the notification, storage configuration dialog will open. See "[Configuring Server Storages \(Admin Only\)](#)".

This notification will hide automatically once **Storage** has a recording flag set up.

Why Event may work incorrectly

Notifications for this type of **Event** is hidden in system settings. See "[Notifications](#)" for more details.

Server Started

Occurs when any Server registered in the system has started.

Basic Parameters

None

Advanced Parameters

Schedule (see "[Setting up Schedule for Tracking Events](#)").

Why Event may work incorrectly

Notifications for this type of **Event** are hidden in system settings. See "[Notifications](#)" for more details.

Actions that Nx Witness Can Do

Nx Witness reacts differently to each **Event**. The result is called **Action**. Each **Action** that is fired up by the software may have its own parameters. Refer to the particular **Action** description for more information:

- [Notifications](#)
- [Visual Motion Indication](#)
- [Mail Notifications](#)
- [Start Recording on Camera](#)
- [Start Panic Recording](#)
- [Trigger Camera Output](#)
- [Play Sound](#)
- [Repeat Sound](#)
- [Speak](#)
- [Write to Log](#).


See "[Tracked Events](#)" for detailed information on **Events**.

Notifications

Nx Witness provides a powerful notification mechanism for notifying **Users** of **Events** that occur. When **Event** occurs, right [Panel](#) starts blinking (the color varies depending on the importance of the notification). Notification Types:


- **System Messages** (red) – something is not properly configured. Can be fixed.
- **Warnings** (orange) – critical event (Camera disconnected, Server failure, etc).
- **Notifications** (green) – non-critical events (motion, input signal, etc).

If a user opens the panel, the following will be displayed (on the right):

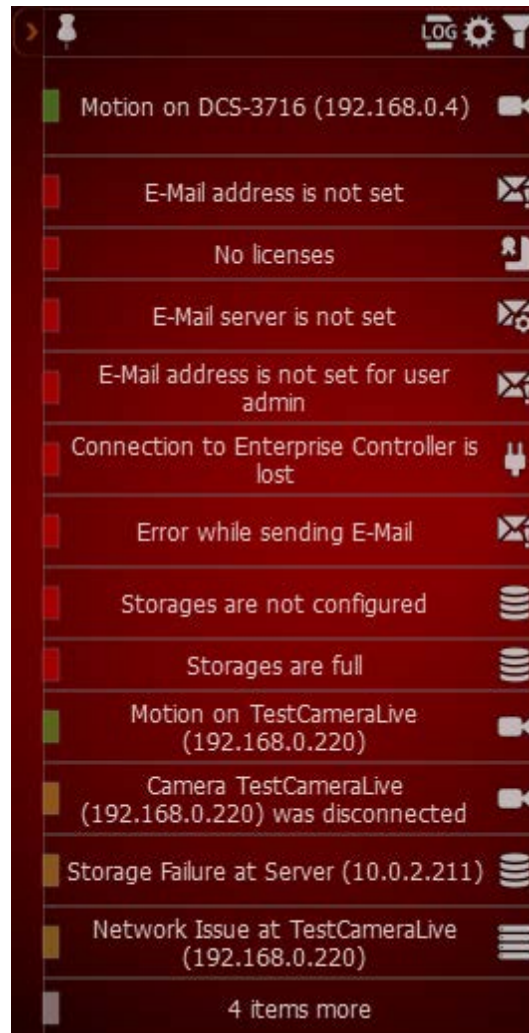



It is possible to perform the following:

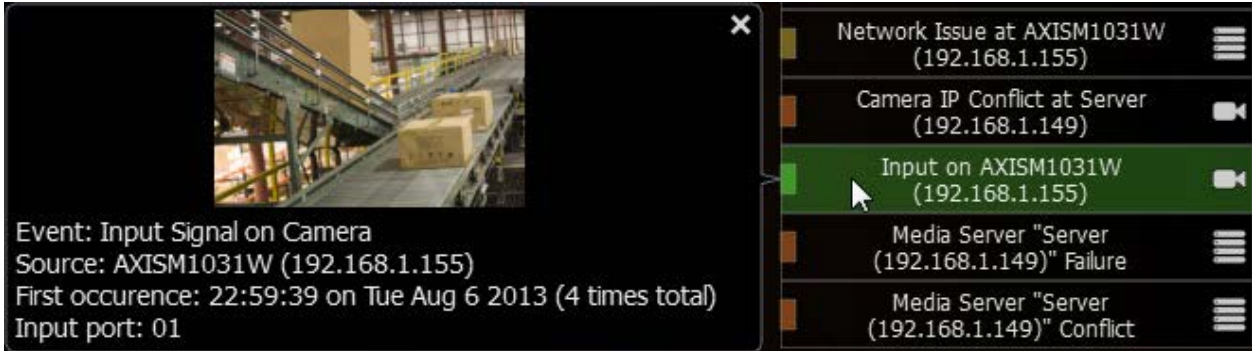
- **Obtain additional information** by hovering over the notification with a mouse cursor. The information will appear on the left:




- [Motion Detection](#) and [Input Signals](#) – the frame from **Camera** the **Event** occurred at and additional information. Click on the notification or additional information to open **Camera** to view its archive for event specifics.
- [Network Issue on Camera](#) – the last frame received from **Camera** and additional information. Click on the notification or additional information to open [Camera Settings](#).
- Issues related to System Messages – additional information. Click on the notification to go to the appropriate dialog.

When clicking on notification or detailed information, the corresponding action will be performed:

- **Motion or Input on Camera** – **Camera** will be opened in a new [Tab](#).
- **Camera IP Conflict** – **Camera's** Web Page will be opened in a browser
- **Camera Network Issue** – **Camera's** Settings form will be opened
- **Server Failure or Storage Issue** – Server Settings form will be opened
- **E-Mail Issue** – E-Mail Server Settings form will be opened
- **License Issue** – License Form will be opened
- **Connection is Lost** – connection dialog will be opened
- **Server Conflict** – no action
- **Close the notification.** Either **Right Click** or hover over with a mouse cursor to obtain additional information and click on the cross sign in the top right corner. Green and yellow notifications will eventually disappear.
- **View [Event Log](#).** Click on .
- **Go to [Event Settings](#).** Click on .

- **Show/Hide notifications of this particular type.** Click on  or Open [Main Menu](#) and go to *Local Settings* → *Notifications*:

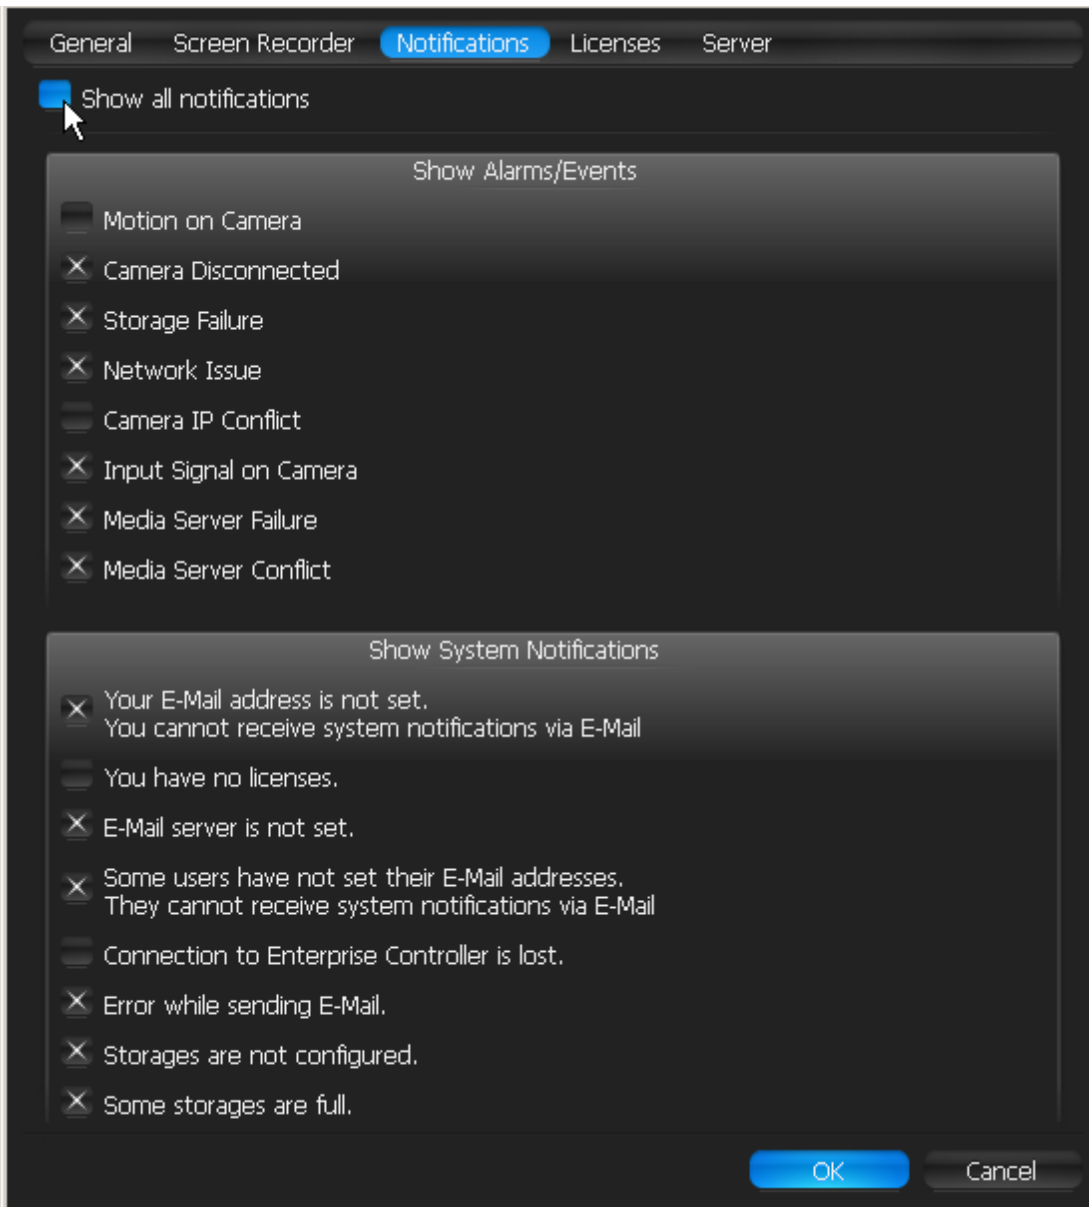

Select notification types that should be displayed. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Basic Parameters

Type of **Users** notifications are displayed to:

- All users
- Administrators only.

Advanced Parameters

Aggregation Period

May be caused by

All **Events**.

Why Action may work incorrectly

Some notifications are disabled.

Event is not configured properly. See **Event** description for details.

Visual Event Indication

If too many Cameras are opened at the same time, it becomes very difficult to locate a specific Camera when Event occurs. Nx Witness provides a powerful and intuitive way to highlight a specific object on Scene if **Event** occurs:



The following **Events** are indicated:

- [Motion on Camera Network Issue](#) and [Input Signal on Camera](#) – visualization on **Camera**
- Server Issue – visualization on **Server Monitoring Widget** if Server is being monitored (see "[Monitoring Servers \(Admin Only\)](#)").

The action is always enabled and does not require configuration.


Mail Notifications

Nx Witness can send E-mails to **Users** or to additional addresses when **Events** occur.

! IMPORTANT. E-Mails cannot be sent if **E-Mail Server** is not configured. In this case, [E-Mail Server is not Configured](#) notification is shown up. See "[Configuring Mail Server for E-Mail Notifications](#)" for more details.


Basic Parameters

Users the E-Mails should be sent to:

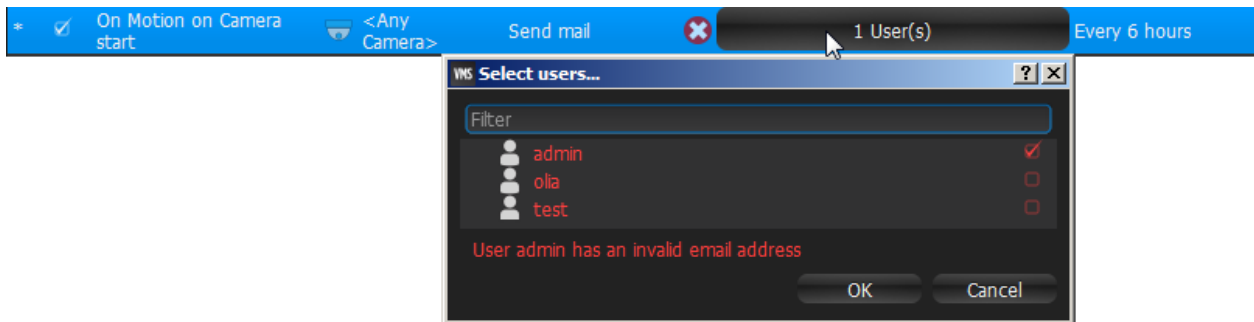


To filter search, use the *Filter* box. Filter criteria is the same as search (see "[Search](#)"). It is possible to Drag'n'Drop selected **Users** from [Resource Tree](#) onto **Action's** advanced settings form.

! IMPORTANT. E-Mails will be sent to **Users'** E-Mail addresses. If E-Mail address is not configured for **User**, then the user cannot receive E-Mails (see above). [E-mail is not Set for Users](#) notification is generated in this case. See "[Changing User Settings](#)" for information on how to set up E-Mail for **User**.


 **Note:** To send E-Mails to additional addresses, see advanced parameters.

Advanced Parameters

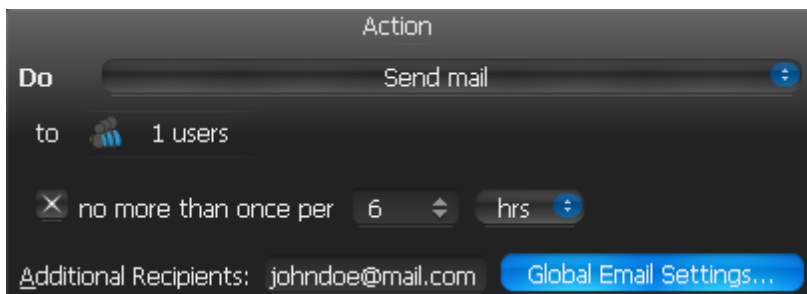


Additional Recipients – additional E-Mail addresses to send notifications to. Several recipients must be separated by the ";" symbol.

Aggregation.

 **Note:** Click on *Global Email Settings* to configure E-Mail Server parameters.

As soon as event occurs, a mail notification is sent as follows:

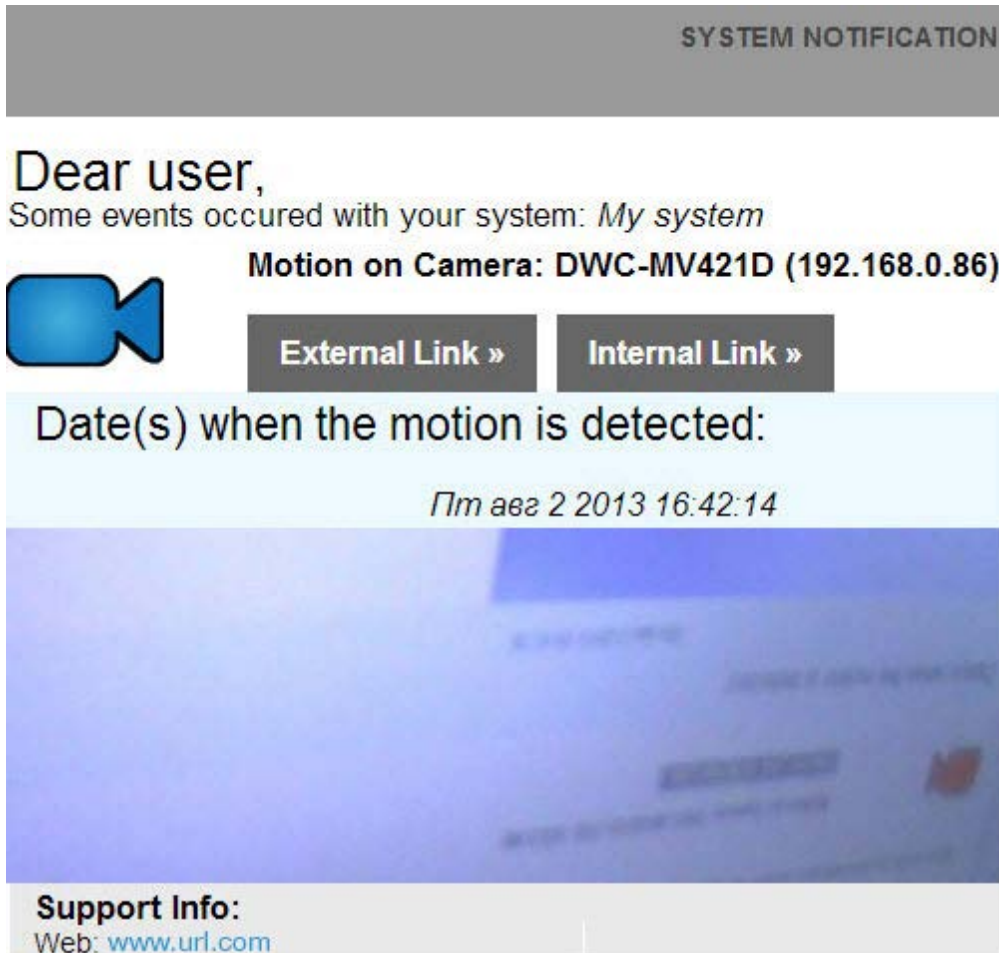

May be caused by

All Events.

Why Action may work incorrectly

E-Mail Server is not configured. In this case, [E-Mail Server is not Configured](#) notification will appear. See "[Configuring Mail Server for E-Mail Notifications](#)" for more details.


Event is not configured properly. See **Event** description for details.

Configuring Mail Server for E-Mail Notifications

In order to send [Mail Notifications](#) on **Events**, E-Mail Server should be configured. To configure E-Mail Server:

1. Open [Main Menu](#) → *System Administration (CTRL+ALT+A)* and switch to the *Email* tab.
2. Choose quick or advanced E-Mail Server setup (see below for reference).
3. When finished, press *OK* to apply or *Cancel* to discard settings.

Quick E-Mail Server Setup

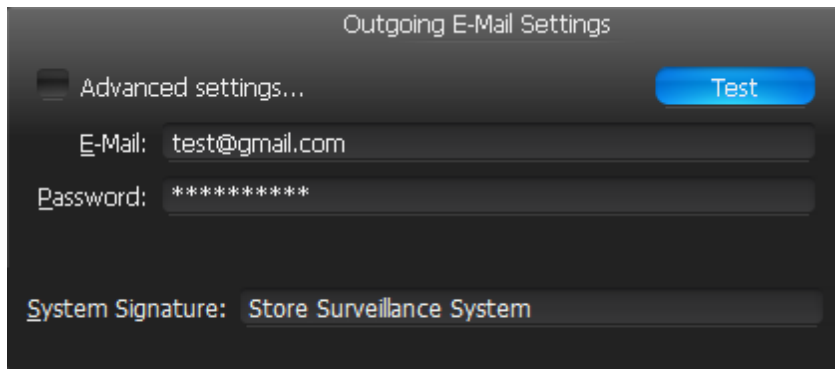


- *E-Mail/Password* – address and password of the mail account, which will be used for outgoing mail. Nx Witness will handle the rest.
- *System Signature/Support Signature* – name of the Nx Witness installation. Will appear as follows:


SYSTEM NOTIFICATION

Dear user,


Some events occurred with your system: ***Store Surveillance System***

 **Note:** click *Test* to ensure that the settings are correct. If test fails:

- If the result is "Cannot test such parameters", the domain name is not supported. It is necessary to switch to Advanced mode and set up the server manually.
- If the result is different, the error message will be displayed:

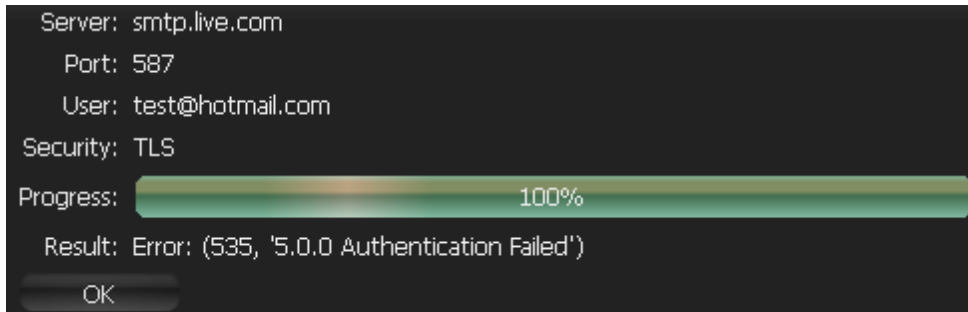


Advanced E-Mail Server Setup

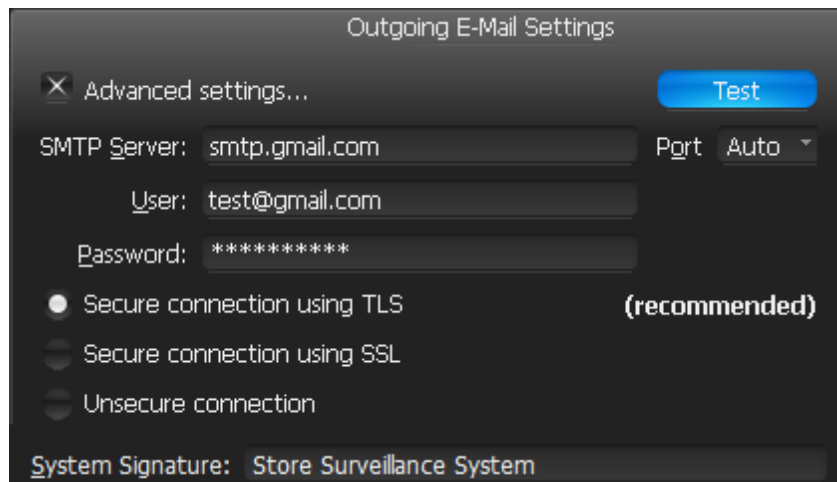

The parameters are the same as in **Simple Setup** plus:

- *SMTP Server*: E-Mail server address
- *Port* – SMTP Port
- Connection type: (Secure (TLS), Secure (SSL), Unsecure).

 **Note:** click *Test* to ensure that the settings are correct. If test fails:

- Try a different SMTP Port
- Try a different connection type.


Start Recording on Camera

Starts recording on **Camera(s)** when **Event** occurs. For instance, if Motion is detected on Cameras 1, 2 or 4, recording on Cameras 4, 5 and 6 will start.

Basic Parameters

Camera(s) to record. To specify:

1. Click on *Select at least one camera* in the desired row on the Alarm/Event Rules form. The following form will appear:

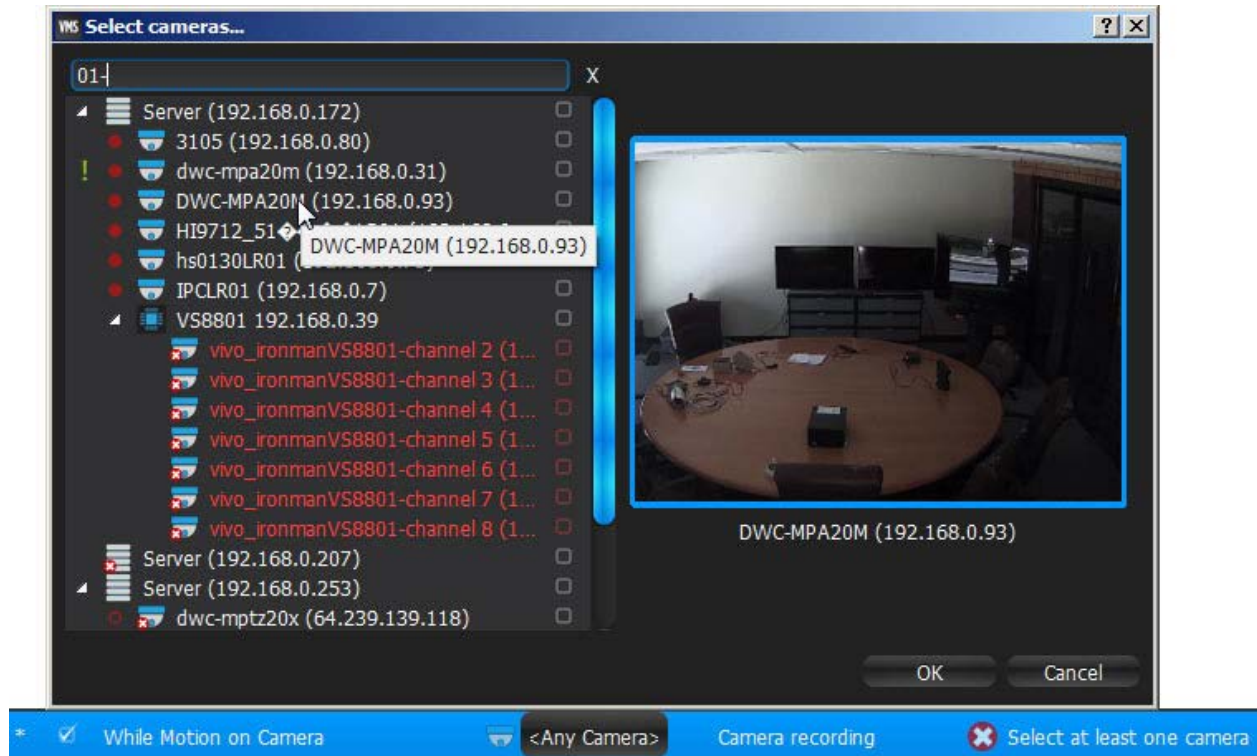


2. Check the cameras to record, then click *OK* (*Cancel* will discard changes).

To select all **Cameras** on a specific **Server**, check the corresponding box. To filter search, use the *Filter* box. Filter criteria is the same as search (see "[Search](#)"). It is possible to **Drag'n'Drop** the selected **Cameras** from [Resource Tree](#) onto the **Action's** advanced settings form.

! IMPORTANT. To record **Camera** on **Event**, recording must be **enabled** on **Camera**. Refer to "[Modifying Recording Schedule](#)" for information on how to enable recording. If the "Recording" flag is not set on the selected **Camera**, the following message will be displayed (see above).

Advanced Parameters

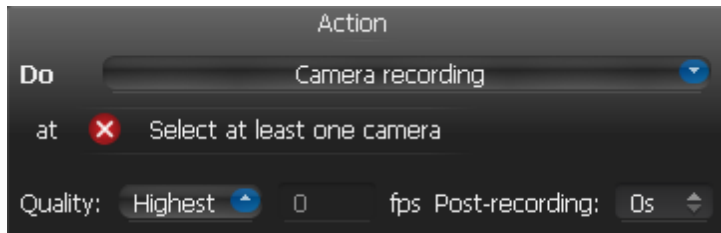

Quality and *fps* – target recording parameters for **Camera(s)**. If **Camera's** maximum FPS is lower than specified, maximum FPS will be acquired.

Post-recording – the time it takes for the recording to be performed after the event is f complete.

May be caused by

[Motion on Camera](#)

[Input Signal on Camera.](#)

Why Action may work incorrectly

Recording is not enabled on **Camera**. Refer to "[Modifying Recording Schedule](#)" for information on how to enable recording.

Event is not configured properly. See the **Event** description for details.

Start Panic Recording

Starts **Panic Recording** when **Event** occurs.

Panic Recording mode switches **Recording Settings** for all **Cameras** to **maximum FPS and Quality**.

 **Note:** if Recording is **not enabled** for **Camera**, **Panic Recording will not be activated**.

Current **Panic Recording** status can be viewed:

- in Recording Schedule (see "[Modifying Recording Schedule](#)")
- in server's settings (see "[Obtaining and Configuring Server 's Additional Settings \(Admin Only\)](#)").

Basic Parameters

None.

Advanced Parameters

None.

May be caused by

[Motion on Camera](#)

[Input Signal on Camera](#).

Why Action may work incorrectly

Event is not configured properly. See **Event** description for details.

Trigger Camera Output


It is possible to generate output via two different methods:

- **Output** – generates output on **Camera(s)** while **Event** occurs and stops when Event ends.
- **Camera output for 30 seconds** – generates output on **Camera(s)** when **Event** occurs and stops output in 30 seconds.

Basic Parameters

Camera(s) output is triggered on. To specify:

1. Click on *Select at least one camera* in the desired row on the Alarm/Event Rules form. The following form will appear:

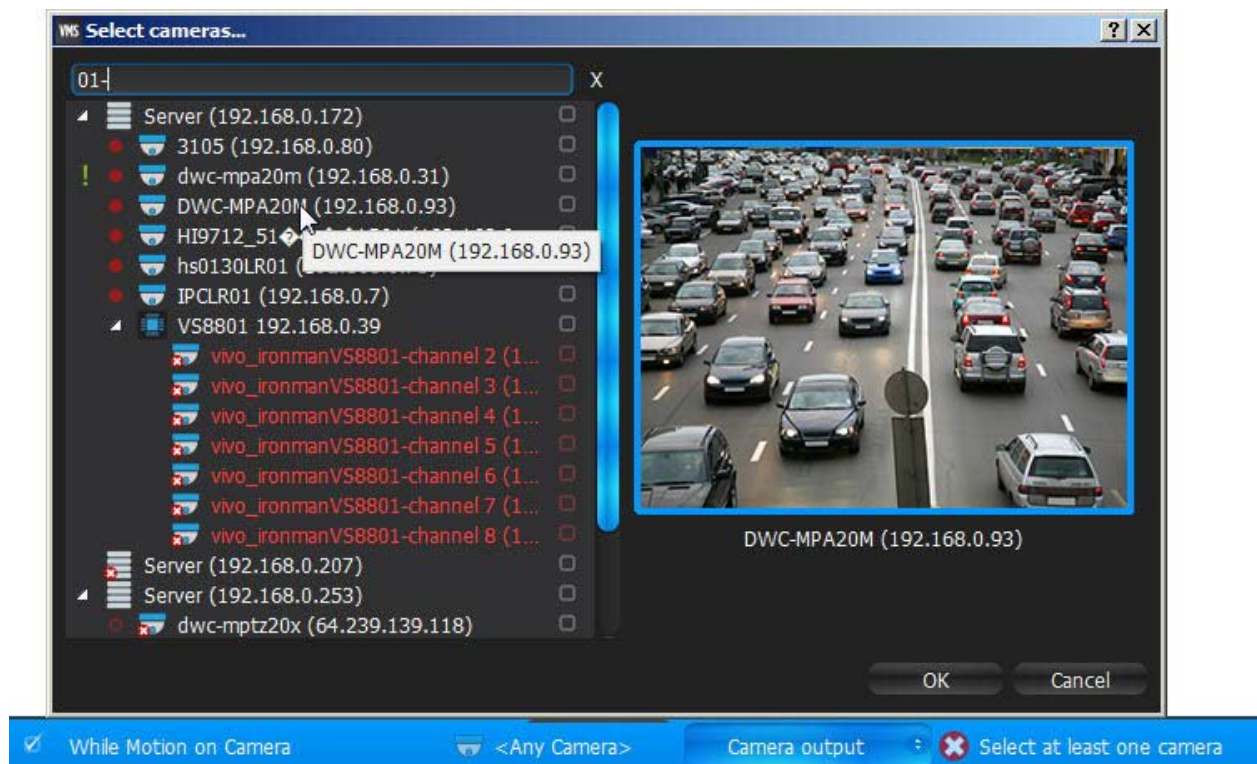


2. Check the cameras to trigger output, then click **OK** (*Cancel* will discard changes).

To select all **Cameras** on a specific **Server**, check the corresponding box. To filter search, use the *Filter* box. Filter criteria is the same as search (see "[Search](#)"). It is possible to **Drag'n'Drop** the selected **Cameras** from [Resource Tree](#) onto the **Action's** advanced settings form.

IMPORTANT. To trigger output signals, output must be supported on **Camera**. If the selected **Camera** does not support output, then the corresponding message will be displayed (see above).

Advanced Parameters

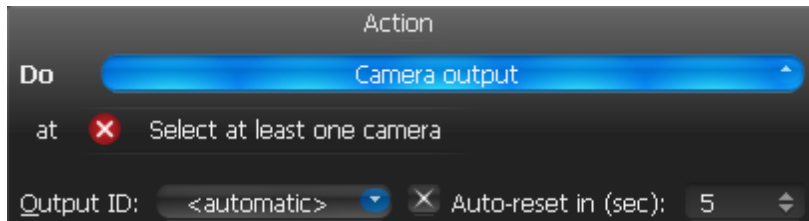

Output ID – reserved for multi-channel recorder support.

Auto-reset in (sec) – if checked, the output will be reset automatically after the specified period of time.

Aggregation Period (for **Camera output for 30 seconds**)

May be caused by

Any events – Camera output for 30 seconds.

[Motion on Camera](#) and [Input Signal on Camera](#) – synchronous output. Output stops when motion or input are stopped.

Why Action may work incorrectly

Output is not supported on some **Cameras**.

Output and **Camera output for 30 seconds** are slightly different.


Event is not configured properly. See **Event** description for details.

Play Sound

Plays the specific sound when **Event** occurs.

Basic Parameters

Sound to be played. It is possible to select any sound from the available options:

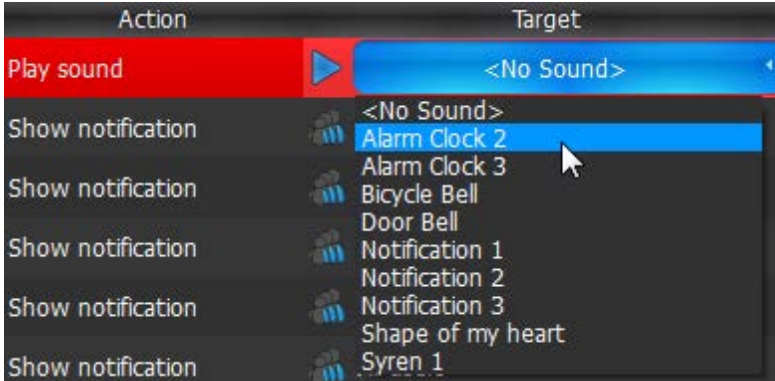


Advanced Parameters

Volume


Aggregation

Sound library customization: adding, editing or removing sounds.


To view the sound library, go to **Advanced Parameters** and click *Manage...*

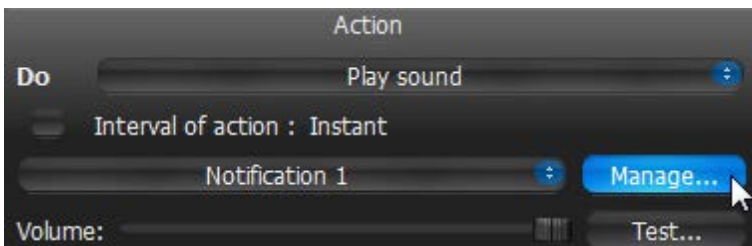

The following dialog will appear:

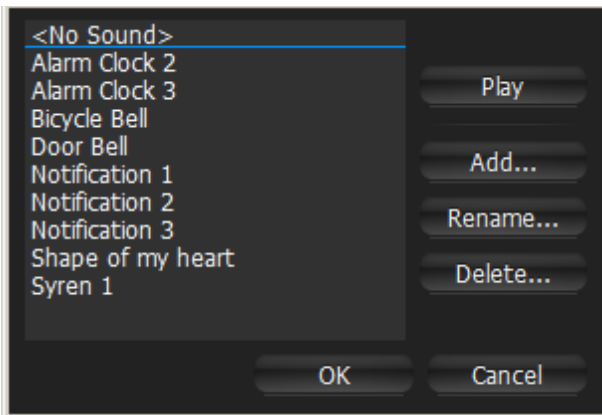

- To **add** sound:
 1. Click *Add...* and select the desired audio file.

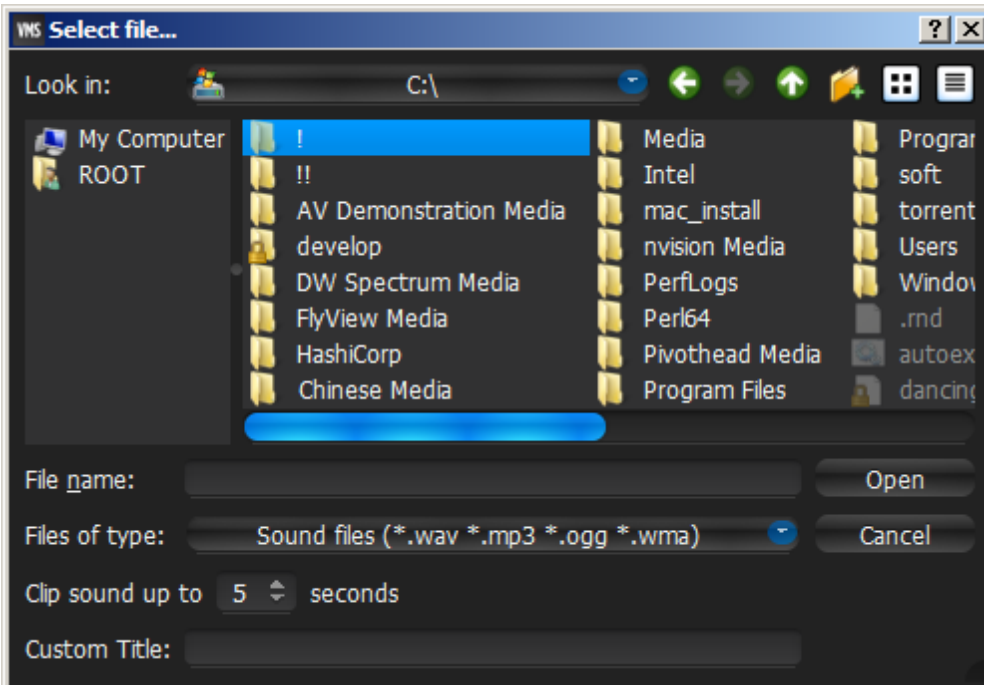

2. Choose the duration and set it to *Clip sound up to*. The audio file will be cut to the specified duration.
 3. Choose *Custom Title* for the selected sound. If not specified, the file name will be used as the title by default.
 4. Click *Open* to add the sound or *Cancel* to discard changes.
- To **rename** the selected sound, click *Rename...* and enter a new title
 - To **test** the chosen sample, click *Play...*
 - To **delete** the selected sample, click *Delete...*
 - Click *Open* to add the sound or *Cancel* to discard changes.

May be caused by

All **Events**.

Why Action may work incorrectly

Event is not configured properly. See **Event** description for details.


Sound is muted. Open any item on Scene and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)".

Repeat Sound

Plays a specific sound while **Event** occurs.

Basic Parameters

Sound to be played. It is possible to select any sound from the available options:

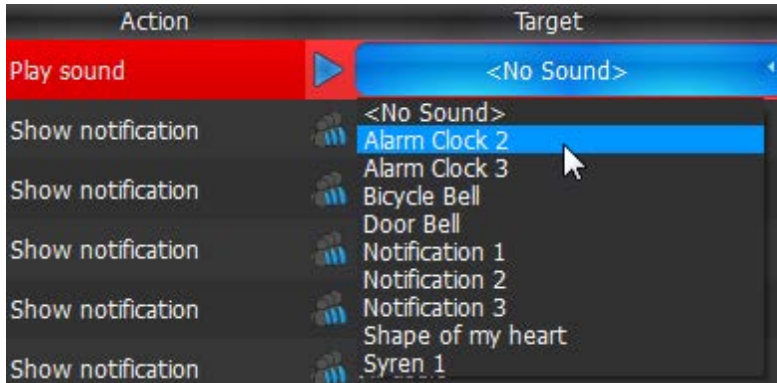


Advanced Parameters


Volume

Sound library customization: adding, editing or removing sounds.


To go to sound library go to **Advanced Parameters** and click *Manage...*

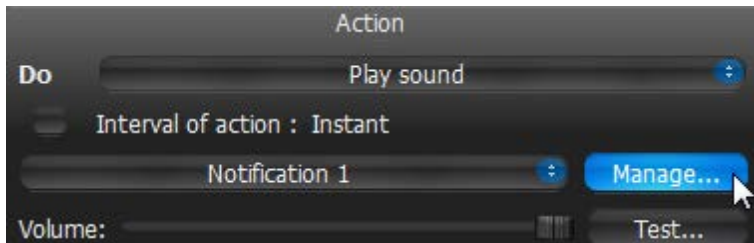

The following dialog is displayed

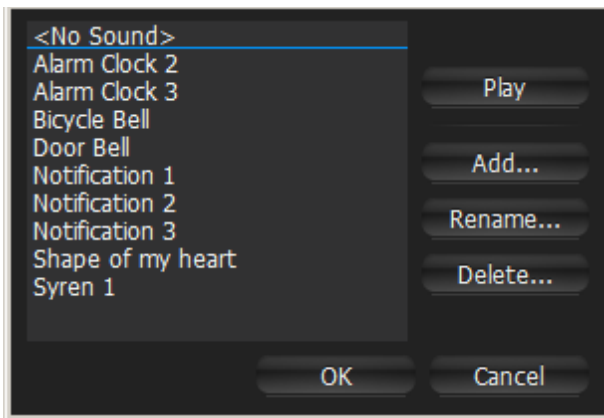

- To **add** a sound:
 1. Click *Add...* and select the desired audio file.

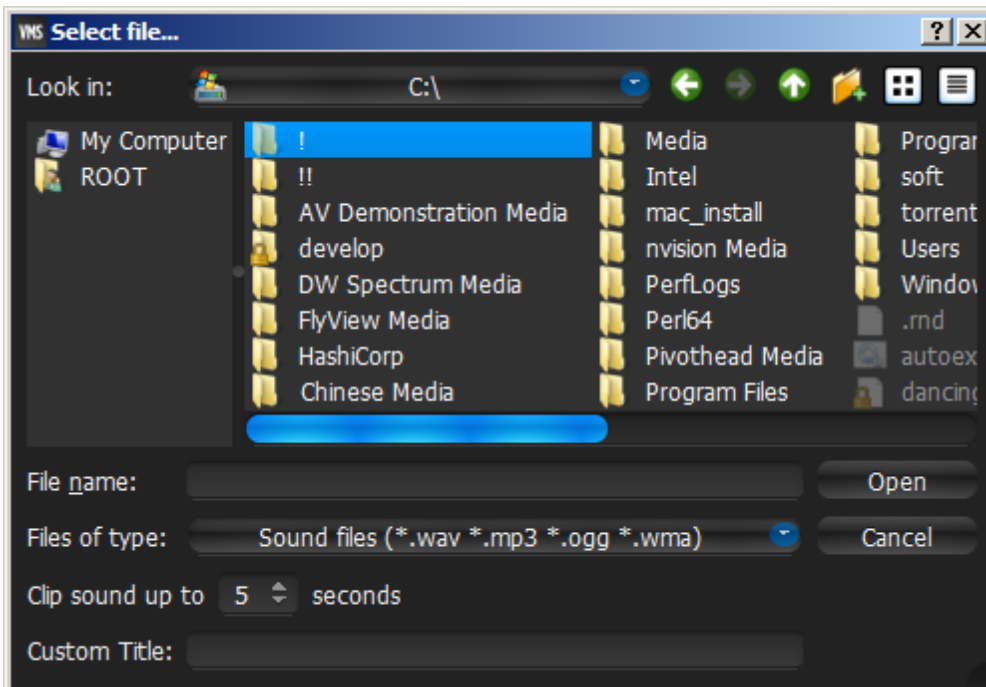

2. Choose the duration and set it to *Clip sound up to*. The audio file will be cut to the specified duration.
 3. Choose *Custom Title* for the selected sound. If not specified, the file name will be used as the title by default.
 4. Click *Open* to add the sound or *Cancel* to discard changes.
- To **rename** the selected sound, click *Rename...* and enter a new title
 - To **test** the chosen sample, click *Play...*
 - To **delete** the selected sample, click *Delete...*
 - Click *Open* to add the selected sound or *Cancel* to discard changes.

May be caused by

- [Motion on Camera](#)
- [Input Signal on Camera.](#)

Why Action may work incorrectly

Event is not configured properly. See **Event** description for details.


Sound is muted. Open any item on Scene and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)".

Say Text

Pronounces specific text when **Event** occurs.

Basic Parameters

Text to pronounce:

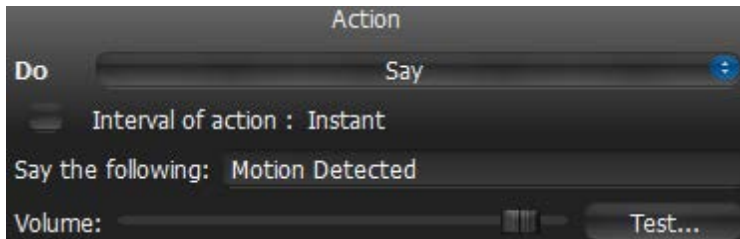

Advanced Parameters

Aggregation

May be caused by

All **Events**.

Why Action may work incorrectly

Event is not configured properly. See **Event** description for details.

Sound is muted. Open any item on Scene and check if the sound is muted. Volume settings are applied globally. See "[Adjusting Volume](#)".

Write to Log

Writes the record to **Log** when **Event** occurs.

By default, all **Events** mentioned in **Rules** are written to **Log**. However, in some cases it may be necessary to disable all notifications but certain types of **Events** in **Log**. In this instance, create **Rule** with this particular type of **Action**.

Basic Parameters

None

Advanced Parameters

Aggregation

May be caused by

All **Events**.

Why Action may work incorrectly

Event is not configured properly. See **Event** description for details.

Default Rules

As soon as Nx Witness is installed, default **Rules** are set up.

The following **Events**

- [Camera Disconnection/Malfunction](#)
- [Storage Failure](#) (including "Disk Is Full")
- [Network Issue](#)
- [Camera IP Conflict](#)
- [Server Failure](#)
- [Servers Conflict](#)
- [Server Started](#).

will result in


- [Notifications](#) to all **Users** (no more than once per 30 seconds).
- [Mail Notifications](#) for admin. To receive mail notifications, E-Mail Server must be configured (see "[Configuring Mail Server for E-Mail Notifications](#)") with e-mail address specified for admin (see "[Changing User Settings](#)").
- [Write to Log](#).

Viewing Events Log

Each event that occurs in Nx Witness is stored in **Event Log**. **Event Log** makes it easy to navigate through past activity or diagnose **Camera** or **Server**. To view the log, proceed with one of the following:

- Open [Main Menu](#) and go to *Event Log* (**Ctrl + L**)
- Open [Notification Panel](#) on the right and click ..
- To view **Events** that occurred on a particular **Camera**: open Camera's [Context Menu](#) and choose *Check Camera Issues...*

The data is broken down by the following columns:

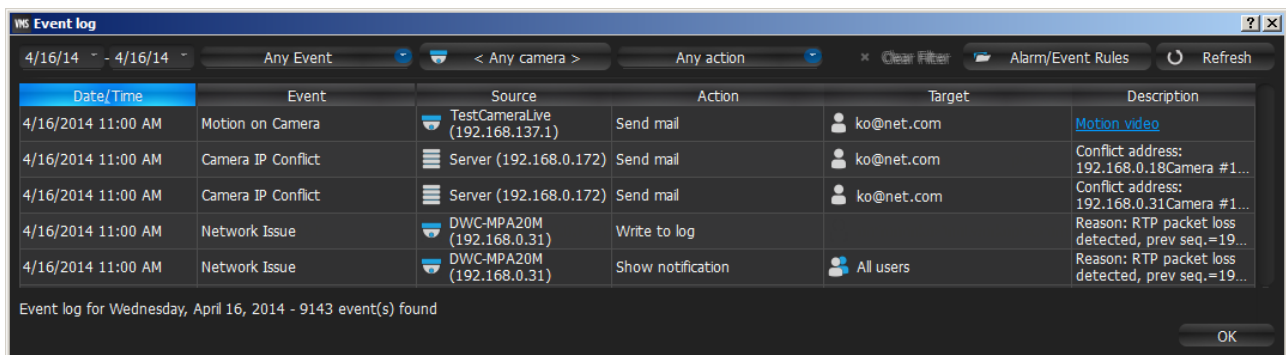


Date/Time	Event	Source	Action	Target	Description
4/16/2014 11:00 AM	Motion on Camera	TestCameraLive (192.168.137.1)	Send mail	ko@net.com	Motion video
4/16/2014 11:00 AM	Camera IP Conflict	Server (192.168.0.172)	Send mail	ko@net.com	Conflict address: 192.168.0.18Camera #1...
4/16/2014 11:00 AM	Camera IP Conflict	Server (192.168.0.172)	Send mail	ko@net.com	Conflict address: 192.168.0.31Camera #1...
4/16/2014 11:00 AM	Network Issue	DWC-MPA20M (192.168.0.31)	Write to log		Reason: RTP packet loss detected, prev seq.=19...
4/16/2014 11:00 AM	Network Issue	DWC-MPA20M (192.168.0.31)	Show notification	All users	Reason: RTP packet loss detected, prev seq.=19...

Event log for Wednesday, April 16, 2014 - 9143 event(s) found

- *Date/Time* – date and time the event occurred
- *Event* – the name of the event
- *Source* – the resource that initiates the event: Camera (Motion Detection, Input Signal, etc) or Server (Storage Failure, Server Failure, etc).
- *The Action* that is performed when **Event** occurs.
- *Target* – the recipient of the action: **Users** or **Cameras**.
- *Description* – any additional information. If Motion is detected, then hyperlink is provided. When clicking on hyperlink, the Camera will open in a new Layout and start playing back from the moment Motion occurred.

The following tools are available to manage **Camera List**:

- **Sort** data by column. **Left Click** on column's header.
- **Filter** data. Select filter conditions on the top:

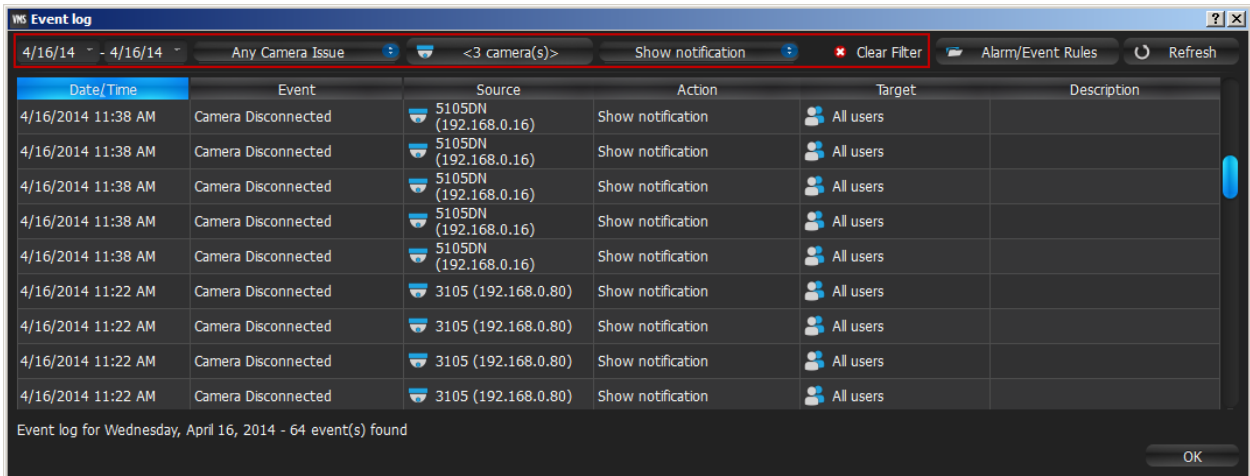

Date/Time	Event	Source	Action	Target	Description
4/16/2014 11:38 AM	Camera Disconnected	5105DN (192.168.0.16)	Show notification	All users	
4/16/2014 11:38 AM	Camera Disconnected	5105DN (192.168.0.16)	Show notification	All users	
4/16/2014 11:38 AM	Camera Disconnected	5105DN (192.168.0.16)	Show notification	All users	
4/16/2014 11:38 AM	Camera Disconnected	5105DN (192.168.0.16)	Show notification	All users	
4/16/2014 11:38 AM	Camera Disconnected	5105DN (192.168.0.16)	Show notification	All users	
4/16/2014 11:22 AM	Camera Disconnected	3105 (192.168.0.80)	Show notification	All users	
4/16/2014 11:22 AM	Camera Disconnected	3105 (192.168.0.80)	Show notification	All users	
4/16/2014 11:22 AM	Camera Disconnected	3105 (192.168.0.80)	Show notification	All users	
4/16/2014 11:22 AM	Camera Disconnected	3105 (192.168.0.80)	Show notification	All users	

Event log for Wednesday, April 16, 2014 - 64 event(s) found

- **Start and End Date** – only the events that occurred during a particular period of time are displayed (the current day by default)
- **Event type** – displays a specific type of events only
- **Camera** – displays events on a particular camera only (applies to Motion, Input and Camera Issues)
- **Action type** – specific events caused by certain types of actions are displayed

To remove all filter conditions, click *Clear Filter* or open [Context Menu](#) and select *Clear Filter*.

To show events that are related to a particular source, locate the actual event, open [Context Menu](#) and select *Filter Similar Rows*.

- **Select multiple rows** from a table. Drag the mouse, use **CTRL + Click/Up/Down** arrows, or **Shift + Click/Up/Down** arrows. Use **CTRL + A** to select all records.
- All **Camera** options (open, rename, diagnose, etc.). To access the cameras, Select **Camera** and open [Context Menu](#).
- All **Server** options (monitor, configure, diagnose, etc.). To access Server s, Select **Server** and open [Context Menu](#).
- **Export** data from one or multiple rows to an external file. Select the desired rows, open [Context Menu](#) and select *Export Selected to File...* Choose a file name and format. The following formats are supported:
 - HTML File
 - CSV file (text file with delimiters). This file type can easily be imported into Microsoft Excel.
- **Copy one or several rows** to clipboard. Select the desired rows, open [Context Menu](#) and select *Copy Selection to Clipboard*. The data can be pasted into any text editor or Microsoft Excel.

It is possible to view the event log on a specific **Camera** or **Server** .

- Camera: open Camera's [Context Menu](#) (on Scene, in [Resource Tree](#), etc.) and select *Check Camera Issues...*
- Server Diagnostics: open Server's [Context Menu](#) (on Scene, in [Resource Tree](#), etc.) and select *Server Diagnostics...*

Event Log will open and a filter will apply (Source - desired **Camera** or **Server**).

User Management


Nx Witness provides a simple way to manage **Users**: there are only three roles in the System: **Super Administrators**, **Administrators** and **Viewers** (can be configured as **Live Viewer**, **Viewer**, **Advanced Viewer**). See "[Introducing User Roles](#)" for details.


The following options are provided for users management:

- [Creating New User \(Admin Only\)](#)
- [Changing User Settings](#)
- [Deleting User \(Admin Only\)](#).


Creating New User (Admin Only)

To create **User**:

1. Do one of the following:
 - Open [Main Menu](#) and go to *New* → *User*
 - **Right-Click** on *Users* in [Resources Tree](#) and choose *New*.
2. Enter user settings:
 - *Login* and *Password* – user credentials.  **IMPORTANT:** login and password are **case sensitive**.
 - *Email* – this address will be used for E-Mail notifications. If it is not set the user will not be able to receive such notifications. See "[Mail Notifications](#)".
 - *Access Rights* – Administrator or Viewer. See "[Introducing User Roles](#)" for more details.

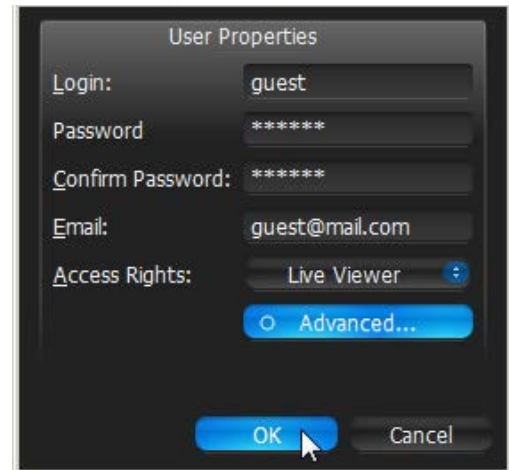

By default **Viewer** can only view live video. To setup additional permissions, click *Advanced*. The following **Permissions** can be assigned:

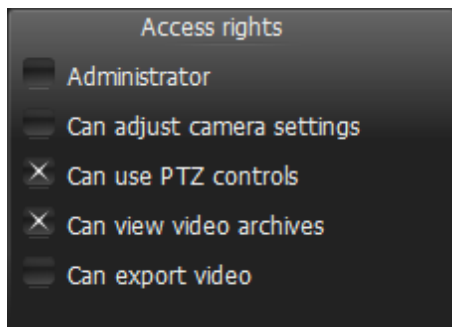

3. Click OK to create a user.

Once **User** is established, **Layouts** can be created and assigned to this **User**. See "[Creating New Layout](#)".

Changing User Settings

The following **User Settings** can be modified:

- **Login** (Admin only) – can be changed for all users except **Super Administrator** (admin). Also, a user cannot change own login name. The login name can be set in [Resource Tree](#).
- **Password** – can be changed for all users, except **Super Administrator** (admin). **Viewer** can only change own password. **Super Administrator** can change his password as well.
- **E-Mail**.
- **Role and Permissions** (Admin only) – can be changed for all users, except **Super Administrator** (admin). Also, **User** cannot change own role.

To change **User Details**:

1. Select any **User** in [Resource Tree](#), **Right-Click** on [Context Menu](#) and choose *User Settings*.
2. Change the desired fields and click *OK* (or *Cancel* to close the form).

Deleting User (Admin Only)

It is possible to delete any **User**, except **Super Administrator**. A **User** cannot delete own profile. To delete, locate the desired **User** in [Resource Tree](#), **Right-Click** for [Context Menu](#) and choose *Delete* (or press **DEL**).

! IMPORTANT. All associated **Layouts** will automatically be deleted along with the **User**.

Layout Management

Layouts are a powerful and flexible way to represent video data in Nx Witness. **Layout** can contain an unlimited number of videos: **Cameras**, **Local videos** or **Images**, which are not restricted in terms of location, size or orientation.

Initially, **Layout** is created and configured by **Administrator**. It can then be assigned to **Viewers**. Viewers can create its own **Layouts** based on the available **Resources** (Cameras and Local files).

The following Layout Management actions are described in this section:


- [Creating New Layout](#)
- [Setting up Layouts](#)
- [Assigning Layouts to Users \(Admin Only\)](#)
- [Deleting Layouts \(Admin Only\)](#)
- [Opening and Closing Saved Layouts.](#)

Creating New Layout


The simplest way to create new **Layout** is to **open a new Tab** (see “[Tabs and Layouts](#)”). However in this case **Layout** will be created **locally** and will not be saved on **Server** and will not be restored after next login. **Layouts** should be saved for future use.

To create new **Layout** for specific **User**:


1. Find **User** in [Resource Tree](#), **Right-Click** on [Context Menu](#) and choose *New Layout*:

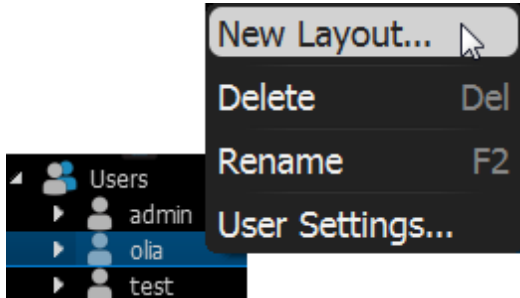

2. Enter **Layout's Name** and click OK (*Cancel* will discard all changes):

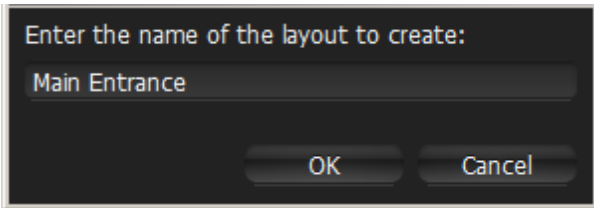

3. New **Layout** will be created and displayed in [Resource Tree](#). A new **Tab** will automatically appear:

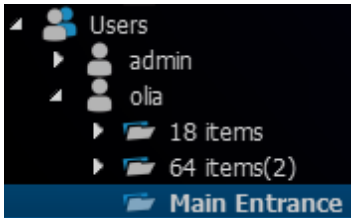

There are several ways to set up **Layouts**:

Set Up **Own Layouts**:

1. Open a new **Tab**, configure **Layout** and save.
2. Locate own **User** in [Resource Tree](#), create new **Layout** using [Context Menu](#) and save.

Setting up **Layouts** for other **Users**:

1. Find the desired **User** in [Resource Tree](#), create new **Layout** using [Context Menu](#) and save.
2. Open a new **Tab**, configure and save **Layout**, then associate with the desired **User** (See "[Assigning Layouts to Users \(Admin Only\)](#)").

Setting up Layouts

This section provides detailed instructions on how to configure layouts:

- [Adding Items to Layouts](#)
- [Removing Item\(s\) from Layouts](#)
- [Using Backgrounds \(Maps or Plans\) on Layout \(E-Mapping\)](#)
- [Adjusting Layout's Appearance](#)
- [Zoom Windows](#)
- [Locking Layouts](#)
- [Working with Multiple Nx Witness Windows](#)
- [Saving Layouts.](#)

 **IMPORTANT.** Viewers cannot change **Layouts**. Also it is not possible to change **Locked Layouts**.


Adding Items to Layouts

More than one **Item** can be added to **Layout** at a time regardless of their source (live cameras, local video, images, etc.). Nx Witness allows **24 Items** to be displayed on the **x86** architecture and **64 Items** – on **x64**.

! IMPORTANT. **Viewers** cannot add **Items** to predefined **Layouts**. They can only open and add **Items** to new **Tabs**. Also it is not possible to add cameras to **Locked Layouts**.

To add **Item(s)** to **Layout**, choose from one of the following:

- **Double-Click** on the **Item** in [Resource Tree](#)
- Invoke [Context Menu](#) in [Resource Tree](#) and select *Open*. Multiple items can be selected and added (**Ctrl + Shift** and select the desired **Items**).

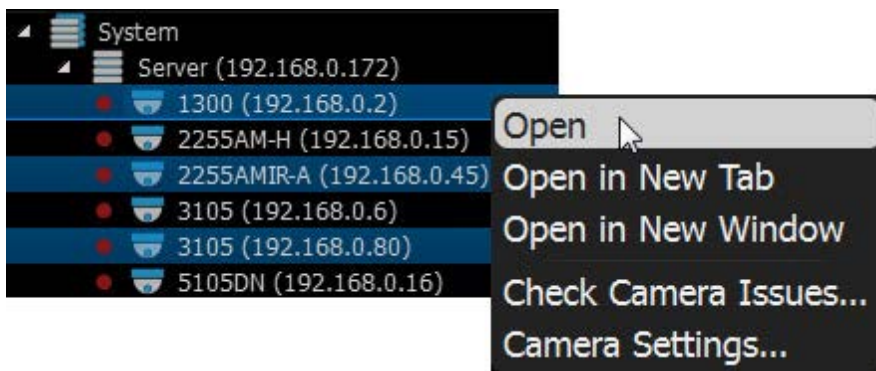

- Drag and drop from **Resource Tree**



- **Ctrl + Drag and Drop** items onto **Scene** – duplicates **Item(s)**. To avoid duplication, release **Ctrl** and hit **Esc**, while **holding the left mouse button**.
 - ! IMPORTANT.** Hold **Ctrl** or use the mouse to draw a selection of multiple **Items** on **Scene**. To select all **Items** on **Scene**, use **Ctrl + A**. Refer to "[Selecting Items](#)" for more information.
- Open **Local file(s)** or **Folder** – they will be added to the current layout (see "[Opening Local Files Outside of Media Folders](#)")
- **Ctrl + Drag and Drop** from **Scene** to [Resource Tree](#) – dropped **Items** will automatically be added to **Layout** (use **Multi-Selection** to selection more than one item). To prevent duplication, release **Ctrl** and hit **Esc** while **holding the left mouse button**.

New **Items** will automatically occupy any available space. Grid cell aspect ratio will be adjusted automatically as per the existing item aspect ratio to occupy space on **Scene**. See "[Changing Cell Aspect Ratio](#)".

To open items directly from new **Tab**:

- Select desired **Item(s)** from [Resource Tree](#) and select *Open in New Tab* from [Context Menu](#)
- Drag selected **Item(s)** from [Resource Tree](#) and drop them onto [Tab Navigator](#)



- **Ctrl + Drag and Drop** items from **Scene** to [Tab Navigator](#) (**Multi-Selection** can be applied). To prevent duplication, release **Ctrl** and hit **Esc** while **holding the left mouse button**.
! IMPORTANT. It may be difficult to locate and add each item manually. Search may be very useful in configuring a new layout (see "[Search](#)").


How to configure a layout using **Search**:

1. [Create a new Layout](#).
2. Enter keywords into the Search box. The search results will appear on **Scene** automatically.
3. By adding or deleting keywords from the search box, the items on **Scene** will vary.
4. Do not forget to save configured **Layout**.

Removing Item(s) from Layouts


! IMPORTANT. Viewers cannot change **Layouts** that are assigned by **Administrators**. They can only open new **Tabs** and add/remove **Items**, but cannot save. Also it is not possible to add cameras to **Locked Layouts**.

To remove Item(s) from Layout on Scene:

1. Select desired item(s) on **Scene**.
2. Proceed with one of the following:
 - Click  to remove **single Item**
 - Open [Context Menu](#) and select *Remove from Layout* (or hit **Del**) to remove **all selected Items**

To remove Item(s) from Layout in [Resource Tree](#):

1. Expand **Users** and locate the desired **Layout** in [Resource Tree](#).
2. Select desired **Item(s)** under specified **Layout**. **Multi-Selection** can be applied (see "[Working with a Resource Tree](#)").
3. Open [Context Menu](#) and select *Remove from Layout* (or hit **Del**).

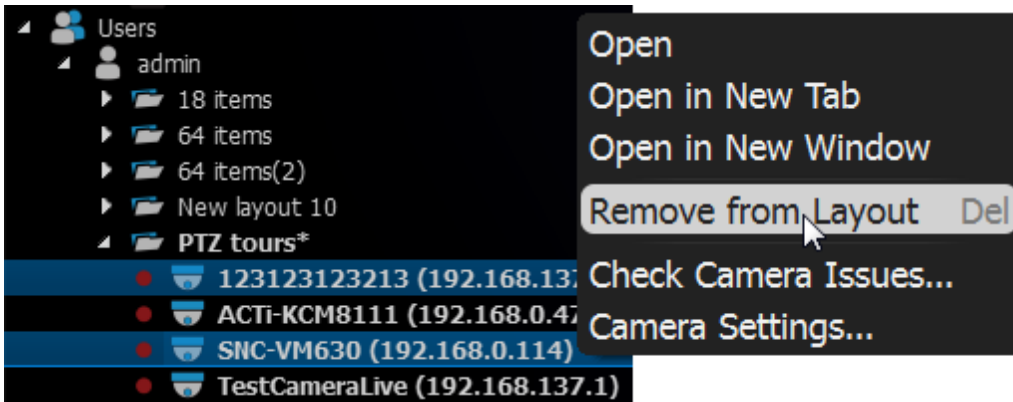


4. Confirm deletion by clicking Yes.

 **Note:** grid cell aspect ratio will be adjusted automatically as per the existing item aspect ratio to occupy space on **Scene**. See "[Changing Cell Aspect Ratio](#)".

Using Backgrounds (Maps or Plans) on Layout (E-Mapping)


Nx Witness offers an ability to change background for **Layouts**. A schematic map or a building plan can be chosen as the background behind cameras for easy camera location and information accessibility to **Users**.

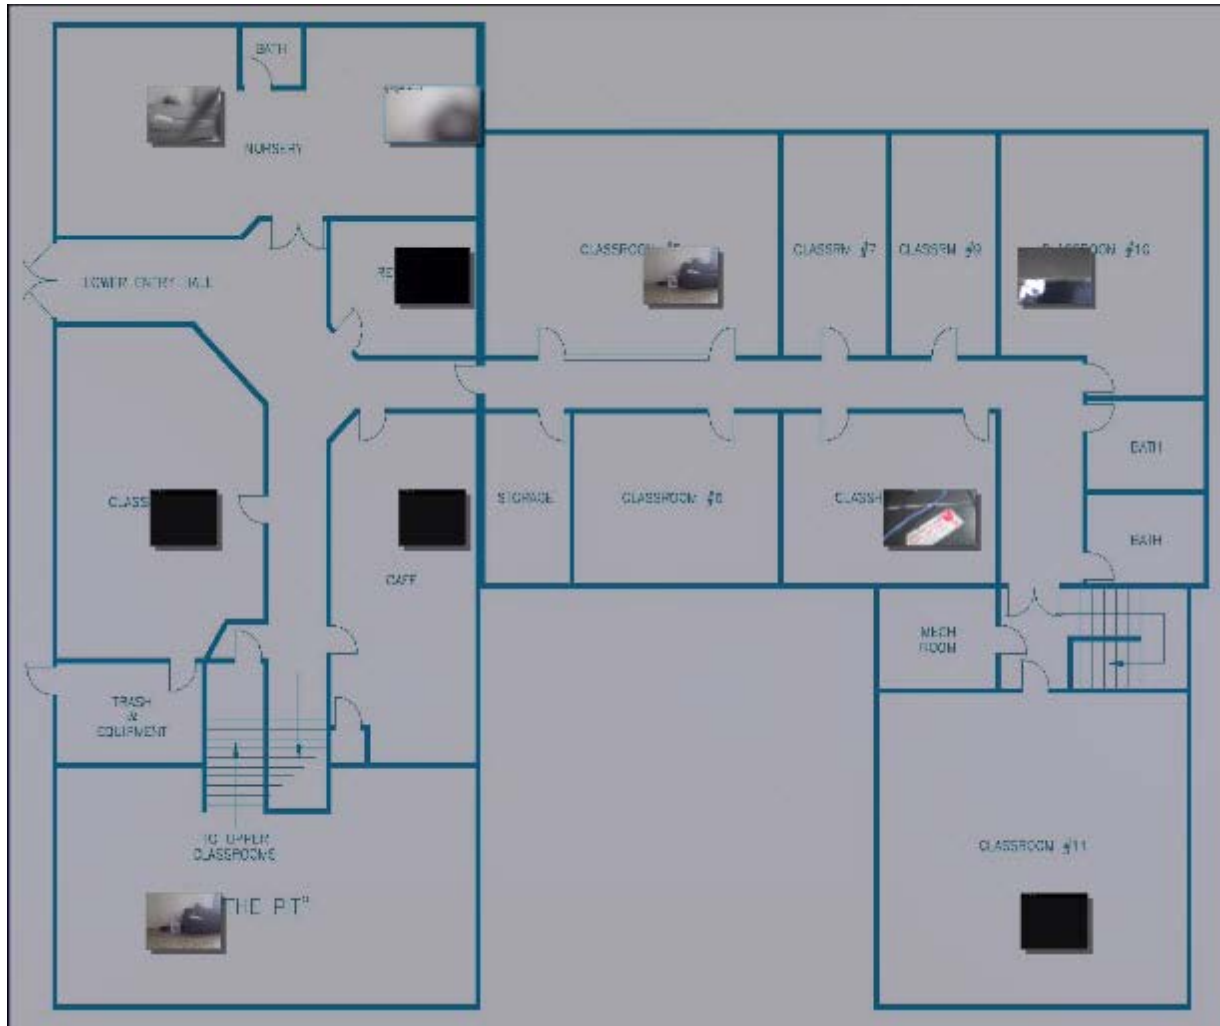

! **IMPORTANT.** Viewers cannot change **Layouts**. It is also not possible to change **Locked Layouts**.


To set background for **Layout** (simple):

1. Open the desired picture on Scene.
2. Right-Click on the image to open [Context Menu](#) and select *Set as Layout Background*:

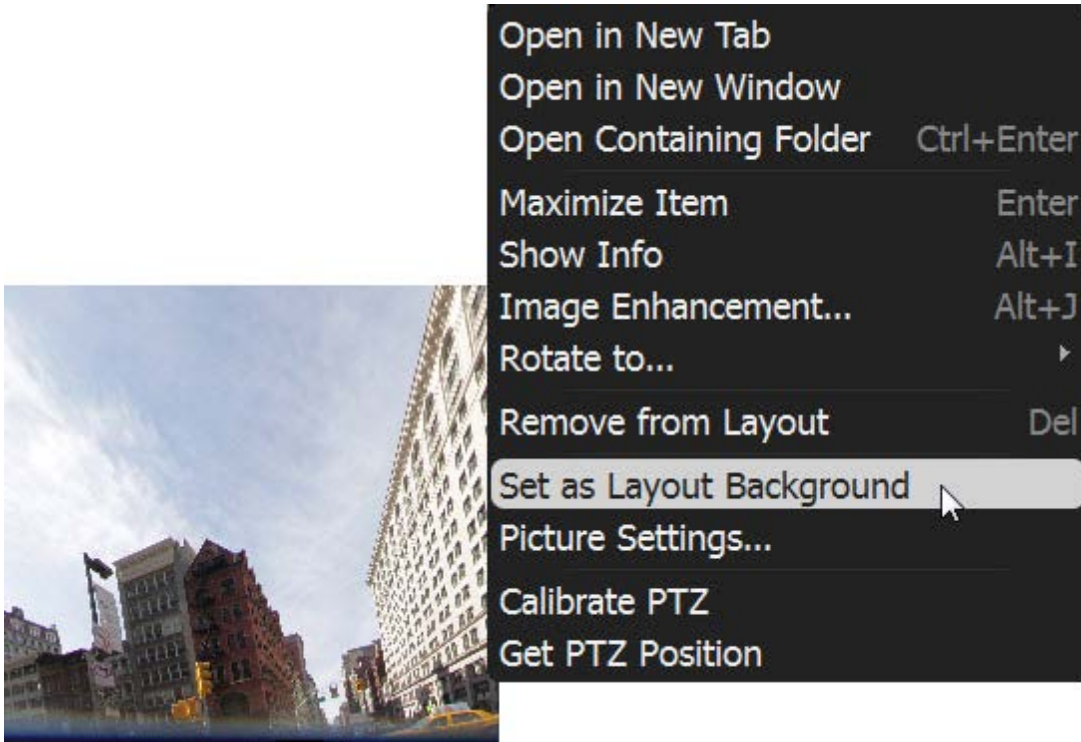

To set background for **Layout** (advanced):

3. Expand **Users** to locate the desired **Layout** in [Resource Tree](#).
4. Open [Context Menu](#) (by clicking on any empty space within **Layout**) and select *Layout Settings...*

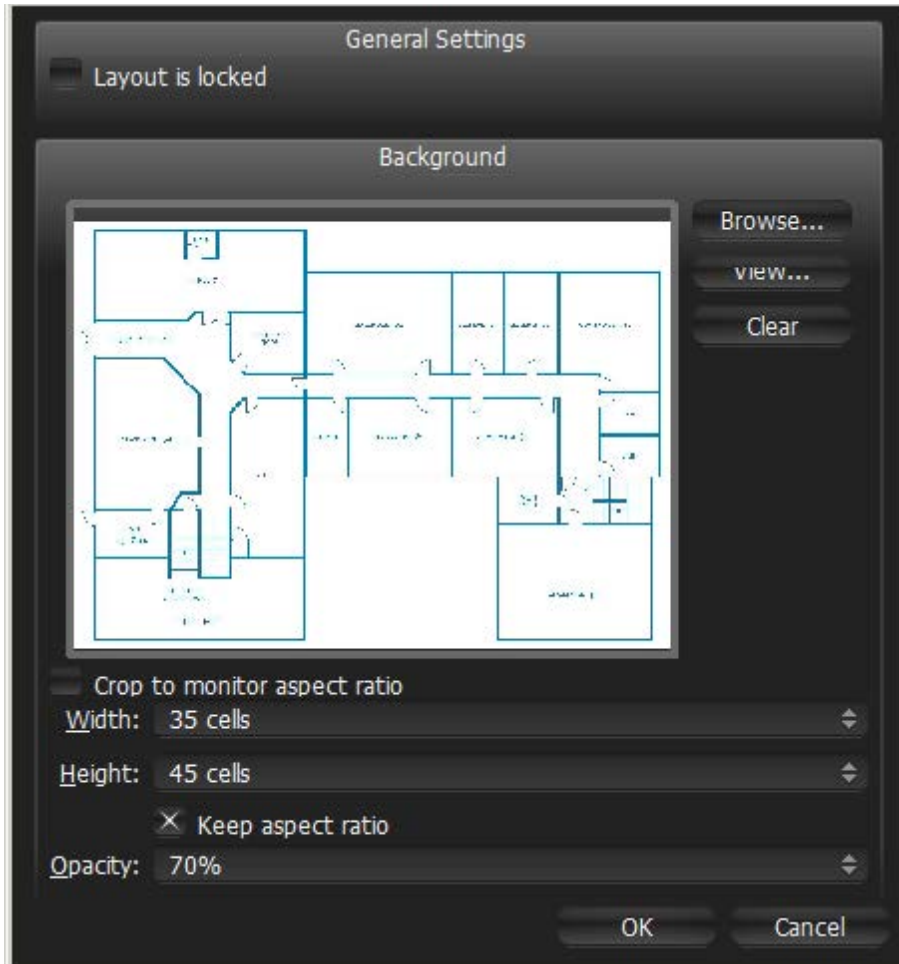


5. Click *Browse...* and select a desired image file to set as background.
6. Configure additional parameters:
 - *Crop to monitor aspect ratio* –if selected, then aspect ratio of the image will be adjusted according to the monitor. For instance, if monitor resolution is 1920x1080 (16:9) and image resolution is 1920x1200 (16:10), then the image will be cropped from both top and bottom.
 - *Width* and *Height* – image dimensions within cells. For instance, it is possible to place twenty items on a 5x4 layout. The greater the dimensions the lesser the cells are.
 - *Opacity* of the image (in percents).
5. Click *OK* when finished. To discard changes, click *Cancel*.
6. Add, Remove, resize or move cameras across background (see "[Adjusting Layout's Appearance](#)").
7. [Lock Layout](#) if needed.
8. Do not forget to [Save Layout](#).

Adjusting Layout's Appearance

Any video manipulation can be performed in the application to customize **Layout**:

- [Selecting Items](#)
- [Zooming while Working with Layouts](#)
- [Moving and Swapping Items within Scene](#)
- [Resizing Items within Scene](#)
- [Using Fit-In-View](#)
- [Changing Distance between Items](#)
- [Changing Cell Aspect Ratio](#)

It's recommended to first make an item selection and configure the look on **Scene**.

 **IMPORTANT.** **Viewer** is allowed to perform any operations, except changing **Locked Layouts**.

Selecting Items

Click on **Item(s)** to **select**. The selected **Items** will expand on the screen. To bring it back to normal, click again. **Arrow keys** may be used to scroll through **Items**.

To select more than one **Item**:

- **Click and Drag** over **Items** with a mouse to draw a selection.
- Hold **Ctrl** and **Click** on several **Items**. **Click again** to remove selection. **Click** without **Ctrl** to discard the current selection.
- Use **Ctrl + A** to select all **Items** on **Scene**.
- **Click and Drag** mouse holding **Shift** to bring the selected items to **Scene**.

The selected items are outlined or filled with a color:



See also how to select **Item(s)** in "[Resource Tree](#)".

Zooming while Working with Layouts

There are several ways to **Zoom** while working with Nx Witness.

- **Zoom whole Layout** - Use **ALT + Mouse Wheel**
- **Zoom while a single Item is Fullscreen** - Use **Mouse Wheel** (see "[Zoom](#)")
- **PTZ/Fisheye Zoom** - use "+" and "-" buttons on Item (see "[Setting up PTZ on PTZ and Fish-Eye Cameras](#)").

Moving and Swapping Items within Scene

Scene consists of cells. Each cell may contain one **Item**. The initial aspect ratio of a cell is **16:9** but it can be changed to **4:3** (see "[Changing Cell Aspect Ratio](#)").

! **IMPORTANT.** It is not possible to change **Locked Layouts**.

In order to move **Item**, **Click** on it and **Drag** it to a new position (grid cell borders are visible while in motion). Multiple items can also be moved.

If the desired position is already occupied, **Items** will be swapped (if possible).



If swapping is not possible, the target cell will be marked red:



If bigger **Item** is being replaced by a smaller one, they will swap sizes as well as positions.

Resizing Items within Scene

! **IMPORTANT.** It is not possible to change **Locked Layouts**.

Resizing items is an easy operation in Nx Witness. To resize, select the edge on **Item**, **Click and Drag** the mouse to resize.

Item is resized according to its proportions, so it can occupy 1, 4, 9 cells etc.

If resizing is possible, the new cells are highlighted in green:



If resizing is not possible, the cells will appear red:



In this case the best practice is:

1. **Move the entire Scene** using a **Right-Click Drag**.
2. **Resize an Item** to occupy the available space.

OR

3. **Move the desired Item** away from the rest of **Items**
4. **Resize the Item** to occupy the available space.

Using Fit In View

This feature allows users to revert the view to maximum in order to view all **Items** conveniently. This can also be used when **zooming** or **moving** the entire **Scene**.

Fit In View can be performed by **Double-Clicking** on any empty space on **Scene** (or by **Right-Clicking** on [Context Menu](#) and selecting *Fit in View*).


Also **Fit In View** is performed automatically if:

- Change in view mode: **Window** or **Fullscreen** (see "[Full Screen and Window Mode](#)")
- Change in Nx Witness window size.

Changing Distance between Items

This feature is used when multiple **Items** need to be stitched together or positioned closer to each other. A good example is a panoramic view derived from four individual single-sensor cameras to compose a 180 degree view.

To adjust the distance between **Items**, use *Change Cells Spacing* [Context Menu](#) item or **Ctrl + Mouse Wheel** on **Scene**:

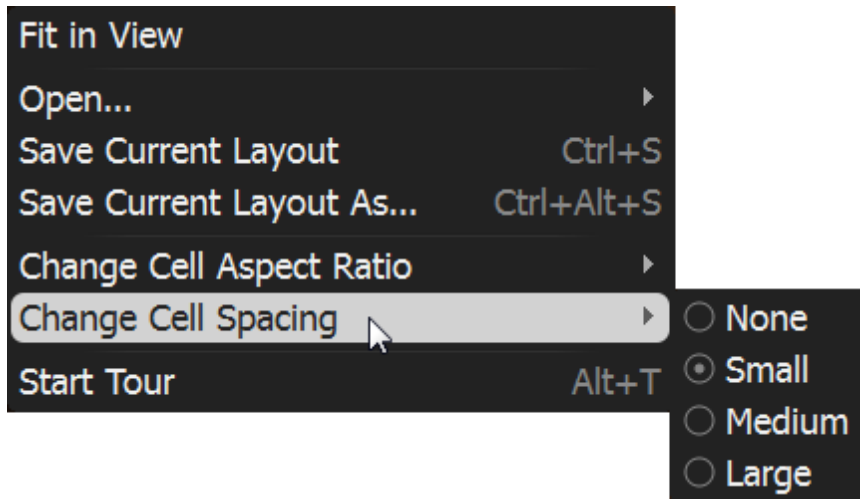


! IMPORTANT. If aspect ratio of an item is not **4:3** or **16:9** the extra space will remain.

Changing Cell Aspect Ratio

Cameras provide video in **4:3**, **16:9** or custom format. Grid cells aspect ratio is changed dynamically per item's aspect ratio to occupy **Scene** space.

This feature is used to occupy **Scene** space efficiently: **cell aspect ratio** should be equal (or similar) to **Camera aspect ratio**.

Additionally, the aspect ratio of cells can be changed manually. To proceed, use *Change Cell Aspect Ratio* [Context Menu](#) item (invoke [Context Menu](#) on any empty space on **Scene**):

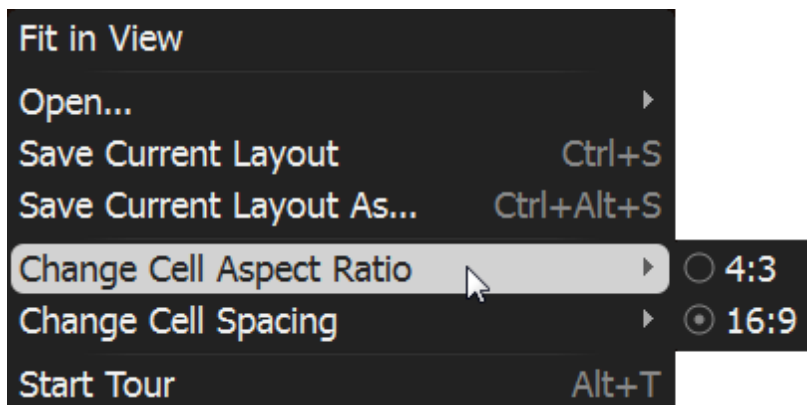


Zoom Windows


Nx Witness provides a great feature that allows users to create an unlimited number of digital **Zoom Windows** for a single **Camera**. These windows can be placed on **Layouts** and saved for future use.

! **IMPORTANT.** It is not possible to use **Zoom Windows** on **Locked Layouts**.

To configure **Zoom Window** for **Camera**:

1. Open **Camera**.
2. Click on  to drag a rectangle on an item. A new item will appear on **Scene**.
3. Move **Zoom Window** or resize it by dragging its edges. **Zoom Window** can be moved between **Cameras** on **Scene**.
4. To close **Zoom Window**, close the corresponding item.



 **Note:** it may be very convenient to use Zoom Windows of fish-eye **Cameras**. See "[De-warping Fish-Eye Cameras](#)" for more information.


Locking Layouts

To prevent accidental changes to **Layouts**, Nx Witness offers a locking capability. Once locked, the following cannot be performed:

- [Adding](#) or [Removing](#) items
- [Change Background](#)
- [Moving and Swapping Items within Scene](#)
- [Resizing Items within Scene](#)
- [Deleting Layouts.](#)

To lock **Layout**:

1. Open [Context Menu](#) (click on any empty space within **Layout**) and select Layout Settings...
2. Check *Layout is locked*.

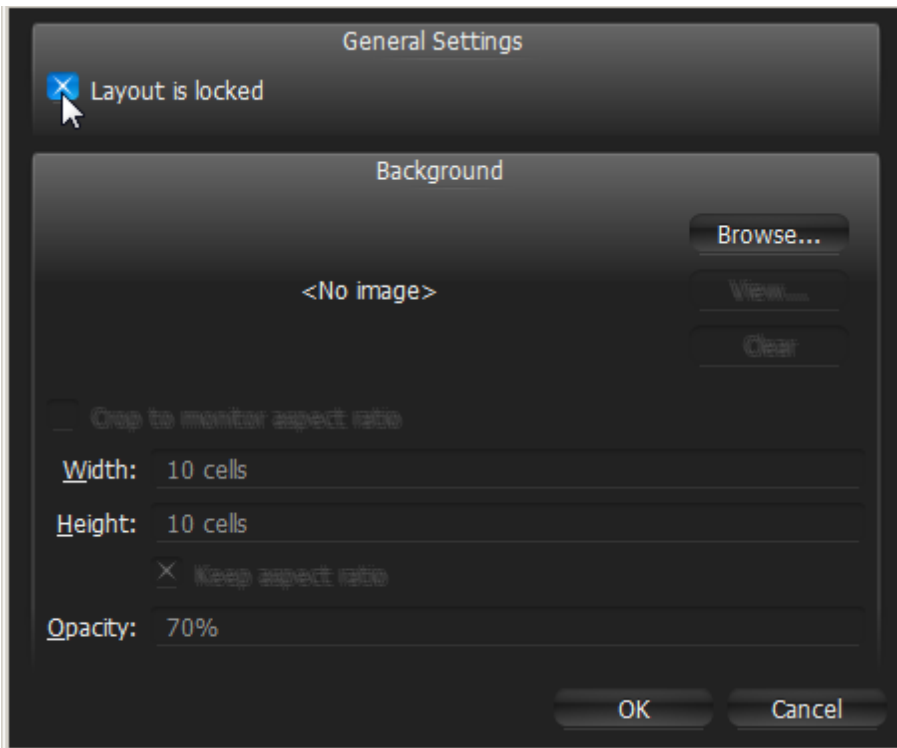

3. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.

Working with Several Nx Witness Windows


It is possible to set up **Layouts** on multiple Nx Witness windows in a **multi-monitor environment**.

! IMPORTANT. This feature is not supported on **Mac OS**.

To open a new window, click on *Main Menu* → *New* → *Window* (or press **Ctrl + N**).

Also selected **Items** may be opened in a new window:

1. Select desired **Items** in [Resource Tree](#) or on Scene (**Multi-Selection** can be applied, see "[Selecting Items](#)").
2. Invoke [Context Menu](#) and select **Open in New Window**.

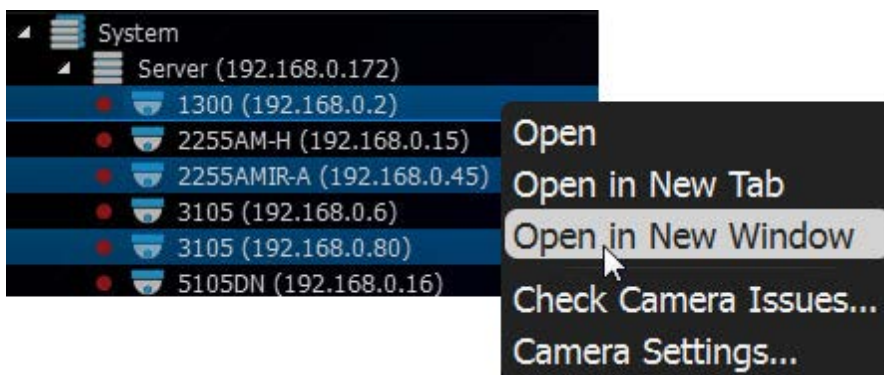


Finally, it is possible to **drag Items from one window to another** (only **Administrators** can drag **Items** to predefined **Layouts**):

1. Select desired **Items** in [Resource Tree](#) or on Scene (**Multi-Selection** can be applied, see "[Selecting Items](#)").
2. Hold **Ctrl** and **Drag** selected **Items** to a new window.

Video Wall introduces much more functionality when working with several monitors. See "[Video Wall Management](#)" for details.

Saving Layouts

To retain any changes made to **Layout**, **User** must save it.


 **Note:** current playback position and selection is saved for **Layout** as well. After Nx Witness is closed, all saved layouts that were opened in **Tabs** prior to closing, will be restored.

Layout should always be saved in case of any changes. If any changes are made, an asterisk will appear in the corresponding **Tab** and in [Resource Tree](#):




To save **Layout**:

- Open [Context Menu](#) on **Scene** (on empty space) and select *Save Current Layout* (or press **Ctrl + S**). **Layout** will be saved to the previously assigned file name (the **Tab**'s caption).
- Open [Context Menu](#) on **Scene** (on empty space) and select *Save Current Layout As* (or press **Ctrl + Alt + S**). **Layout** will be saved as specified by **User**:

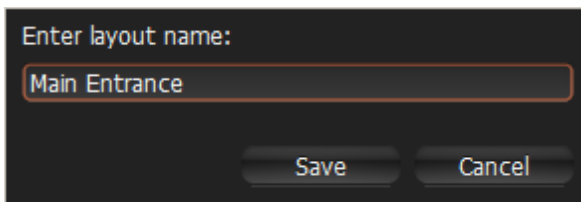


- Find the desired **Layout** in [Resource Tree](#), invoke for [Context Menu](#) and select *Save Layout*.

 **IMPORTANT.** Saved **Layout** is activated immediately (if running on multi-machines, all saved changes to **Layout** will reflect on all machines identically). Refer to "[Opening and Closing Saved Layouts](#)" for more information.

Assigning Layouts to Users (Admin Only)

To duplicate **Layout** for another **User(s)**, **Drag and Drop Layouts** within [Resource Tree](#):

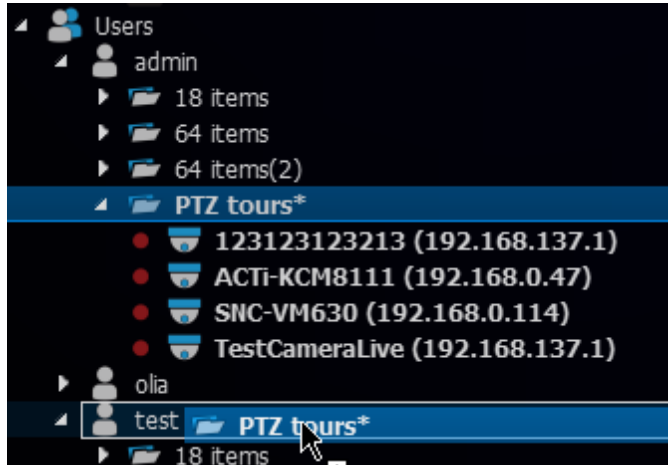

Administrator can then modify **Layouts** as needed.

Deleting Layouts (Admin Only)

To delete **Layout** from [Resource Tree](#):

1. Find and select desired **Layout(s)** in [Resource Tree](#).
2. Invoke on [Context Menu](#) and choose *Delete Layout* (or press **Del**).
3. Accept deletion by clicking on *Yes* or press *Cancel* to discard all changes.


If the layout that is opened on another computer is deleted, all items **will disappear**.

 **Note:** [Locked Layouts](#) cannot be deleted!

Opening and Closing Saved Layouts

As **User** logs into Nx Witness, all existing **Layouts** are listed in [Resource Tree](#). To open an existing **Layout**, find the desired layout in [Resource Tree](#) and perform one of the following:

- **Drag and Drop Layout** from [Resource Tree](#) to **Scene**:

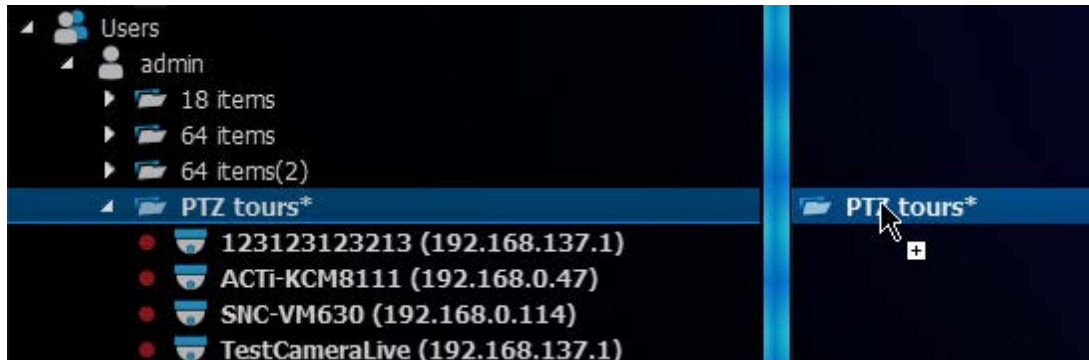

- Open [Context Menu](#) and choose *Open Layout* (or press **Enter**).

To open multiple **Layouts**, select the desired layouts in [Resource Tree](#) (using **Multi-Selection**) and do one of the following:

- Drag selection to **Scene**.
- Open [Context Menu](#) and choose *Open Layouts*.

Layouts will be opened in separate **Tabs**. If **Tab** already contains this **Layout**, it will not be opened again.

 **Note:** after Nx Witness is closed, all saved **Layouts** opened in **Tabs** will be restored when **User** logs back in.


Backing up and Restoring Nx Witness Database

Nx Witness provides simple mechanism to perform backup and restore of system settings. It is done by backing up the Nx Witness database as a single file. Database contains all system configuration.

! IMPORTANT. It is recommended to perform restore operation on the same computer backup has been saved.

To back up Nx Witness database:


1. Open [Main Menu](#) and go to *System Administration*.

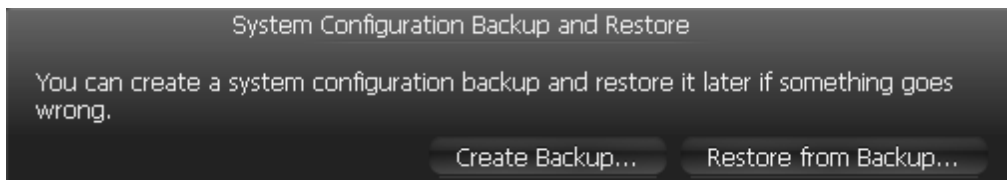


2. Click *Create Backup...* The window will open. Choose the desired location on the local file system to save the backup then click *Save*.

To restore Nx Witness settings from backup:

1. Open [Main Menu](#) and go to *System Administration*.

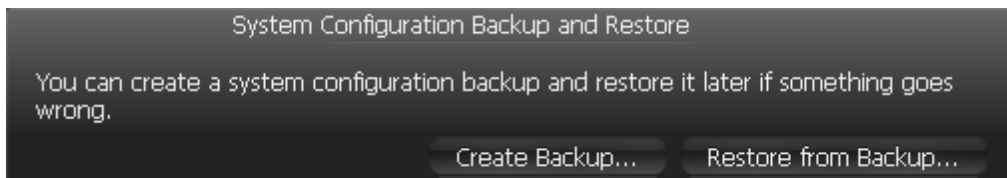

2. Click *Restore from Backup...* The window will open. Choose the backup file then click *Open*.

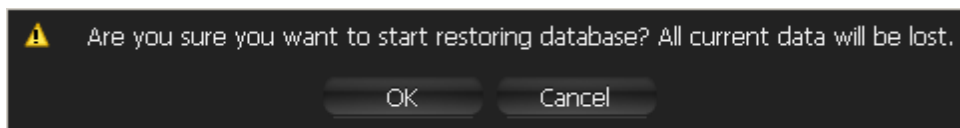

3. If click OK, database will be restored.

! IMPORTANT. It may be necessary to restart **Server s** and Nx Witness Clients after restore.

Video Wall Management (Windows Only)

Nx Witness provides the unique feature to control multiple displays from a single workplace called **Video Wall**.

To enable **Video Wall** feature it is necessary to obtain and activate **Video Wall Licenses** (see "[Obtaining and Activating Nx Witness Licenses](#)"). Each one allows controlling video wall from a single computer (one session) or extend Video Wall on 2 displays. For instance 4 Licenses allow user to display **Video Wall** on 8 monitors and control it from 4 Clients concurrently.


It is necessary to obtain a certain permission to be able to configure and control **Video Walls**. See [Introducing User Roles](#) for details.

This section provides full information about **Video Wall** installation, configuration and control:

- [Video Wall Architecture](#)
- [Configuring Video Walls](#)
- [Controlling Video Wall](#).

Video Wall Architecture

Video Wall architecture is displayed on the picture below:

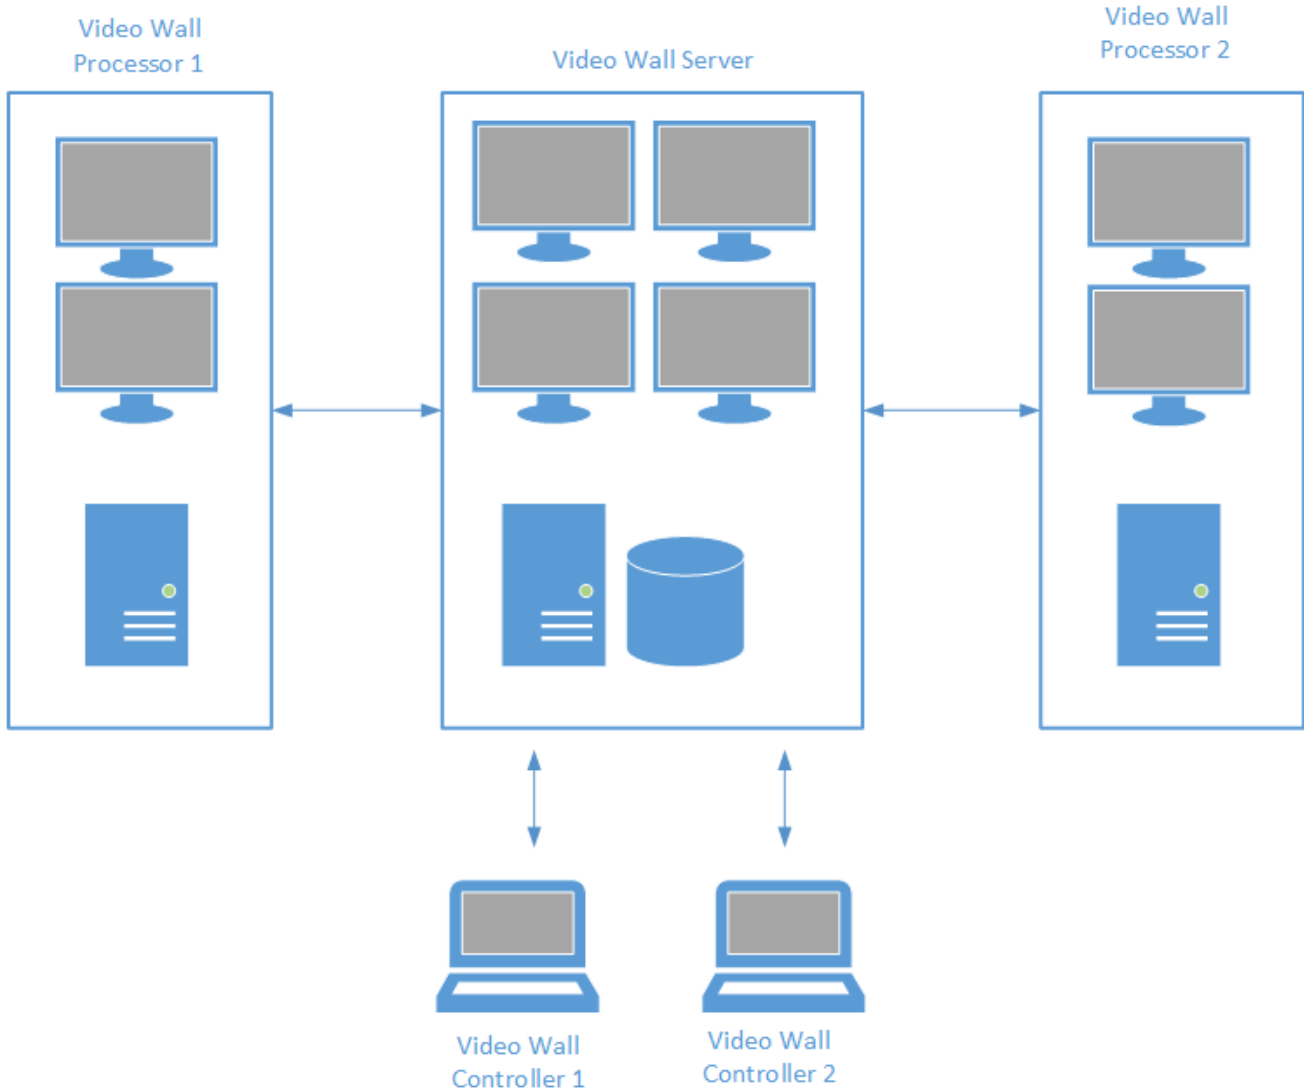

Video Wall Server is the computer that hosts the main database of Video Wall Cluster. So far it is recommended that only one server is installed in Video Wall Cluster. Video Wall Displays can be connected to this computer and it can act as **Video Wall Processor** as well.

Video Wall Processor is the computer Video Wall Displays are connected to. Depending on its configuration it can handle one or several displays. HD Witness can contain almost unlimited number of Video Wall Processors that can be combined in Video Wall Cluster.

Video Wall Controller is any computer that can connect to Video Wall and control it. No special requirements are applied to it, it can even be a laptop. The only requirement is: video adapter should support OpenGL > 2.0. Almost every modern video adapter does support it, however video drivers should be updated.

Additionally, all computers that are parts of Video Wall Cluster (clients and controllers) should be **located in the same network**.

In order to operate Video Wall properly, HD Witness should be installed on every computer of Video Wall Cluster:

- Video Wall Server: **Full installation**.
- Video Wall Processor(s): **Client only installation**.
- Video Wall Controller(s): **Client only installation**.

If all components are installed on one computer, choose **Full installation**.

Configuring Video Walls

Initial Video Wall configuration is performed in several steps:

- [Configuring Video Wall](#)
- [Configuring Layout of Video Wall Displays](#)
- [Configuring Video Wall on Several Computers](#)
- [Switching to Video Wall Mode](#)
- [Deleting Video Wall and its Elements](#).

Since a single computer has a limited number of available video outputs, it can handle limited number of displays. To extend Video Wall it is necessary to add additional computers and combine them to Video Wall Cluster. See "[Configuring Video Wall on Several Computers](#)".

To change configuration refer to the following sections.

Creating new Video Wall

To enable **Video Wall** feature it is necessary to obtain and activate **Video Wall Licenses** (see "[Obtaining and Activating Nx Witness Licenses](#)"). Each one allows controlling video wall from a single computer (one session) or extend Video Wall on 2 displays. For instance 4 Licenses allow user to display **Video Wall** on 8 monitors and control it from 4 Clients concurrently.

To create Video Wall:


1. Open [Main Menu](#) and choose *New* → *Video Wall*.
2. Enter the name of Video Wall and click *OK* or press **Enter**.

Configuring Layout of Video Wall Displays


Nx Witness can display video on unlimited number of displays. To make a computer displays part of Video Wall (Video Wall Processor) it is necessary to perform the following settings **on that computer**:

1. Right Click on **Video Wall** in [Resource Tree](#) and choose *Attach to Video Wall*.
2. Configure **Video Wall Screens**. Nx Witness automatically detects the number of displays connected to the computer.


- To add screen click on "+" in the dialog:

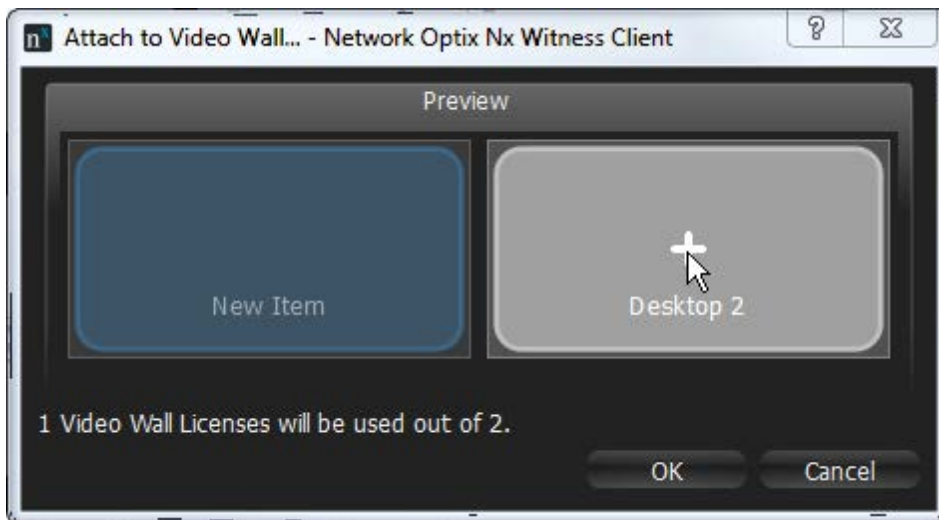


- To remove screen click on "X":

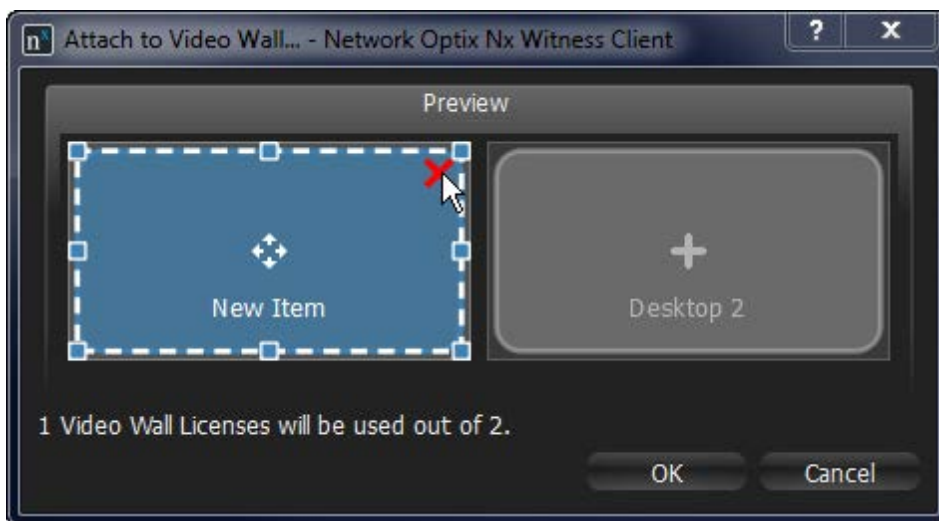

- To resize Screen drag the edges:

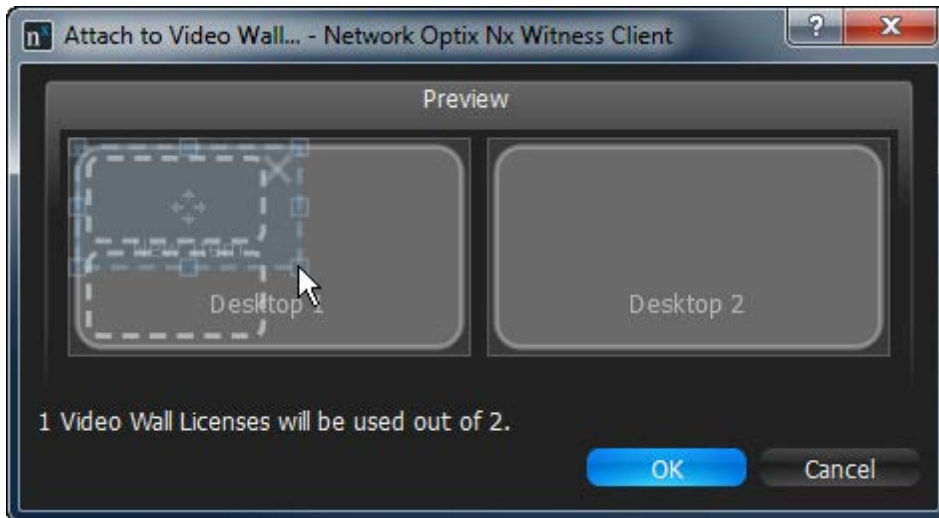


- To move Screen click at center and drag:

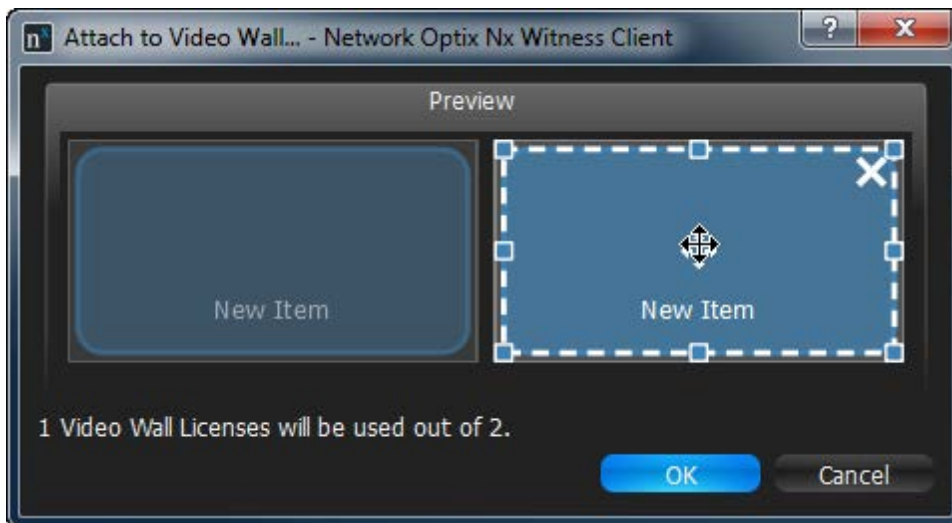


The following scenarios are available:


- Most common – one virtual Screen represents one physical Display. Just click on every single Screen.
- one virtual Screen is stretched on several physical Displays:

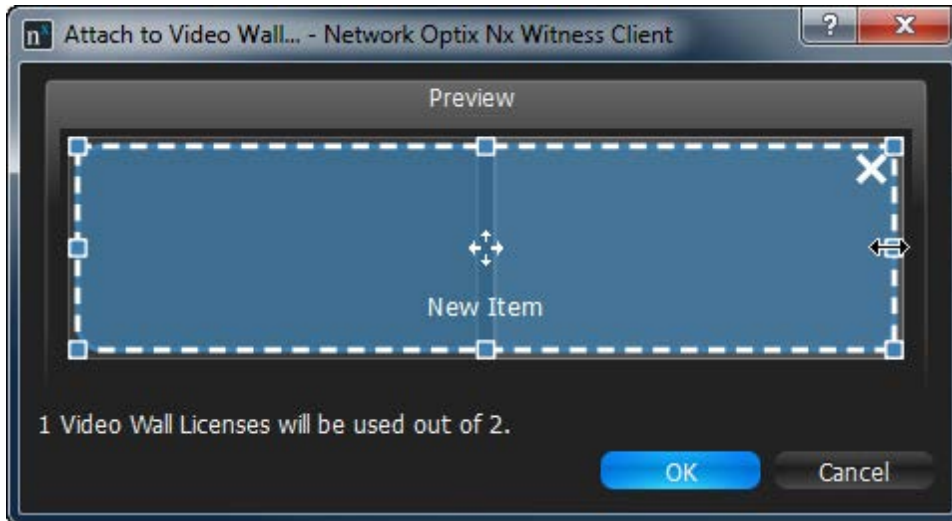


- one physical Display contains several virtual Screens in various combinations:

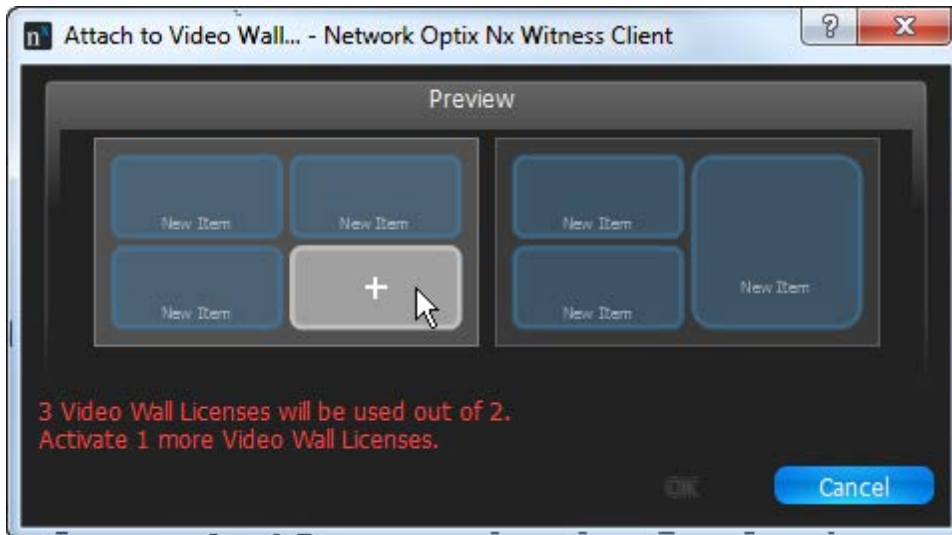


3. After the screens are configured, Video Wall Layout will be opened:

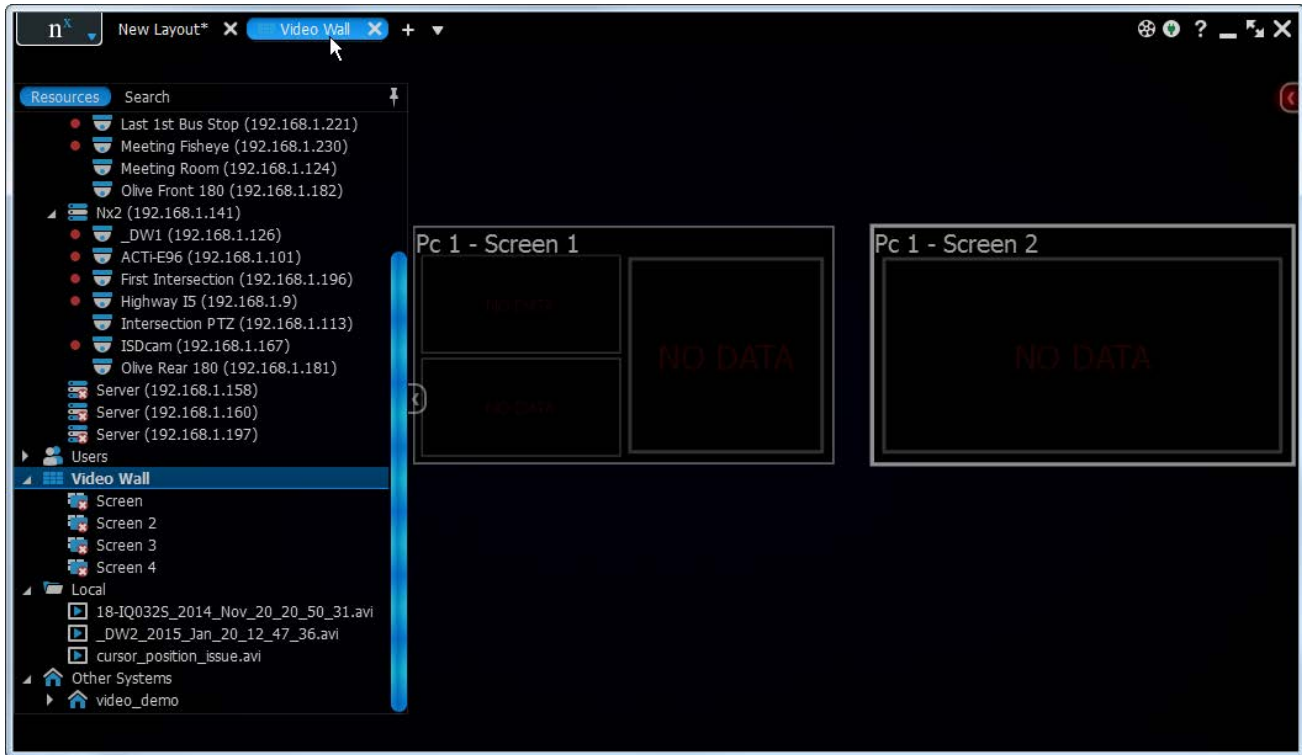

 **Note:** It is not possible to open videos in this Layout.

4. Rename Displays in Tree.


5. Calibrate Video Wall. This means the position and size of virtual Displays should coincide with the physical-ones:

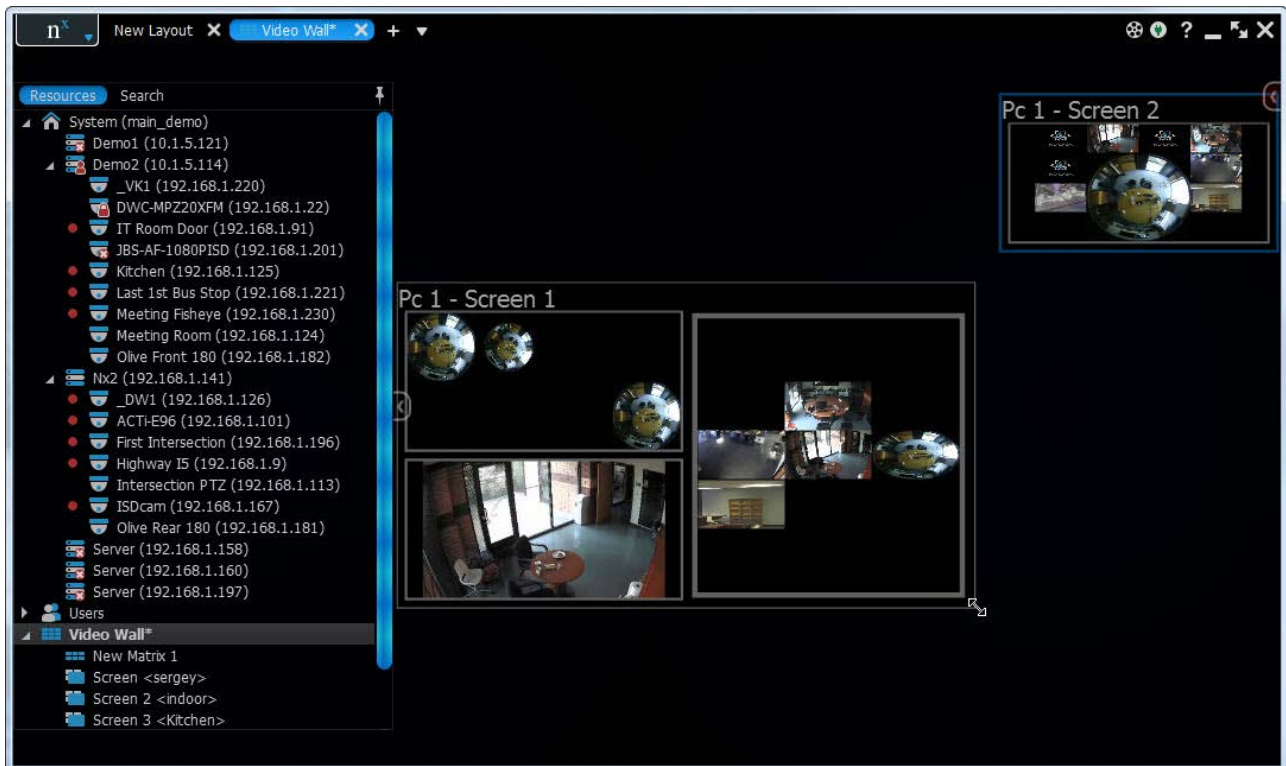

- To move/swap Displays click on their header and drag
- To resize Displays drag their edges.

To simplify the calibration process it is possible to display identification information on a particular physical Display. To do so right click on the desired Virtual Display and select *Identify*. This initiates displaying identification information on the corresponding physical Display.

5. Fill up Screens. It is possible to place a single Item or whole Layout on each virtual Screen:

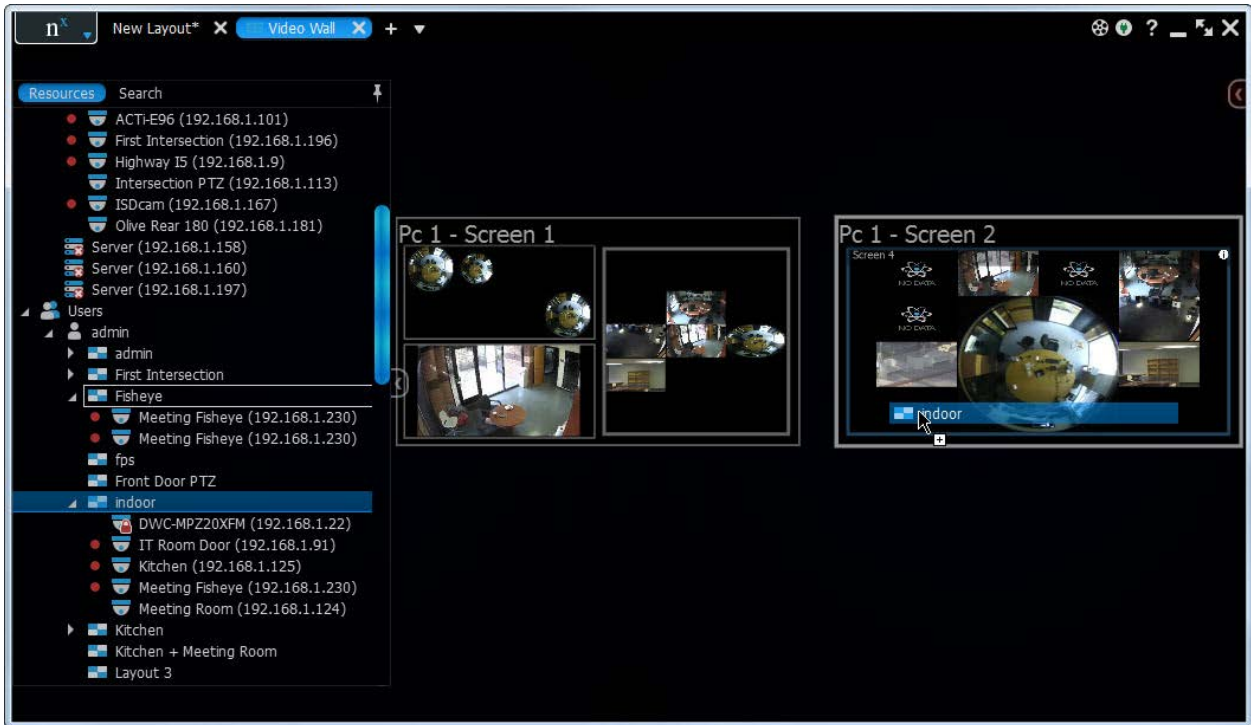

To remove Layout from Screen locate it in [Resource Tree](#), or on Video Wall Layout, Right-click and choose *Detach Layout*.

6. To save changes right click on Video Wall in [Resource Tree](#) and choose *Save Current Matrix...* and enter the desired name.

To restore Video Wall View expand Video Wall in [Resource Tree](#) right click on saved Matrix and choose *Load Matrix...*

The configuration is almost done. To finalize it is necessary to [Switch Video Wall Processor to Video Wall Mode](#). After Video Wall has been started on Video Wall Processor, the current configuration can be changed on Video Wall Controller.

To open Video Wall on Video Wall Controller do one of the following:

- Drag Video Wall on Scene
- Right Click on desired **Video Wall** in [Resource Tree](#) and choose *Open Video Wall(s)*.

Video Wall Layout will be opened.

Switching to and Exiting from Video Wall Mode


To be able to control Video Wall it is necessary to switch Video Wall Processor to Video Wall Mode. **This should be done on Video Wall Processor.**

Usually Video Walls are controlled from Video Wall Controllers and the computers the displays are connected to are one easily accessible. So it is recommended to set up automatic switching to Video Wall Mode. To do so:

1. Right Click on **Video Wall** in [Resource Tree](#) and choose *Video Wall Settings*.
2. Click on *Launch video wall when Windows starts* and click *OK*.

To switch to Video Wall Mode right Click on **Video Wall** in [Resource Tree](#) and choose *Attach to Video Wall* and click *Yes* on the dialog window.

Several instances of Client will be launched. The client will be switched to Video Wall mode and will become inoperable. Then it is possible to change settings and control Video Wall from Video Wall Controller.

To switch back from Video Wall to standard mode it is necessary to close all Client instances (**ALT+F4**) and launch Client once again. In this case operator won't be able to control displays connected to this Video Wall Processor and the corresponding Screens will be displayed in [Resource Tree](#) as **offline** (with  sign).

Configuring Video Wall on Several Computers

Usually one PC can handle limited number of Displays. In this case if it is necessary to increase the number of Video Wall Displays it is necessary to add Video Wall Processors. Thus, Nx Witness is has great scalability and flexibility in terms of Video Wall Configuration.

To add Video Wall Processor

1. Run Client of the PC then should be added to the current Video Wall (physical Displays should be connected to it).
2. Right Click on desired **Video Wall** in [Resource Tree](#) and choose *Attach to Video Wall*. Repeat all steps that are described in the "[Configuring Layout of Video Wall Displays](#)" section.
3. Switch to Video Wall Mode (see "[Switching to and Exiting from Video Wall Mode](#)").
4. Repeat the steps above on each Video Wall Processor.

After that Video Wall will be extended and will include Displays connected to newly attached Video Wall Processors.

Deleting Video Wall and its Elements

The following Video Wall Elements can be deleted:

- Screen. This results in stopping video wall in the corresponding physical Display.
- Saved configuration (Matrix).

To delete, locate the desired element in [Resource Tree](#) Right Click and choose *Delete*, then confirm. The Screen can be deleted from Video Wall Layout as well (Right-click and choose Delete).

The whole video Wall can be deleted as well. To delete it locate it in [Resource Tree](#) Right Click and choose *Delete*, then confirm. This action will delete all Screens and configurations related to this Video Wall and will stop Video Wall on every single Video Wall Processor.

Controlling Video Wall

Nx Witness allowa users to control Video Wall by changing the layouts that are placed on Vide Wall. The process is simple: as soon as Video Wall Display is opened on Video Wall Controller, the user operates with is as with usual Layout. It is possible to change layout, sekk into archive, perform search etc. In the meantime all changes made on Video Wall Controller will be immediately displayed on Video Wall itself. See "[Controlling Video Wall Displays](#)".

Also it is possible to push the desktop view from Video Wall Controller to Video Wall. See "[Pushing Operator's Screen on Video Wall](#)".


Controlling Video Wall Displays

To control Video Wall:

1. Open Video Wall on Video Wall Controller (do one of the following):

- Drag Video Wall on Scene
- Right Click on desired **Video Wall** in [Resource Tree](#) and choose *Open Video Wall(s)*.

Video Wall Layout will be opened

 **Note:** It is not possible to open videos in this Layout.

2. Double-click on the desired Video Wall Screen to swith to control mode. The layout of this screen will be opened.

3. Do any necessary operation as it were a regular Layout:

- [Adding Items to Layouts](#)
- [Removing Item\(s\) from Layouts](#)
- [Adjusting Layout's Appearance](#)
- [Selecting Items](#)
- [Moving and Swapping Items within Scene](#)
- [Resizing Items within Scene](#)
- [Changing Distance between Items](#)
- [Changing Cell Aspect Ratio](#)
- [Zoom Windows](#)
- [Working with Several Nx Witness Windows](#)
- [Navigating through Archive and Live](#)
- [Forensic Analysis](#)
- [Pushing Operator's Screen on Video Wall](#).

All changes will be reflected **immediately** on the corresponding Display.

4. To switch to another Screen repeat the steps above.

Pushing Operator's Screen on Video Wall

Nx Witness provides the ability to push Operator's screen to Video Wall. This is done from **Video Wall Controller**:

1. Open Video Wall on Video Wall Controller:
 - Drag Video Wall on Scene
 - Right Click on desired **Video Wall** in [Resource Tree](#) and choose *Open Video Wall(s)*.
2. Right-click on the desired Screen and choose Push my Screen. Everything that displayed on the operator's desktop will be send to Video Wall Screen (including sound).
3. To stop broadcast locate the desired Screen in [Resource Tree](#), or on Video Wall Layout, Right-click and choose *Detach Layout*.

Playback in Nx Witness

Nx Witness offers a smooth playback feature. See "[Playback Panel](#)" for more information on **Playback** interface.

The following can be played back:

- **Cameras** (see "[Watching Cameras in Nx Witness](#)"). It is possible to view archive and live in **Time Line** among other features helping **User** to perform search archived footage.
- **Local files: Video Files, Images** (see "[Playing Back Local Files in Nx Witness](#)").

The following operations can be performed in addition to playback:

- [Forensic Analysis](#)
- [Exporting](#)
- [Adjusting Volume](#)
- [Tours](#)

All operations described in this section do not require administrative privileges. However, some operations may require certain permissions. See "[Introducing User Roles](#)" for details.

Watching Cameras in Nx Witness

Nx Witness provides a powerful and easy camera playback engine that enables users to quickly find a video fragment, perform forensic analysis, capture screenshots and export video in just a few clicks.

This section provides a detailed description on camera playback. The following operations can be performed:

- [Navigating through Archive and Live](#)
- [Searching through Archive](#)

Note: It is recommended to read the following section prior to moving on to the next step: "[CPU and Bandwidth Saving during Playback \(RADASS\)](#)".


Lastly, videos can be displayed in a slide-show mode. See "[Tours](#)" for more details.

CPU and Bandwidth Saving during Playback (RADASS)


Nx Witness's architecture provides significant CPU and network bandwidth savings by acquiring multiple streams from a single camera: **High Resolution** (regular) and **Low Resolution** (approximately 10 times less bandwidth). If there is not enough bandwidth between **Client** and **Server** to display the **High Resolution** stream while viewing a camera, then the camera is automatically switched to **Low Resolution** mode.

In case of insufficient CPU, a user may experience difficulties with displaying too many videos simultaneously (examples: running over 20 full high resolution videos at the same time, fast forwarding multiple full high definition videos at the x16 speed, etc.). In this instance, cameras are switched to a **Low Resolution** stream. As a result, CPU will yield a much smoother playback.

Additionally, it is possible to choose resolution **manually**. To do so, **Right-Click** on Scene's empty space and choose *Change Resolution...* The changes are applied once to the entire **Layout** and will be reverted back to **Auto** whenever a user re-opens **Layout**.


 **Note:** this feature requires support of **camera dual-streaming**.

Lastly, Nx Witness offers significant bandwidth savings by auto-pausing video. If viewing video from **Camera** in fullscreen, the video will be paused due to inactivity after a certain period of time. To set this option, open [Main Menu](#) and check *Auto Pause Video*, then set the desired time interval:

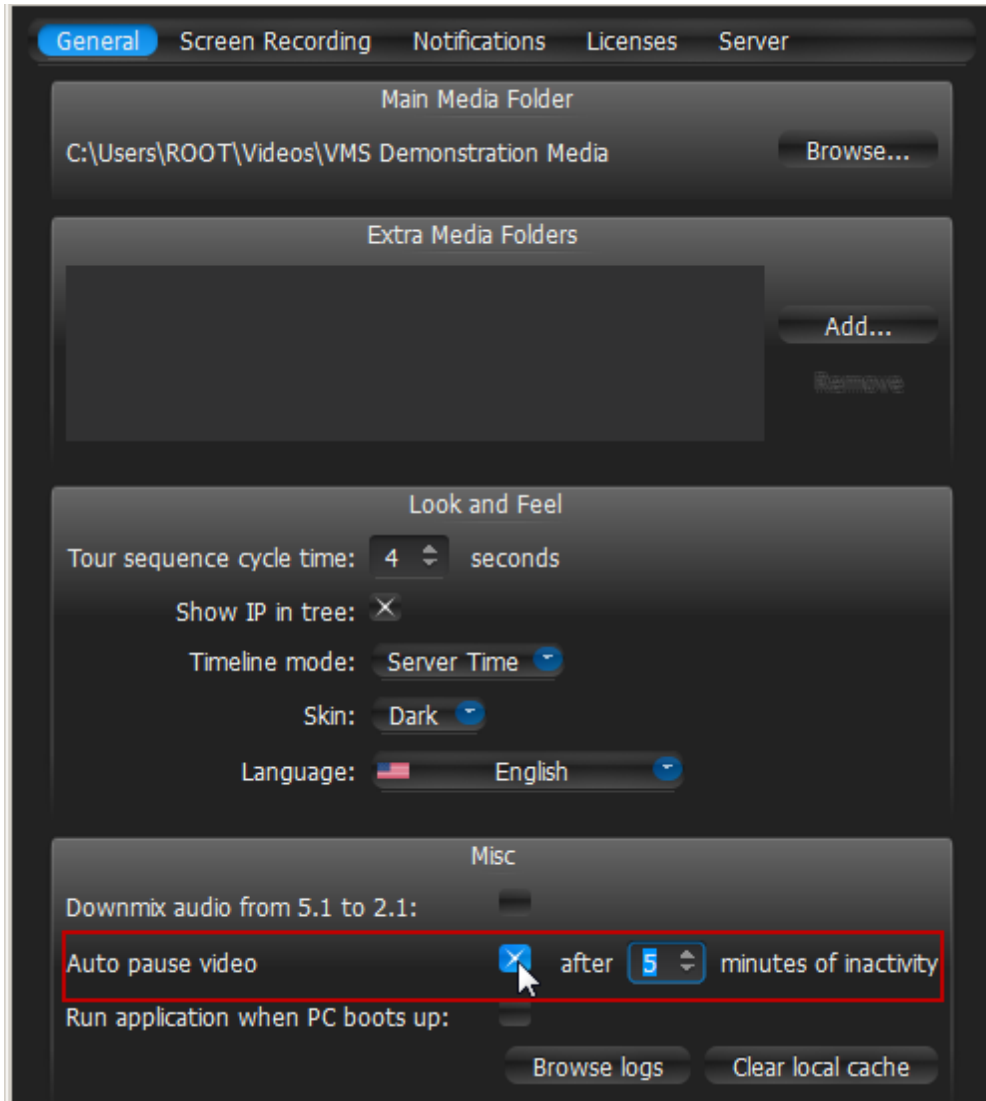


Navigating through Archive and Live

It is very easy to navigate through **Live** and **Archive** in Nx Witness. Here are some tips and shortcuts.

 **IMPORTANT.** It is only possible to navigate through **recorded fragments (chunks)**. **Position Slider** to the dark area will jump to the next available recorded fragment (displayed in green on **Time Line**).

By default, all **Cameras** are set to display **Live** if opened for the first time.

 **Note:** all **Users** are allowed to view cameras **Live**. However, to view Archive, **Viewers** must have the appropriate **permissions**.

Search **Archive**:

- **Click** on any desired position on **Time Line** or **Time Scale**.
- **Drag Time Slider** to the desired position. The picture will refresh while dragging.

Time Scale navigation:



- Zoom **Time Scale** using **Mouse Wheel** for finer selection
- Move **Time Scale Scrollbar**
- **Double Click** on **Time Scale Scrollbar** to zoom out

Go to **Live**:



- Press **LIVE** or **L**
- Move **Position Slider** all the way to the right

Play/Pause: Press  or **Space**



Fast Forward or Rewind:

- Press  or **Ctrl + Right Arrow** to increase speed
- Press  or **Ctrl + Left Arrow** to decrease speed
- Available speeds on play: -16x, -8x, -4x, -2x, 1x, 2x, 4x, 8x, 16x
- Available speeds on pause: -2x, -1x, -0.5x, -0.25x, 0x, 0.25x, 0.5x, 1x, 2x
- Use **Speed Slider**: very left position is -16x (-2x on pause), very right one – 16x(2x on **Pause**)
- **Click on Speed Slider** to change speed temporarily and then revert to 1x (0x on **Pause**)
- **Drag Speed Slider** to change speed permanently (or use **Mouse Wheel** on **Speed Slider**)
- If **Rewinding** while in **Live** mode, the position will be switched to **Archive**
- If **Fast Forwarding** while viewing archive, camera(s) will be switched to **Live** if the very right position is reached.

Previous/Next Frame (Pause only):

- Press  or **Ctrl + Right Arrow** to skip to the next frame
- Press  or **Ctrl + Left Arrow** to skip to the previous frame
- Use **Mouse Wheel** on **Speed Slider** when on **Pause**

Previous/Next Recorded Fragment:


- Press  or **Ctrl + Right Arrow** to skip to the next frame
- Press  or **Ctrl + Left Arrow** to skip to the previous frame

Useful sections:

- [Pan-Temporal Time Line](#)
- [Navigating through Several Cameras Synchronously.](#)

Pan-Temporal Time Line

Pan-Temporal Time Line is a convenient way to navigate through **Live** and **Archive** footage (below).

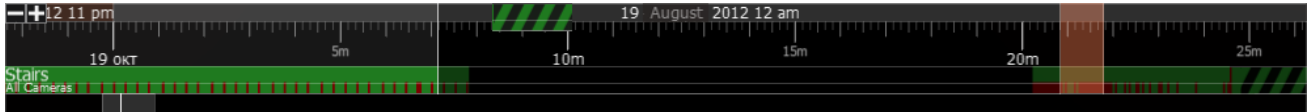

The current time is indicated by **Position Slider**. The very right position indicates that **Live** video is currently played back. If slider is moved to the left, the playback automatically is switched to the **Archive**.

! **IMPORTANT.** It is not possible to navigate through the last minute of archive (this increment is represented in stripes).


Time Scale is displayed on the bottom of the **Time Line**. It contains marks indicating the time. **Time Scale** can be zoomed in and out by mouse wheel or **+**/**-** buttons at the left. This is extremely useful when trying to find a particular event navigating through a long period of time. **Double Click** on **Time Line Scroller** (the very bottom) to fully zoom out.

To zoom to the particular region select the desired region by the following ways:

Select the region to export on **Time Scale**:


- Use **Right Click Drag**
- Open [Context Menu](#) on **Time Scale** and click *Mark Selection Start* (or press “**I**”), then *Mark Selection End* (or press “**J**”)
- To clear selection, use the corresponding [Context Menu](#) item
- Adjust the region to export by dragging edges.

Then open [Context Menu](#) on the Time Line and choose *Zoom to Selection*.

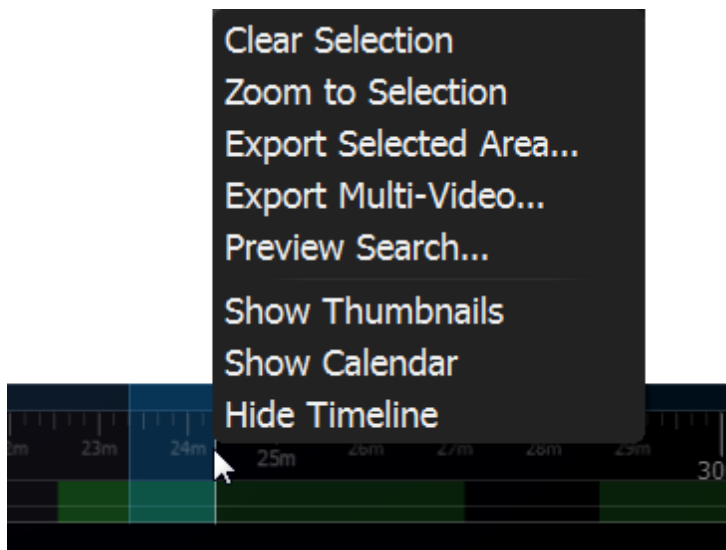


Time Line can display **Local** or **Server** time (specified in Local Settings). To change the setting:

1. Open **Main Menu** and choose *Local Settings*
2. Use the *Timeline Mode* setting in *Look and Feel*:

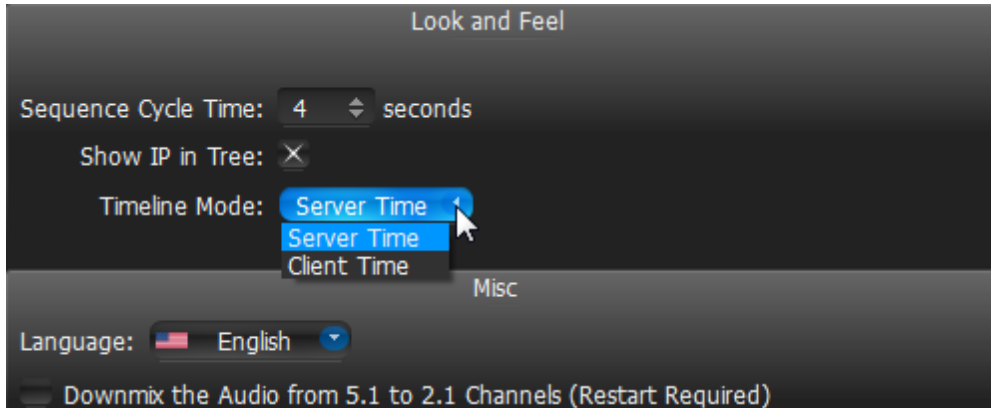

3. Click *OK* when done or *Cancel* to discard changes.

 **Note:** [Export](#) and [Preview Search](#) features will depend on this settings as well. This setting does not affect **Recording Schedule** (always based on **Server Time**).


Time Line's color indicators:

- **Black** – empty space (no recording took place in this period of time)
- **Green** – represent recorded fragments
- **Red** – motion regions. Displayed only if **Smart Search** is active. See "[Performing Smart Search](#)".

It is possible to navigate through recorded fragments only. When moving **Position Slider** to the black area (no recording), it will jump to the next available recorded fragment. If several live **Cameras** are currently displayed, all recorded fragments are combined on **Time Line** (in the lower *All Cameras* line).

Navigating through Several Cameras Synchronously


Nx Witness provides a powerful engine that enables users to navigate through multiple cameras: if several **Cameras** are displaying at the same time, they can be **synchronized**.

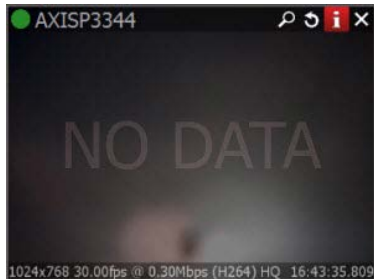

If **User** performs search, fast forward, rewind or search by frame – each camera will be synchronized.

However, recording may be set up differently. If no recording took place over a certain period of time, **NO DATA** will appear on the camera view.


Recorded fragments are displayed on the **Time Line** in two rows:

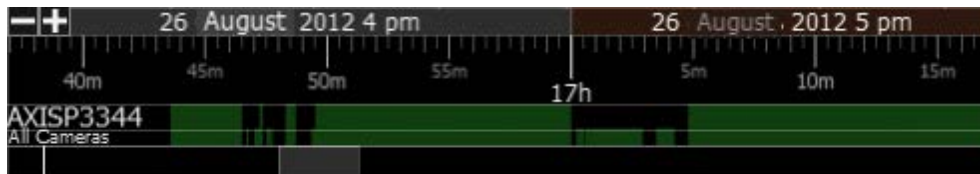

- The upper row displays fragments for **Camera** selected on **Scene**
- The lower row – for all **Cameras** displayed on **Scene**

It is possible to disable **Synchronization** (press **SYNC** button). If no **Item** is selected, the selection will move to the previously selected item, which will become the only item affected by playback controls (seek, speed etc).

Thus, if **Synchronization** is disabled, it is possible to seek each **Camera** in a different position. In this case **Time Line** displays positions for all **Cameras** played back (see blue markers on the picture):

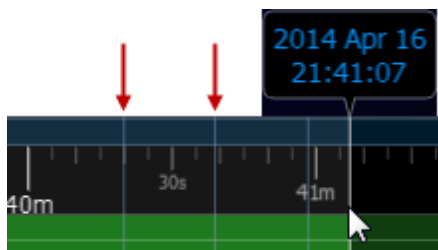

If **User** selects **Camera** on **Scene** and enables **Synchronization** again, all other **cameras** will get synchronized with the selected **Camera** (**Position** and **Speed** will be synchronized).

Searching through Archive

Nx Witness provides many features that make archive search faster, more convenient and intuitive. Since archive may contain significant video data (taken over several months), it is crucial to minimize the time spent by a user on searching a particular event.

The following search methods are introduced:

- **Calendar** – pan temporal time line can zoom in on selected date to make search easier (see "[Using Calendar](#)").
- **Smart Motion Search** – select a region on video and allow for the application to automatically refine the archive and highlight the fragments that involved motion. See "[Performing Smart Motion Search](#)".
- **Thumbnail Navigation** – small previews are displayed on top of the Time Line to help locate a particular scene. See "[Using Thumbnails for Better Navigation](#)".
- **Preview Search** – select a region and allow for the application to provide videos that represent a time period based on time stamps. See "[Preview Search](#)".

Using Calendar

This type of search helps the user to locate an event that took place on a particular date and time.

To perform a calendar search:

1. Open **Camera** that contains the archived event.
2. Press **CLND**. Calendar will appear above **Time Line**. The dates that are displayed on **Time Line** are highlighted in green:

30	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3
4	5	6	7	8	9	10

3. Select a desired date in **Calendar**. To select multiple dates, use **CTRL**. **Time Line** zoom will automatically change to reflect the selected date(s) only. If the archive contains data outside the visible range, it will appear in shaded green:

30	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3
4	5	6	7	8	9	10

4. Select a desired hour in the upper part **Calendar**. To select multiple hours, use **CTRL**. **Time Line** zoom will automatically adjust to display the selected hour(s) only.

06 August 2013						
12 am	1 am	2 am	3 am	4 am	5 am	
6 am	7 am	8 am	9 am	10 am	11 am	
12 pm	1 pm	2 pm	3 pm	4 pm	5 pm	
6 pm	7 pm	8 pm	9 pm	10 pm	11 pm	
← August 2013 →						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
28	29	30	31	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
1	2	3	4	5	6	7

Performing Smart Motion Search


Smart Motion Search enables **User** to perform fast and intuitive archived motion search.

To perform **Smart Motion Search**, select the desired region and Nx Witness will display all fragments that contain motion throughout the archive (scanning through a yearly archive only takes a few seconds).

! **IMPORTANT.** **Smart Motion Search** in Nx Witness assumes the selected **Camera** supports **Motion Detection**. It is important to perform motion setup as well. See "[Setting up Motion Mask and Motion Sensitivity](#)".


To perform **Smart Motion Search**:

1. Open Motion Grid on the camera:

- use **Camera's Quick Button** ()
- open **Camera's Context Menu** and choose *Motion Grid* (or select it and press **Alt + G**)

Motion Grid will appear:




 **Note:** if red fragments appears in motion zones, **Motion Detection** is supported by **Camera**.

2. Select the region the motion should be searched on:


- Hold **Shift**, **Left Click** and **Drag**:
- **Ctrl + Click** and **Drag** to add another region
- **Click and Hold Left Mouse Button** or use [Context Menu](#) (*Clear Motion Selection*) to clear all regions.

! **IMPORTANT.** Motion will not be visible and detected on a region marked as **Motion Mask**.

As soon as the region is selected, **Time Line** will be populated with **red bars**. Each bar indicates recording period that contains motion.

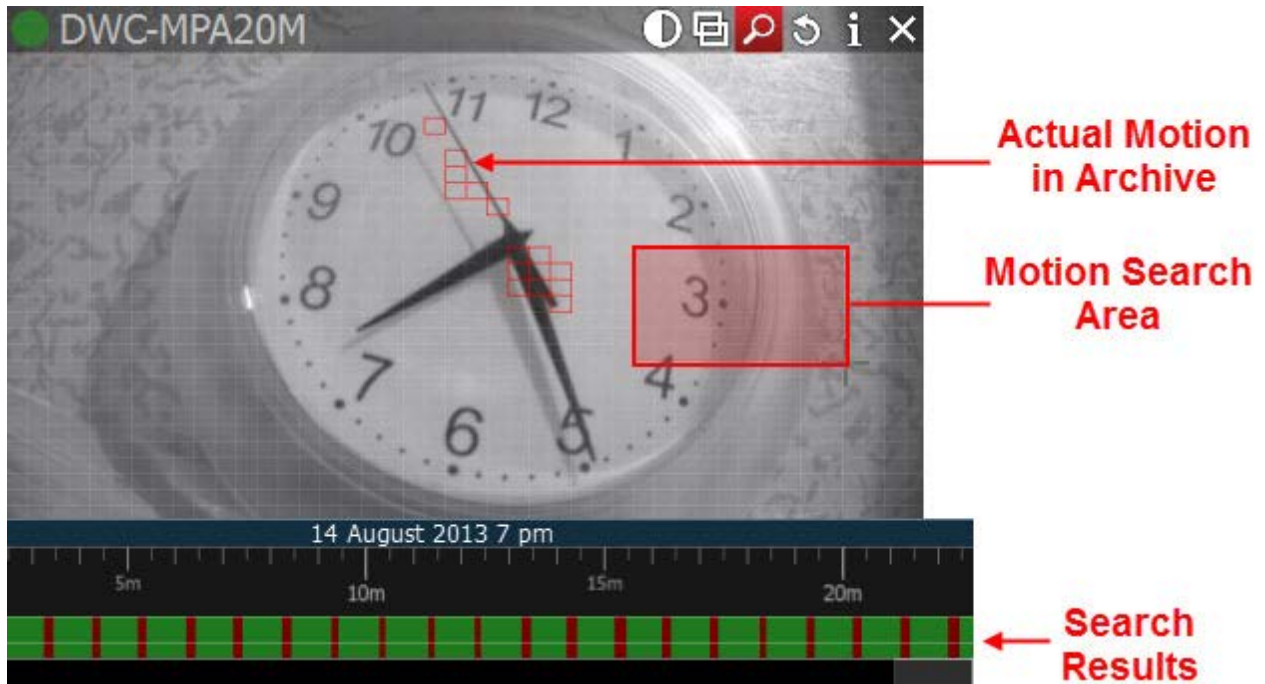

! IMPORTANT. Navigation in **Time Line** is possible by red fragments only until **Smart Motion Search** is off.

To disable **Smart Motion Search**, clear all regions in **Motion Grid** or disable pressing the  button (or use [Context Menu Hide Motion Grid](#) or **Alt + G**).

Using Thumbnails for Better Navigation

The **Thumbnail** feature is a fast and convenient way to navigate through archive. **Thumbnails** are single snapshots taken from archived video footage that are displayed on the **Time Line**. This feature serves as another useful forensic tool for analyzing video.

To open **Thumbnails**:

1. Click on the desired **Camera**.
2. Click on **THMB** button or point a mouse cursor over the top of **Time Line**, click and **pull it up**:



If no **Thumbnails** are displayed, then there is no archive available for this particular **Camera**.

Thumbnails panel can be re-sized. To re-size, point a mouse cursor over **Time Line**, click and pull it up or down.

The white dots under the pictures point on the exact archive place where the shot has been taken. When clicking on **Thumbnail**, the current playback position will jump to the corresponding spot in the archive.

To close **Thumbnails**, press **THMB** again or pull the **Thumbnails Panel** down.


See also "[Preview Search](#)".

Preview Search

This feature helps to search data through large archives. It breaks the selected range of time into smaller time increments and displays these increments as separate **Items**. For instance, it breaks a month period into ten 3-days periods displaying them as separate **Items**, which makes it possible to locate a specific event in one of these periods (then breaking this period into nine 8-hour periods and so on). Finally location of a specific event in archive may take 3-5 such iterations for initial period of several months.

To perform **Preview Search**:

1. Select the desired camera on Scene.
2. Select the region to export on Time Scale:
 - Use **Right-Click Drag**
 - Open [Context Menu](#) on **Time Scale** and click *Mark Selection Start* (or press “[”), then *Mark Selection End* (or press “]”)

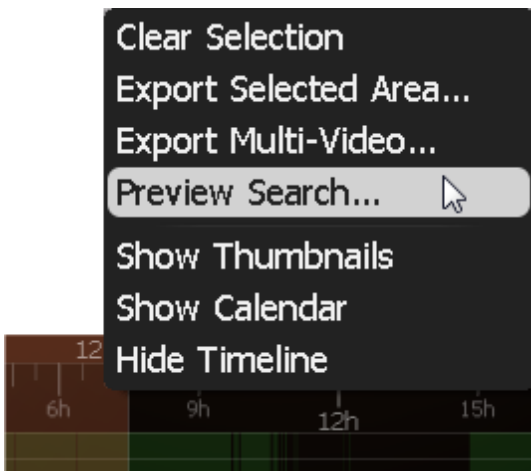

- To clear selection, use the corresponding [Context Menu](#) item
- Adjust the region by dragging edges to export
- To make zooming easier, zoom on **Time Line** using a **Mouse Wheel**

3. Invoke [Context Menu](#) and choose *Preview Search*.

New **Tab** will be opened. The **Tab** contains several **Items** representing the selected **Camera** in different periods.



If click on **Items**, the selection on **Time Line** will display the particular period in archive related to the selected **Item**.

If the selection does not contain archive data this feature is not available.

4. Locate the period of time the desired event took place and select appropriate **Tab**.

5. Repeat steps **1-3** on the desired **Item** on **Preview Search Tab** to refine search.

It is also possible to perform the following actions in **Preview Search Tab**:

- [Navigate through archive](#)
- [Thumbnail Navigation](#)
- [Smart Motion Search](#)
- [Calendar Search](#)
- [Tours](#)
- [Screenshot](#)
- [Export](#).

Playing Back Local Files in Nx Witness

In addition to powerful camera playback engine Nx Witness can also act as **Media Center**: it can play back almost any file. Most major codecs and most major containers are supported. This section contains detailed description of **Local Files** playback:

- [Local files structure in Resource Tree](#)
- [Configuring Media Folders](#)
- [Opening Local Files Outside of Media Folders](#)
- [Navigating Through Local Files.](#)

Additionally it is possible to export fragments from video files (see "[Exporting](#)") and to take screenshots (see "[Taking Screenshot](#)").

Finally, all features described in the "[Forensic Analysis](#)" section can be applied to local files.

! **IMPORTANT.** Some video files may contain 5.1 sound stream. In order to play back those files on stereo speakers:

1. Open [Main Menu](#) and choose *Local Settings (General tab)*.
2. Check *Downmix Audio from 5.1 to 2.1 Channels*.
3. Restart **Client**.

Local files structure in Resource Tree

All local files are displayed in [Resource Tree](#) under the *Local* node, which include:

- Files that are located in **Nx Witness Media Folders** (see "[Configuring Media Folders](#)")
- Recently opened local files (see "[Opening Local Files Outside of Media Folders](#)")
- Exported files (see "[Exporting](#)")
- Screen Recordings (see "[Screen Recording](#)")
- Screenshots (see "[Taking Screenshot](#)").


! **IMPORTANT.** All files except the ones in media folders, are displayed in [Resource Tree](#) until Nx Witness is **restarted**. When saving or restoring **Layout** that contains **Items** located outside the media folders, they will get restored in [Resource Tree](#) as well.

Configuring Media Folders

When Nx Witness starts, it automatically indexes local media folders in order to find and display local files in [Resource Tree](#). By default, **the current user's video folder** (C:\Users\%User%\Videos) is configured as media folder.

To configure unlimited number of media folders:


1. Open [Main Menu](#) and choose *Local Settings*.
2. Go to *General*.

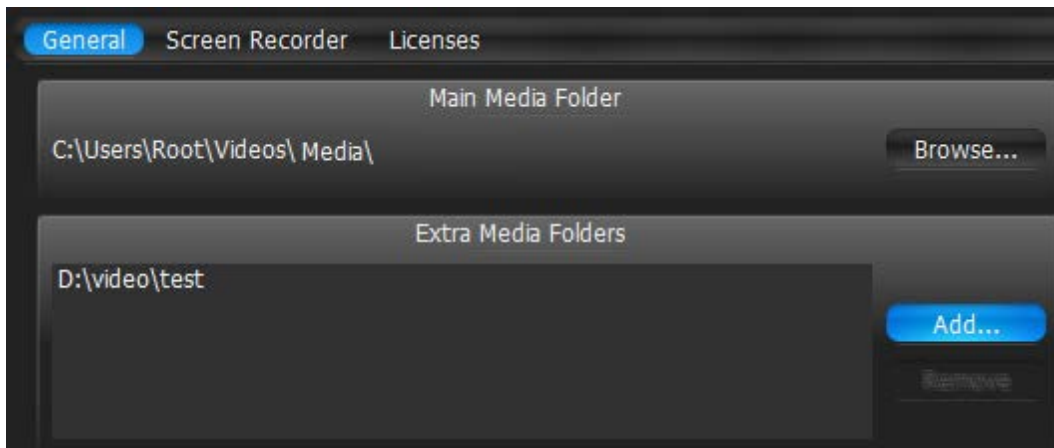

3. If needed to change *Main Media Folder*, click *Browse* and choose the desired path.

4. Configure *Extra Media Folders*:

To add extra media folder click *Add...* and choose the desired path.

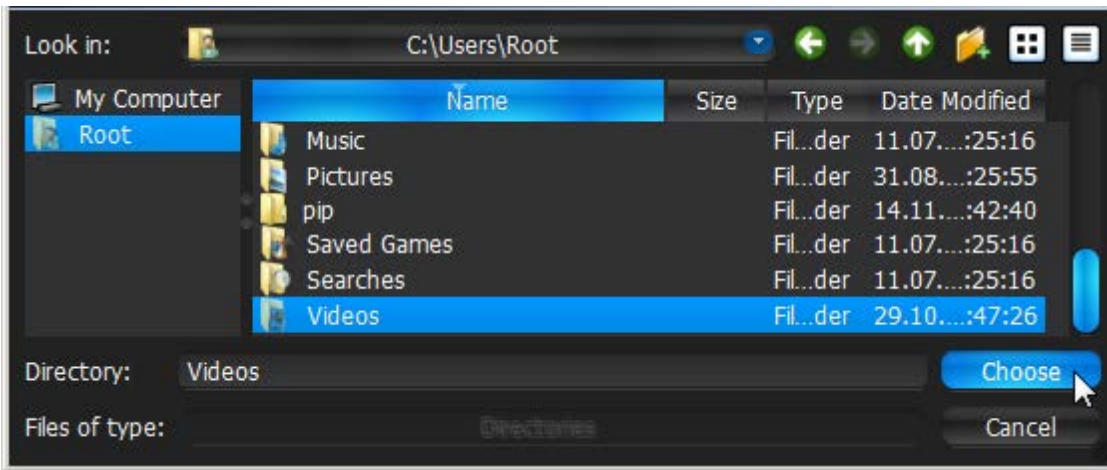

It is possible to perform standard files and folders operations in this form (similar to Windows Explorer).

To delete an extra media folder, select the folder from the list and click *Remove*.

5. Click *OK* when finished (or *Cancel* to discard changes).

As soon as media folders are configured, Nx Witness should be restarted. Then files from the specified media folders will be visible in [Resources Tree](#) (under the *Local* node). It is possible to place such resources in **Layouts**. [Search](#) is also available for **Local Files**.

See also "[Opening Local Files Outside of Media Folders](#)".

Opening Local Files Outside of Media Folders

It is possible to open **Local Files** outside **Media Folders** and thus are not visible in [Resource Tree](#).



Use one of the following:

- **Drag-n-Drop one or several video files** from Windows Explorer to Nx Witness window
- **Drag-n-drop a folder containing video files** from Windows Explorer to Nx Witness window
- Open [Main Menu](#) and choose *Open → File(s)...* (or use **Ctrl + O**) then choose the file(s) to be opened
- Open [Main Menu](#) and choose *Open → Folder...* then choose a folder to be opened
- Invoke [Context Menu](#) on **Scene** (on empty space) and choose *Open → Folder...*, then choose a folder to be opened.

Any opened files will be shown in [Resource Tree](#) until Nx Witness is restarted. If restore **Layout** that contains **Items** located outside of **Media Folders** they will be restored in [Resource Tree](#) as well.

Navigating Through Local Files

Navigation through **Local Files** very similar to the navigation through **Camera** archive, except:

- All items are **not synchronized** (**Sync** is always disabled)
- No **Live** for **Local Files**
- **Time Line** is not colored (no recorded or motion regions).
-  and  buttons move position to the beginning or to the end of the file.

All other operations (seek, play, pause, ff/rew, etc.) are described in details in "[Navigating through Archive and Live](#)".

! IMPORTANT. If **Scene** contains both **Cameras** and **Local Files**, **Cameras** are played back synchronously and **Local Files** – independently.

Forensic Analysis

Nx Witness provides a wide number of features for forensic analysis of recorded streams. This section explains how to perform forensic analysis in the application:

- [Expanding Items to Fullscreen](#)
- [Zoom](#)
- [Rotate](#)
- [De-warping Fish-Eye Cameras](#)
- [Image Enhancement](#).

Expanding Items to Fullscreen


In order to perform forensic analysis, it is recommended to switch the desired **Item** to **Fullscreen**.

To toggle **Fullscreen**, proceed with one of the following:

- **Double Click** on the desired **Item** on **Scene**
- Open [Context Menu](#) and select *Maximize Item/Restore Item* (or press **Enter**)

When in **Fullscreen** mode, all [Side Panels](#) are hidden. Use ">" buttons at the edges of panels to appear.

If several **Cameras** are displayed simultaneously, then the recorded fragments are combined on **Time Line**. If **User** switches **Item** to **Fullscreen**, only recorded fragments related to the selected **Item** are visible.

 **Note:** it is possible to expand **Items** to **Fullscreen** sequentially (like slide-show). See "[Tours](#)" for more information.

Zoom

Zoom is extremely useful when it comes to working with **high resolution Cameras**. It is possible to **Zoom in** on single **Item** in [Fullscreen](#) or whole **Layout** if needed.

To **Zoom in/out**:

- use a **Mouse Wheel** which will only **Zoom** on the area that has a cursor over it
- use "+"/"-" keys (zoom relatively to the center of the **Scene**).

To move the zoomed **Item**, use either **Left** or **Right Mouse Button**. If **Layout** is zoomed, **Left Mouse Button** is reserved for **Item drag**. In this case, use **Right Mouse Button**.

To restore the initial size of an item, use **Double Click**.


To zoom on the entire **Layout**, use **Mouse Wheel**.

Rotate


Rotation can be performed using **Item's Quick Button** (). Just **Click and Hold Item** and **Drag the Mouse** to rotate **Item** on **Scene**:



It is possible to use **Item's Context Menu** (*Rotate to...*):

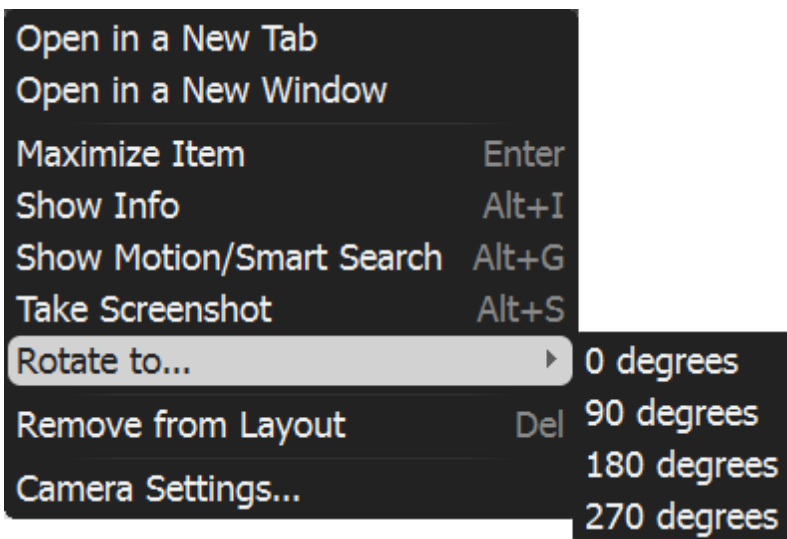

Finally it is possible to rotate **Item** while holding **Alt** (**Left Click and Drag** mouse). Release when finished.


To perform **incremental rotation** (using 30 degrees step), hold **Ctrl** while rotating (with **Alt** or ). Release when finished.

De-warping Fish-Eye Cameras

Nx Witness provides a dewarping feature to be able to view fish-eye cameras. To activate this feature on **Cameras**, dewarping must be configured for **Camera**. See "[Setting Up Fish-Eye Cameras](#)".

After all configurations are completed, the  button will appear on the **Camera** Item:

Once clicked, the button will activate dewarping and enable the following controls:

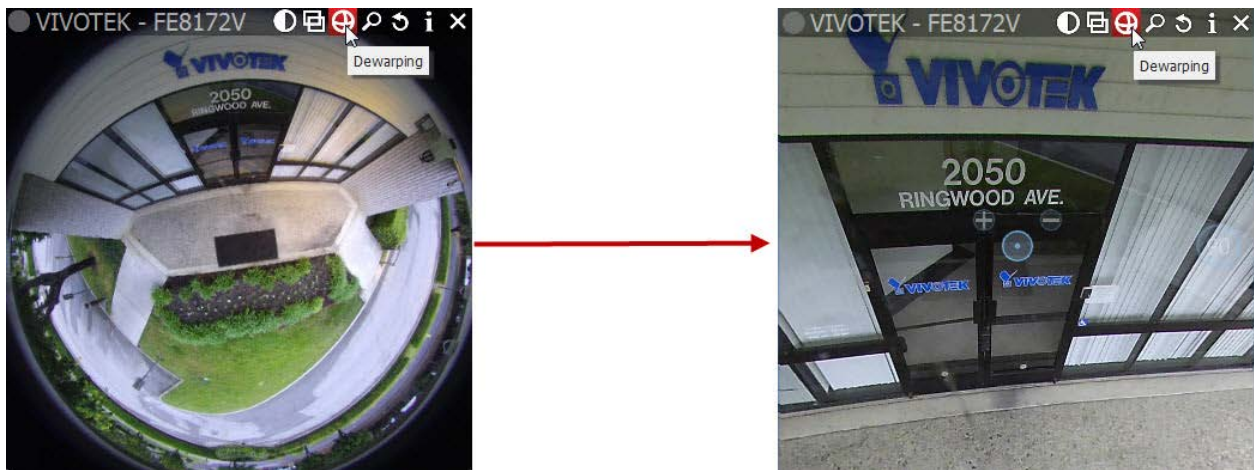


- **Left-Click** on the item, **Hold Left Mouse Button** and **move the cursor** to move **Camera** on the desired position.
- Use **+** and **-** buttons to zoom in/out
- Move to a certain position – **Left Click** on the desired position.

Nx Witness does not perform any dewarping when taking screenshots from Fish-Eye Lens Cameras. However, the image can be dewarped later. See "[De-warping Screenshots Taken from Fish-Eye Cameras](#)".

It is possible to select **Dewarping Panoramic Mode** (the circle on the right). Once clicked, it will show the image as a 90, 180, or 360 degree panoramic view:




Press  again to disable dewarping and hide controls.

 **Note:** [Export](#) and [Taking Screenshots](#) features will depend on this setting as well: if dewarping is enabled, the screenshot will be dewarped automatically and the Export dialog will suggest this feature (can be disabled).

It is important to place [Zoom Windows](#) on the originally warped camera:



As displayed above, all zoom windows are dewarped automatically. Configure the zoom windows and [Save Layout](#).


 **Note:** this feature can be applied to images as well.

De-warping Screenshots Taken from Fish-Eye Cameras


Nx Witness does not automatically dewarp while taking screenshots from a fish-eye camera. However, the image can be dewarped later.

To dewarp an image:


1. Right-Click on the image to open [Context Menu](#) and select *Picture Settings...*

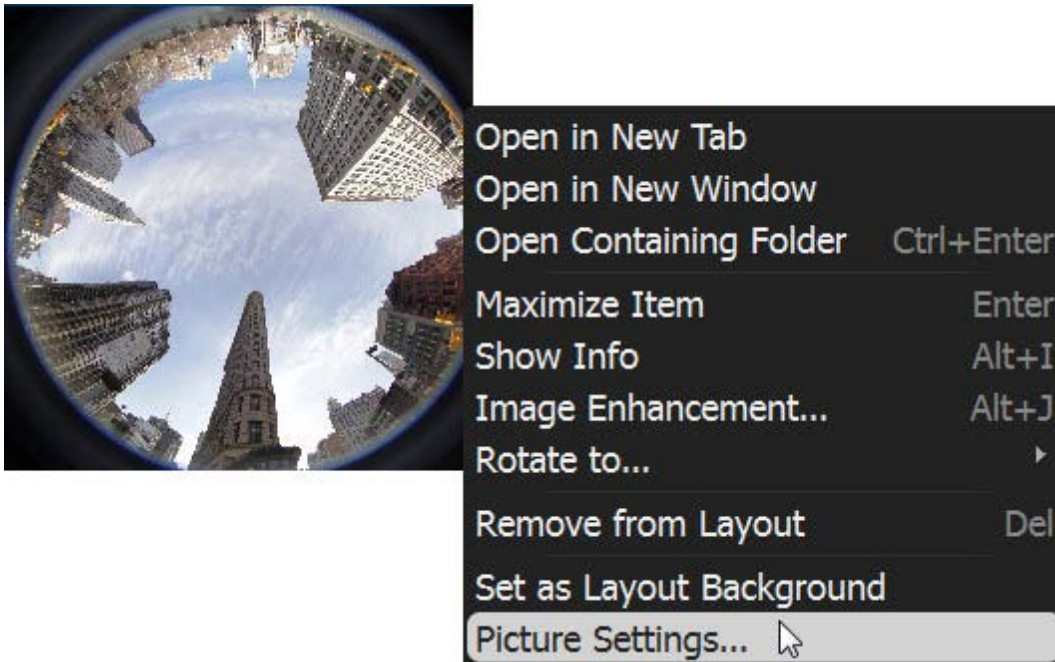


2. Check *This is a fish-eye lens image* :

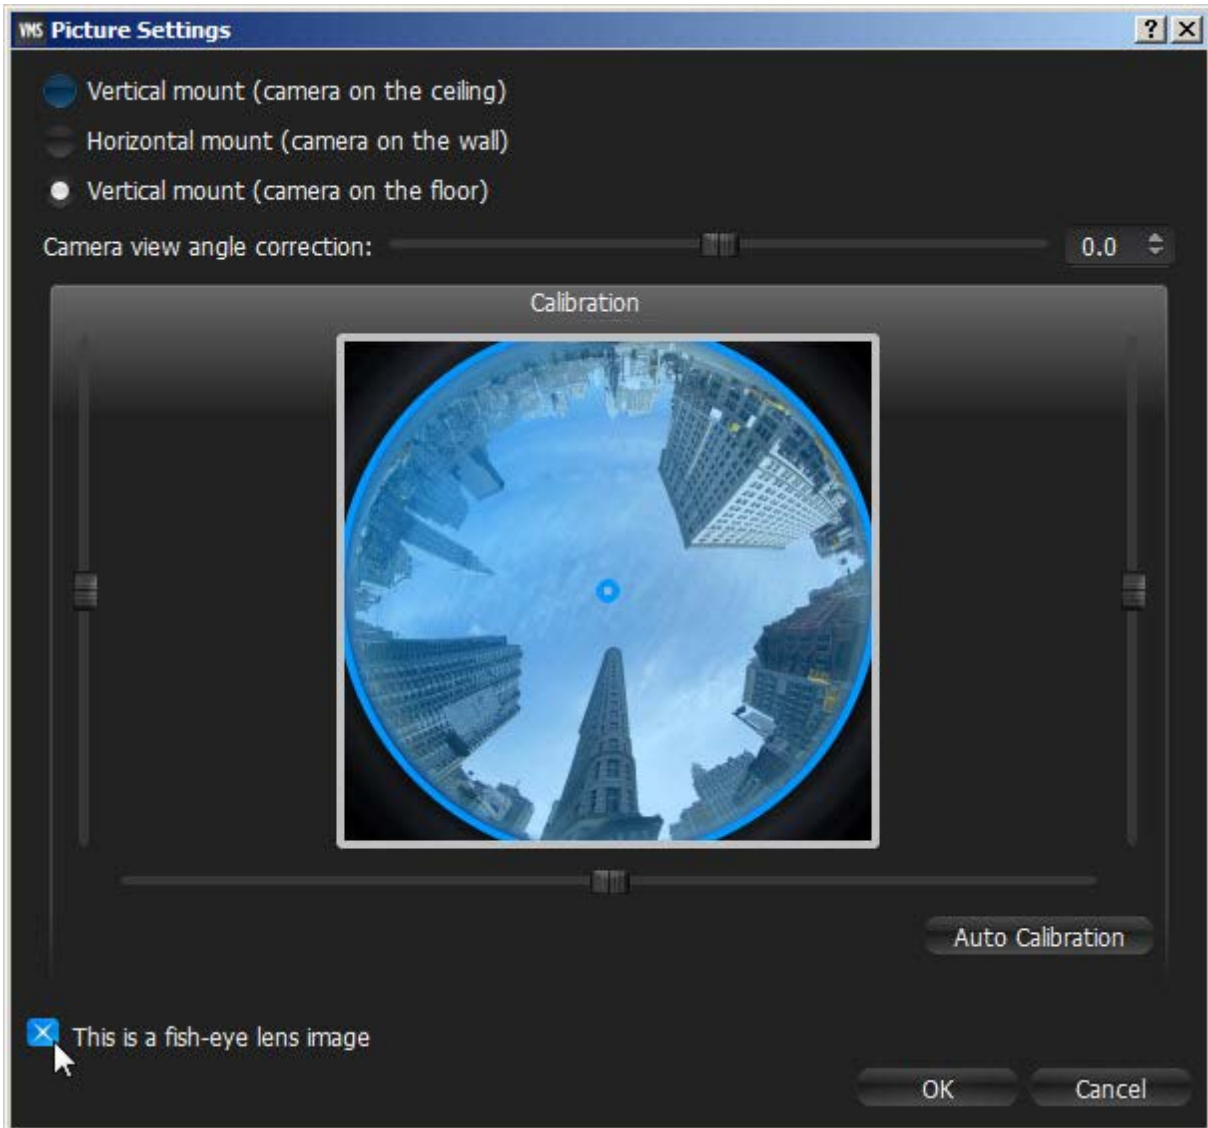

3. Set the following parameters:

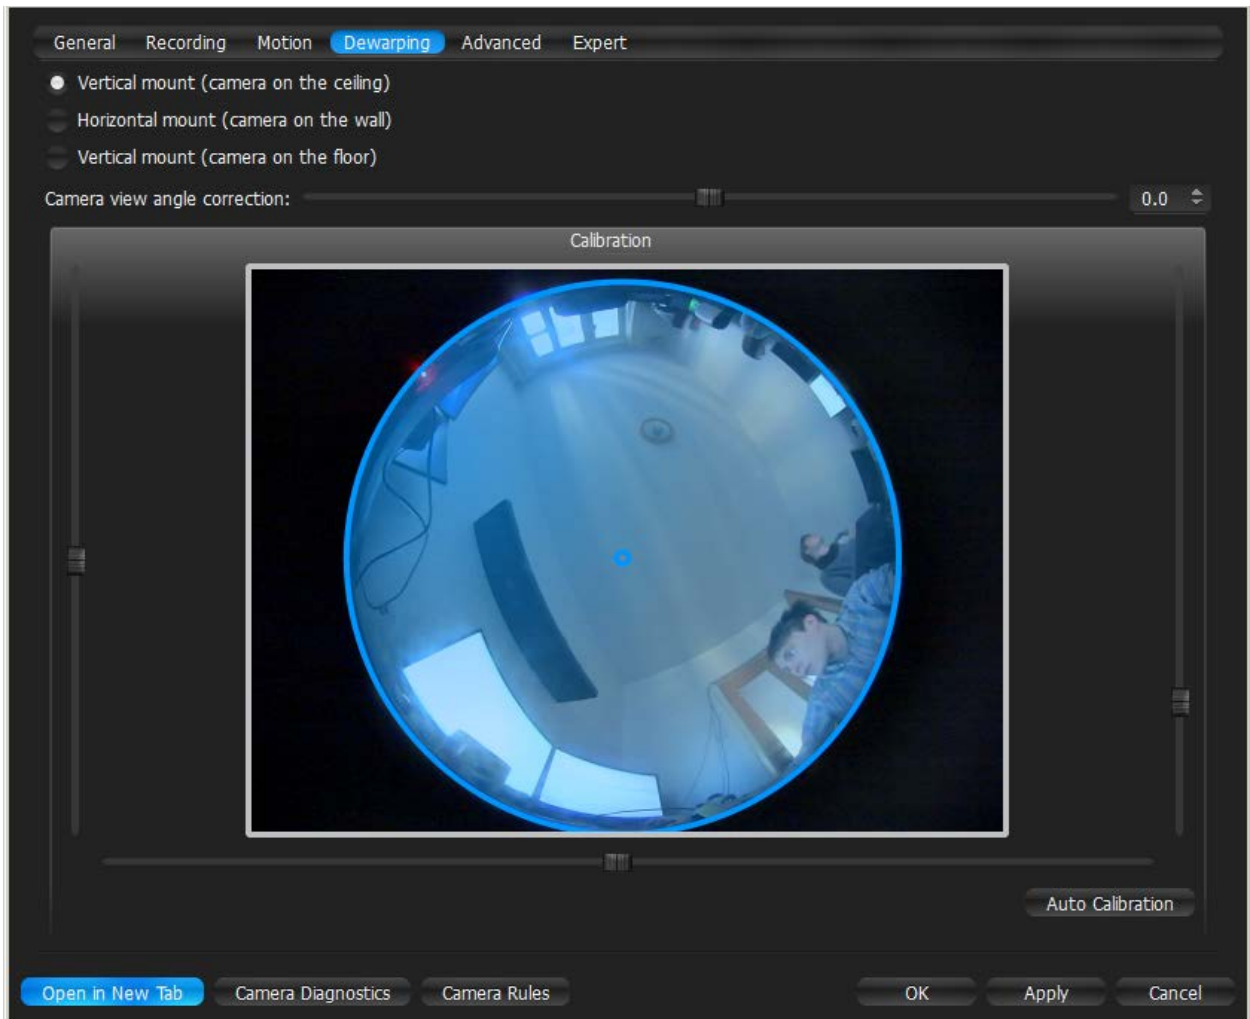

- **Camera's orientation** - type of de-warping algorithms based on orientation.
 - **Calibration** - to avoid de-warping artifacts, it is important to position the calibration circle within the **Camera's** view as accurately as possible. First, try *Auto Calibration*, then manually adjust the viewing range (if needed):
 - **Use scrollers to move the circle horizontally or vertically (or drag it with a mouse)**
 - **Use a mouse wheel to resize the circle**
 - **Camera's view angle.**
-  **Note:** It is recommended to keep image on **Scene** to monitor any image changes while adjusting settings.

4. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.



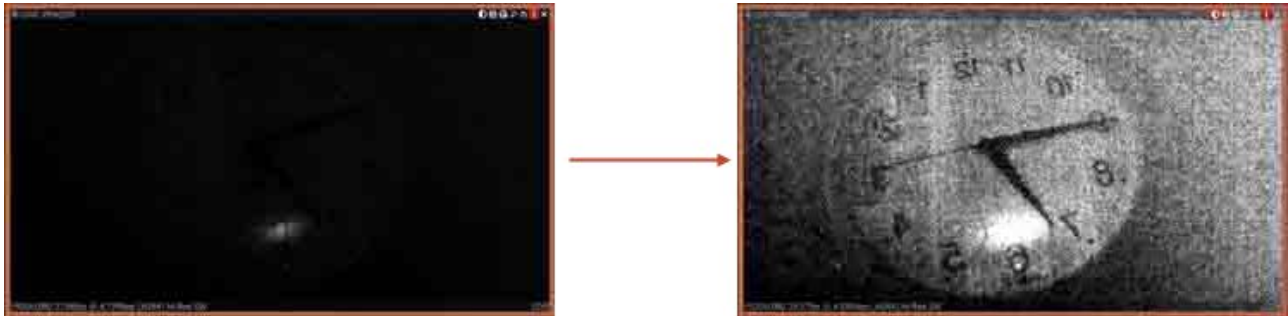

Once a screenshot is determined to be as a fish-eye screenshot, dewarping can be performed as usual ( button on the image). See "[Dewarping Fish-Eye Cameras](#)" for details.

Image Enhancement

To enhance the image on darker scenes, Nx Witness offers **Image Enhancement**. Not only can this feature be applied to **Cameras**, it can also enhance local files and pictures as well.


To activate **Image Enhancement**, click on the  button located on the item:




 **Note:** [Export](#) and [Taking Screenshots](#) features will depend on this setting as well: if dewarping is enabled, the screenshot will be dewarped automatically and the Export dialog will suggest this feature (can be disabled).

To adjust additional settings:

1. Invoke [Context Menu](#) and select *Image Enhancement...* (or use **Alt + J**). The following dialog will open:

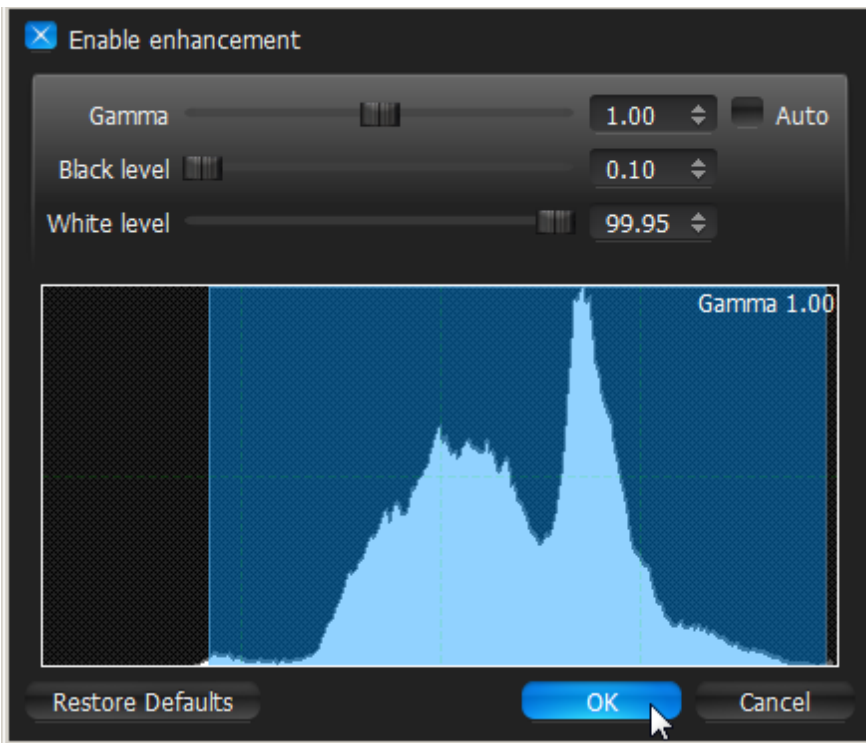

2. Click *Enable enhancement* and configure desired parameters:
 - *Gamma* – the lesser the value, the lighter the image will be. Set *Auto* for recommended values.
 - *Black* and *White Levels* (information is located in the Histogram section). Refrain from cutting too much of left or right areas on the histogram – this will result in losing important graphical information.
 - Click *Restore Defaults* to reset settings.
3. Click *Apply* or *OK* when finished. To discard changes, click *Cancel*.


 **Note:** in most cases, it is not necessary to perform any additional adjustments.

Exporting

Nx Witness provides powerful and flexible **Export** capabilities. It is possible to perform **Export** in different formats, **Export** several videos simultaneously and perform synchronous playback of such videos, add metadata to exported videos etc.

Existing **Export** options:

- [Single Camera Export](#). Allows exporting to AVI and MKV formats. Adds time stamps to exported video (start and end time).
- [Multi-Video Export](#). Allows exporting to proprietary format (should be played by Nx Witness) as well as executable bundle (can be viewed on every Windows computer). Export is performed with additional metadata (time stamps, recorded fragments data, motion etc).
- [Checking the Validity of Exported Videos](#)
- [Taking Screenshots](#).

 **Note:** **Export** are available to **Administrators** and **Viewers** that have appropriate permissions.

Single Camera Export

This section provides information on how to export video from a single **Camera's** archive or **Local Video File**:

- [Exporting Recorded Region from a Single Camera](#)
- [Viewing Videos Exported from a Single Camera](#)

See "[Multi-Video Export](#)" for information on exporting from several **Cameras** or **Local Files** simultaneously.

Exporting Recorded Region from Single Camera


Nx Witness supports **Export** in two media formats: Matroska (**mkv**) and **avi**. These formats are supported by most players (additional codecs may be required for playback).

Export can also be done for **Local Video Files**. To **Export**:

1. Select the desired **Item** on **Scene (Camera or Local Video File)**.
2. Select the region to export on **Time Scale**:
 - Use **Right Click Drag**
 - Open [Context Menu](#) on **Time Scale** and click *Mark Selection Start* (or press “[”), then *Mark Selection End* (or press “]”)
 - To clear selection, use the corresponding [Context Menu](#) item
 - Adjust the region to export by dragging edges
 - To make zooming easier, zoom **Time Line** using a **Mouse Wheel**
3. Invoke [Context Menu](#) and choose *Export Selected Range*:

If the selection does not contain archive data, this feature is not available. If the selection starts with empty archive (see the screenshot above), the exported footage will start from the first available frame (empty archive will not be exported). If the selection contains empty archive in the middle, it will still be exported and not show when viewing the exported footage.

! IMPORTANT. If a long period of time is selected for export, export may be slightly delayed. In this case, the following warning will appear:

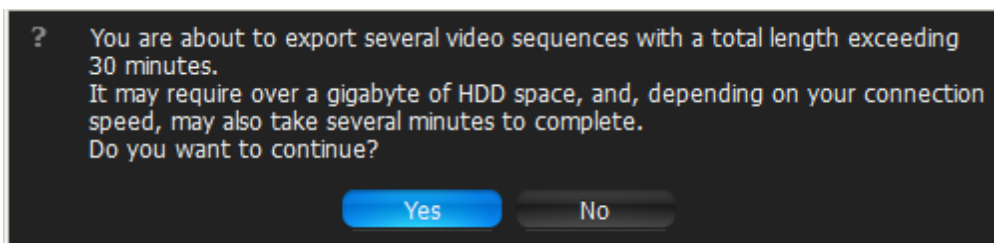

In this case, it is possible to continue working with Nx Witness while exporting.

4. Choose the desired **file name**, **format** and **location** and click *Save*:

! IMPORTANT. If [Image Enhancement](#), [Forcing Aspect Ratio](#), [Camera Orientation](#) or [De-warping](#) were applied to the exported source, it will be suggested to the user to keep these settings (may be disabled if needed). Additionally, it is also possible to render date and time on the video (*Timestamps* dropdown list). However, these settings will require **transcoding** on client, so **may take a longer period of time with slightly decreased quality and increased processor load up to 100% during export**. These settings are not applied for the **EXE** format.


File and folder operations are performed in the same manner as in Windows Explorer.

The following formats are supported:

- **AVI** is more widely used, but the codec remains intact (H264). To view exported videos in other players may require additional codecs. Additionally some codecs are not allowed in **AVI** format. A warning message will appear. This is a default format.
- **MKV** is a more advanced format, but may not be played back on some devices (ex: home media players). It does not restrict video and audio content.
- **EXE** is used for distributing videos to the users who do not have any codecs or media players installed. As soon as this executable is started, new **Client** instance is run and plays back the exported video. In this case, **the data on motion and recorded fragments is also exported**.

! IMPORTANT. Files produced with the **x64** version of software will only be viewable on Windows **x64**; however, **x86** can be viewed on any architecture.

As soon as export is finished, the video will be available in *Local Files* in [Resource Tree](#):

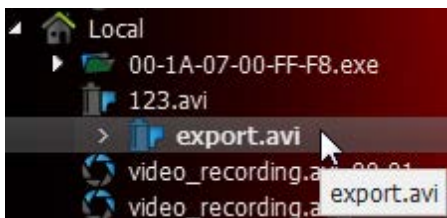


! IMPORTANT. This resource will be available **until Client restarts**. To make it available permanently, save the exported video to Nx Witness **Media Folder** (see "[Configuring Media Folders](#)") or create and save a **Layout** that would contain this video.

Also, see the "[Viewing Videos Exported from a Single Camera](#)" section for more information.

Viewing Videos Exported from Single Camera

As soon as export is finished, the extracted video clip will be available in *Local Files* in [Resource Tree](#). Note that **AVI** and **MKV** files are shown as a single record and **EXE** file - as **Folder** containing exported

Camera:

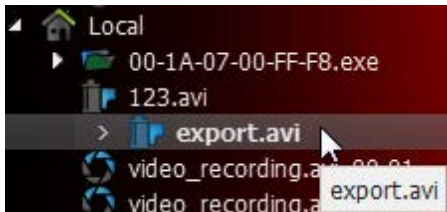


It is possible to open either an **EXE** file (it will be displayed in new **Tab**) or open a camera - it will be displayed as single **Item**.

When the exported file is opened, **Time Line** will display the exported time range:



If **EXE** bundle is opened, then the recorded fragments and motion will be displayed on the Time Line as well:



 **Note:** start and end time points **differ from a regular Local File**. It is the start and end time of the **exported fragment**. When viewing information, the time will be displayed in **Item's** bottom right corner.

Multi-Video Export

This section provides detailed information on how to export video from a single **Camera**'s archive or **Local Video File**:

- [Exporting the Layout in Multi-Video Format](#)
- [Viewing Multi-Videos](#)
- [Changing Multi-Videos after Export.](#)

Also, see the "[Single Camera Export](#)" section for information on exporting video from a single **Camera** or **Local File**.

Exporting Layout in Multi-Video Format

Nx Witness provides a powerful feature to perform **Export** in a proprietary format, which has many benefits in comparison to standard **Export** (see "[Exporting Recorded Region from Camera](#)"):


- It is possible to **export several videos simultaneously** (for instance, it is possible to export the last hour of recording from five cameras). The exported files are saved as regular **Layout** and can be opened in Nx Witness. The exported **Multi-Video** can be navigated through as any other layout (see "[Navigating through several cameras synchronously](#)"), perform [Smart Motion Search](#), etc. It is possible even do **Multi-Video Export** from Multi-Video.
- It is possible to export additional information (recorded chunks and motion).
- It is possible to prepare a bundled version that can be run and viewed on clean **Windows** systems.

To do **Export in proprietary format**:

1. Place the desired **Items** on **Scene**. A user cannot export **Local Video Files** into **Multi-Videos**, but cannot mix the two.
2. Select the export region on **Time Scale**:
 - Use **Right Click Drag**
 - Open [Context Menu](#) on **Time Scale** and click *Mark Selection Start* (or press "["), then *Mark Selection End* (or press "]")
 - To clear selection, use the corresponding [Context Menu](#) item
 - Adjust the export region by dragging edges
 - For easier zoom, scroll the **Mouse Wheel** on **Time Line**.
3. Open [Context Menu](#) and choose *Export Multi-Video*:

If the selection contains empty archive on **Camera**, it will be exported and **NO DATA** will be shown when viewing the exported clip.

! **IMPORTANT.** If a long period of time is selected for export, it may cause delays. In this case, the following warning message will appear:

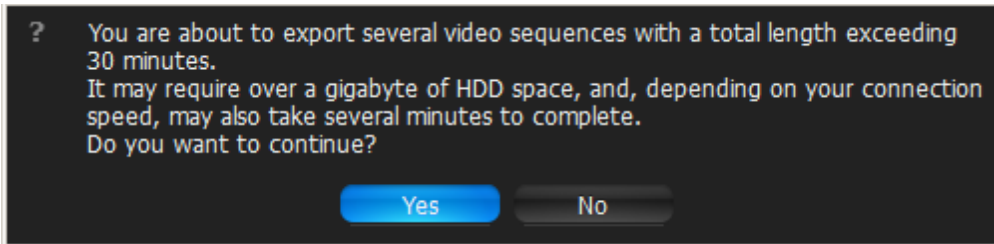

In this case, it is possible to continue working with Nx Witness while exporting.

4. Choose the desired **file name**, **format** and **location** and click *Save* (*Cancel* will close the dialog and no exported data will be saved):

File and folder operations are performed in the same manner as in Windows Explorer.


The following formats are supported:

- **NOV** – a proprietary format. Can be opened by Nx Witness Client only. Can be changed if needed (see "[Changing Multi-Video after Export](#)").
- **NOV (Read-Only)** – a proprietary format. Should be opened by Nx Witness. Cannot be changed.
- **EXE** – an executable bundle (platform dependent – **x86** or **x64**). Can be opened without Nx Witness installed on the computer. Can be changed in the future if needed (see "[Changing Multi-Video after Export](#)").
- **EXE (Read-Only)** – a proprietary format (platform dependent – **x86** or **x64**). An executable bundle. Can be opened without Nx Witness installed on the computer. Should be opened by Nx Witness. Cannot be changed.

EXE is used for distributing videos to the users who do not have any codecs or media players installed. As soon as the bundle is started, the **Client** is run and it plays back the exported video. In this case, the **data on motion and recorded fragments is also exported**.

! **IMPORTANT.** Files produced with the **x64** version of software will only be viewable on Windows **x64**; however, **x86** can be viewed on any architecture.

As soon as export is finished, **Multi-Video** will be available in local files:

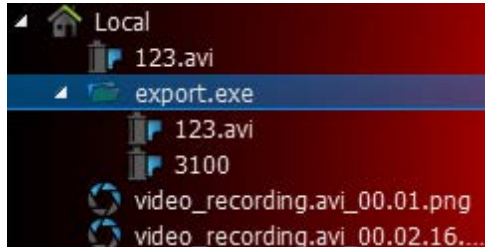


The following operations can be performed:

- View videos (see "[Viewing Multi-Videos](#)") as **Layouts**
- View single **Items** from the videos
- Edit **Multi-Videos** if not read-only (see "[Changing Multi-Video after Export](#)").

Viewing Multi-Videos

After performing **Multi-Video Export**, the exported file is displayed in local files as follows:

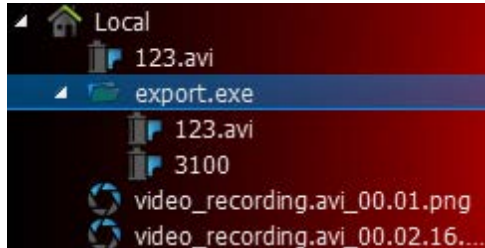

The following operations can be performed:

- View a single camera from Multi-Video. Perform actions described in "[Adding Items to Layouts](#)".
- Open entire **Multi-Video**. It will be opened as a regular **Layout** on a separate **Tab**. Perform actions described in "[Opening and Closing Saved Layouts](#)".
- Delete items from Multi-Video. See "[Changing Multi-Video after Export](#)".

When **Multi-Video** is opened, the following standard features can be performed:


- [Navigation through archive](#)
- [Thumbnail Navigation](#)
- [Preview Search](#)
- [Smart Motion Search](#)
- [Calendar Search](#)
- [Tours](#)
- [Screenshots](#)
- [Single Camera Export](#)
- [Export \(incl. Multi-Video Export\)](#)
- [Checking the Validity of Exported Videos](#)
- [Layout Reconfiguration](#)
- [Forensic Analysis](#).

Any capabilities possible with **Cameras** can also be performed with **Multi-Videos** in Nx Witness.


Changing Multi-Videos after Export

Nx Witness offers many possibilities when working with **Multi-Videos**. A user can do almost everything as with regular **Layout**:

- Add or remove **Items**. For instance, if **Multi-Video** was exported from **10PM** to **11PM** and a new camera was added, it would get synchronized with other cameras and be displaying in the same archive (**10PM – 11PM**). See "[Adding Items to Layouts](#)" and "[Removing Item\(s\) from Layouts](#)".

 Note: Local Files are not allowed in Multi-Videos

- Adjusting **Layout Look and Feel** (move, swap, resize, rotate). See "[Adjusting Layout's Appearance](#)".
- Save modified **Multi-Video**. One restriction is applied: it is not possible to mix **Local Videos** and **Cameras** in a single **Multi-Video**. Same as **Layouts** (see "[Saving Layouts](#)"), but can be performed by **Viewers**.


 Note: **Multi-Video** can be saved with a read-only flag (modifications will not be saved).

Checking the Validity of Exported Videos


Watermark allows **Users** to check for validity of footage to determine whether or not any modifications were ever performed to the native footage. Any videos exported by Nx Witness (either single **Cameras** or **Multi-Videos**) can be checked for validity.

To check the validity of exported videos:


1. Bring the desired video onto the scene
2. Open [Context Menu](#) and select *Check File Watermark* (or press **Alt + C**)

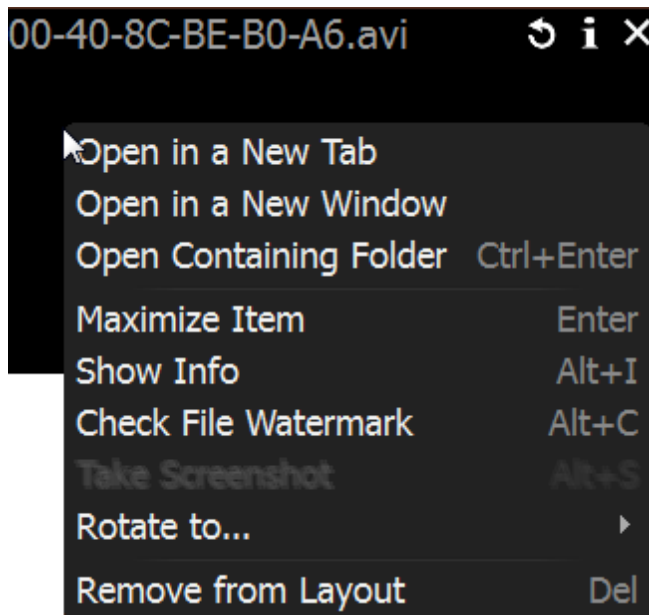

3. If the file is in its original state, the check will succeed:

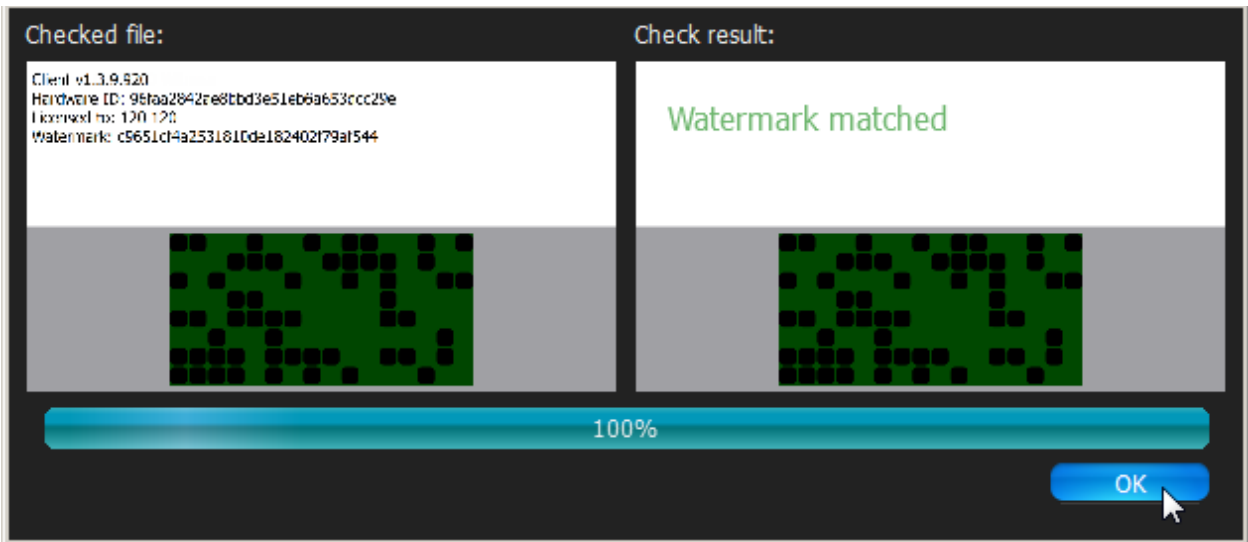

4. If any modifications took place, the check will fail:

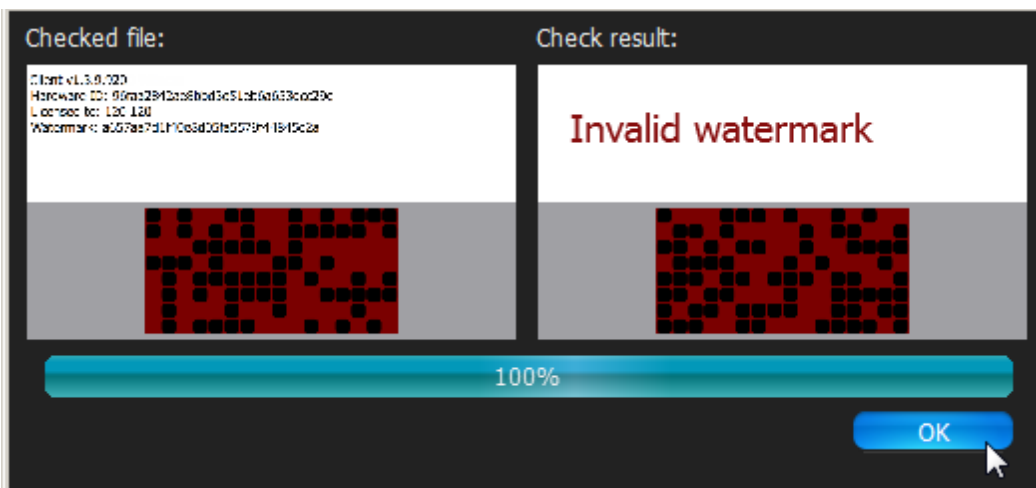



Taking Screenshots


Screenshot can be taken from both **Cameras** and **Local Video Files** to **PNG** or **JPG** output formats.

! IMPORTANT. If [Image Enhancement](#) and/or [De-warping](#) capabilities were initially applied to the exported source, they will be retained while rendering the screenshot.

To take **Screenshot** from a video:

1. Select the desired **Item** on **Scene**.
2. Seek to the desired position (frame seek will help). See "[Navigating through Archive and Live](#)".
3. Click the  button on the item.
4. Choose the desired file name and location and click *Save* (*Cancel* will close the dialog and data will not be saved):


 **Note:** check *Include Timestamp* to insert playback time in the screenshot (enabled by default).

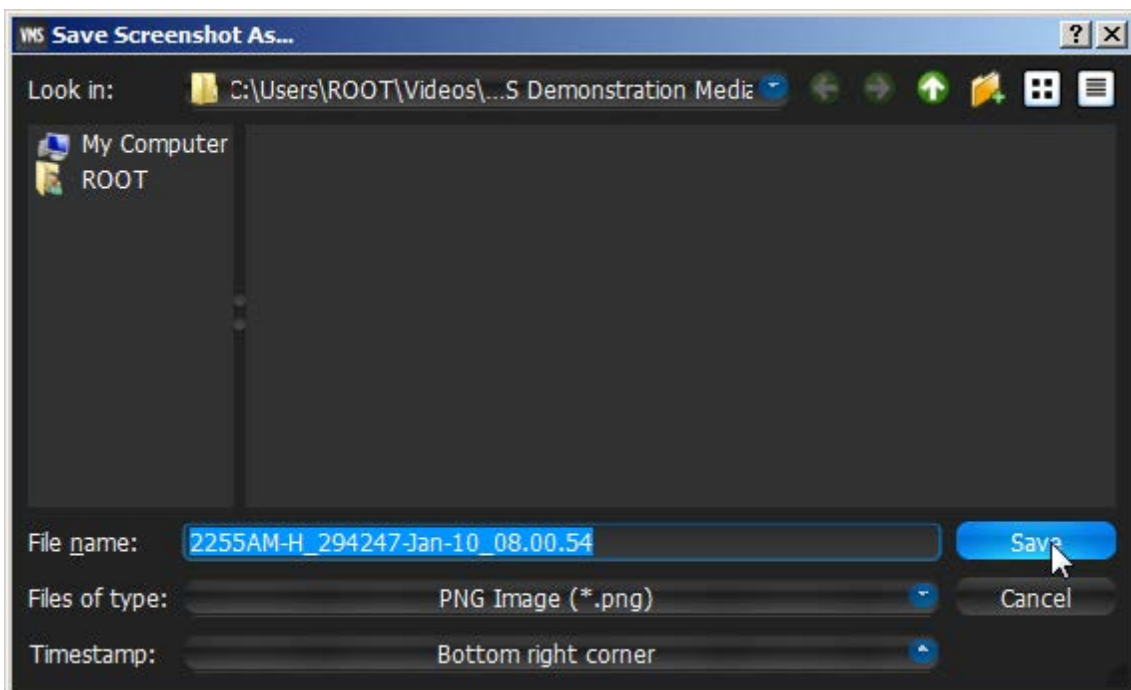

It is possible to place timestamps on screenshots (use *Timestamps* dropdown list).

File and folder operations are performed in the same manner as in Windows Explorer.


Once saved, **Screenshot** will be available in **Local Files** within [Resource Tree](#):

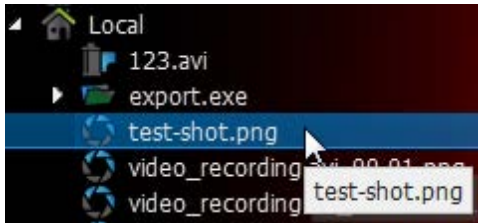

! **IMPORTANT.** This resource will be available **until Client restarts**. To make it available permanently, save the exported video in the Nx Witness **Media Folder** (see [“Configuring Media Folders”](#)) or create and save a **Layout** that would contain this video.

Adjusting Volume

To adjust **Volume**, use one of the following:

- Use **Volume Slider** (at the right of the **Time Line**)
- Use a **Mouse Wheel** above the slider
- Use **Ctrl + Up/Down**
- Use  button or use **“P”** key to mute/unmute.

! **IMPORTANT.** The volume level will affect the following system Actions: [Speak](#), [Play Sound](#) and [Repeat Sound](#). Note: notifications will not be heard if on mute.

Tours

If several **Items** are opened on **Scene**, this feature will provide the ability to automatically switch to the next **Item** in a [Fullscreen](#) mode (like **slide show**). To start **Tour**:

1. Select several **Items** (see [“Adding Items to Layouts”](#))
2. Open [Context Menu](#) and select *Start Tour* (or press **Alt+T**)

To stop **Tour**, **Double-Click** or press any key.

To change sequence speed (the frequency in between **Items** during **Tour**):

1. Open [Main Menu](#) and go to *Local Settings*
2. Specify the desired delay (in seconds) in *Sequence Cycle Time*.

Screen Recording (Windows Only)

This is an extremely useful feature in Nx Witness for presentations. It is possible to record from several displays with sound, select different quality, etc.

Screen can be recorded in the following formats:

- Video: **MPEG4 Part 2**
- Audio: Stereo (**Lame Audio Codec**)
- Container: **AVI**

! IMPORTANT. It is necessary to have a powerful processor and video adapter to do screen recording. See recommended configuration in the installation guide.


Setting up Screen Recording

To set up **Screen Recording**:


1. Open **Main Menu** and choose *Local Settings*.
2. Go to the *Screen Recording* tab.
3. Configure **Screen Recording** parameters:
 - *Temporary Folder* – the folder that stores temporary files. Files are stored during recording, then are copied to a specified folder to be saved.
 - ! IMPORTANT.** This folder should be accessible and writable.
 - *Capture Mode: Fullscreen* (if several monitors are installed the desired one should be chosen) or *Application Window* (only Nx Witness window will be recorded).
 - *Disable Aero* – select this option to enhance performance. If chosen, once **Screen Recording** is in progress, **Windows Aero** will be turned off.
 - *Capture Cursor* – select this checkbox if a mouse cursor needs to be visible during recording.
 - *Resolution* – select screen resolution. The lower the resolution, the higher the performance.
 - *Encoder Quality* – select *Performance* for best performance. Select *Best* for best quality.
 - *Primary and Secondary device* – select sound devices to enable audio. Audio will get mixed from both devices. The best practice is to select master from the sound card as primary and microphone as secondary. In this case, both sounds from Nx Witness (i.e. video clips) and microphone will be recorded simultaneously.
4. Click *OK* when done or *Cancel* to discard changes.

Performing Screen Recording


To run **Screen Recording**, proceed with one of the following:

- Open [Main Menu](#) and select *Start Screen Recording* (or press **Alt + R**)
- Click on the  icon in the top right corner.
Screen recording will start in 3 seconds.

When finished, proceed with one of the following:

- Open [Main Menu](#) and select *Stop Screen Recording* (or press **Alt + R**)
- Click on the  icon again in the top right corner.


! IMPORTANT. If audio parameters are setup incorrectly, **Screen Recording** will display the following error:

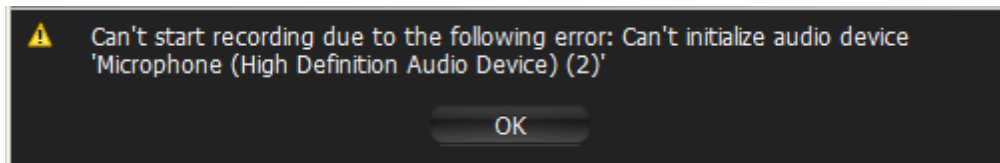

In this case it is necessary to do the following:


1. Set up audio card parameters in Windows, check and select default recording devices. Then try to record sound in Windows Recorder.
2. Set up Screen Recorder Parameters (see "[Setting up Screen Recording](#)").

Choose the desired file name and location and click *Save* (*Cancel* will close the dialog and data will not be saved):

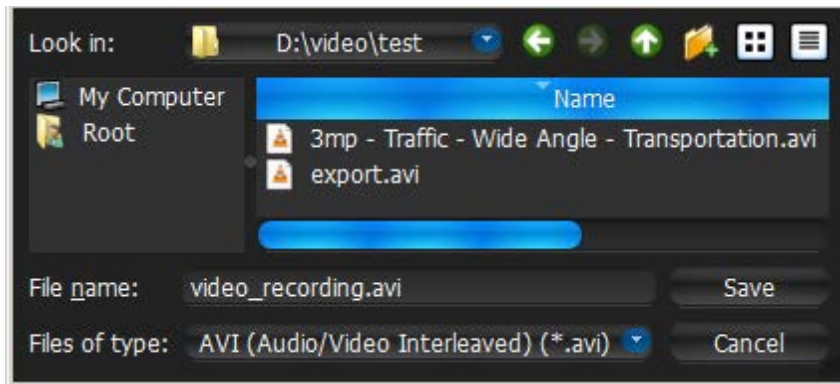

File and folder operations are performed in the same manner as in Windows Explorer.

As soon as the file is saved, it will be available in local files:

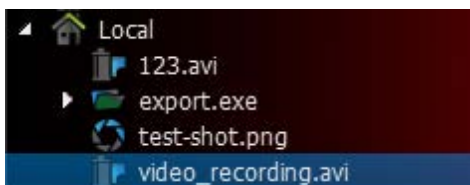

! **IMPORTANT.** This resource will be available **until Client restarts**. To make it available permanently, save the exported video to Nx Witness **Media Folder** (see "[Configuring Media Folders](#)") or create and save a **Layout** that would contain this video.

Upgrading Nx Witness

Nx Witness provides powerful and convenient way to upgrade the whole system in one click. This feature makes easy to upgrade systems that have systems on different platforms, locations and devices without the need to physically login to computers Servers are installed on.

Upgrade is performed in the following cases:

- If a new version of Nx Witness is released, the notification pops up. It is possible either upgrade to this version or disable such notification.
- If new build that fixes a particular issue is released, the support team recommends to upgrade to a particular version.

To go to upgrade dialog open [Main Menu](#) → *System Administration (CTRL+ALT+A)* → *Upgrade* tab.

Online Upgrade

The latest available version is displayed next to *Available Update*.

- To upgrade to the latest version click *Upgrade*. The update process will start
- To upgrade to the custom version click *Get a specific build* and enter the build number followed by the password (should be provided by support team). The update process will start

Offline Upgrade

Sometimes the security reasons do not allow Nx Witness to access the Internet. In this case Nx Witness can be upgraded offline.

1. Switch from *Update from Internet* to *Update from Local Source...* (link above *Available Update*).
2. Copy the *Archive URL* string to clipboard (use the corresponding button or select the text and press **CTRL+C**).
3. Create new shortcut on Operating system and paste URL.
4. Copy the shortcut to an external drive.
5. Plug the external drive to a computer that has access to the Internet and open the created shortcut. The download will begin.
6. Save the downloaded package to the external drive.
7. Plug the external drive back to the computer in the private network.
8. Click on ellipsis button (...) next to *Update from file:* and choose the downloaded filename from the external drive. The update process will start.

Upgrade process can take some time. Issues may occur during the upgrade process for various reasons (most common one is if one Server goes offline or becomes inaccessible). In this case try to repeat the upgrade.

 **IMPORTANT.** Ensure that all servers in the system are upgraded.

Troubleshooting and Contacting Support

The following issues can be resolved manually:

- If **Camera** is not working properly, a user should always diagnose it. See "[Diagnosing Offline Cameras](#)" for more information.
- If archive is lost, Nx Witness will restore it. See "[Restoring Broken Archive](#)" for details.

To contact support, use the following link: support@networkoptix.com.


When posting an issue, it is necessary to describe the problem as detailed as possible. It is useful to provide additional information such as log files, network configuration, etc. If possible please provide administrator login credentials as well.


To expedite investigation, it's best to [Provide Remote Access](#). If remote access cannot be provided for security reasons, the following steps should be taken in creating a support ticket:

- [Recording Issue](#)
- [Collecting Logs](#)
- [Collecting Additional Information](#).


If the issue is related to a specific Camera compatibility, Support team will likely provide a specific build that should solve this particular problem. Then it will be necessary to upgrade System to this build. See "[Upgrading Nx Witness](#)" for more information.

Diagnosing Offline Cameras


Sometimes cameras are displayed in [Resource Tree](#), but are marked with a  sign. When opening such camera, it will display **NO SIGNAL**. Nx Witness will then prompt the user to perform more thorough diagnostics.

 **IMPORTANT.** Run diagnostics prior to contacting support.

Diagnostics can be invoked by pressing on the item:

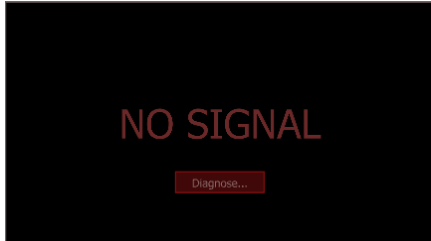

Once complete, reasons and recommended actions will be displayed:

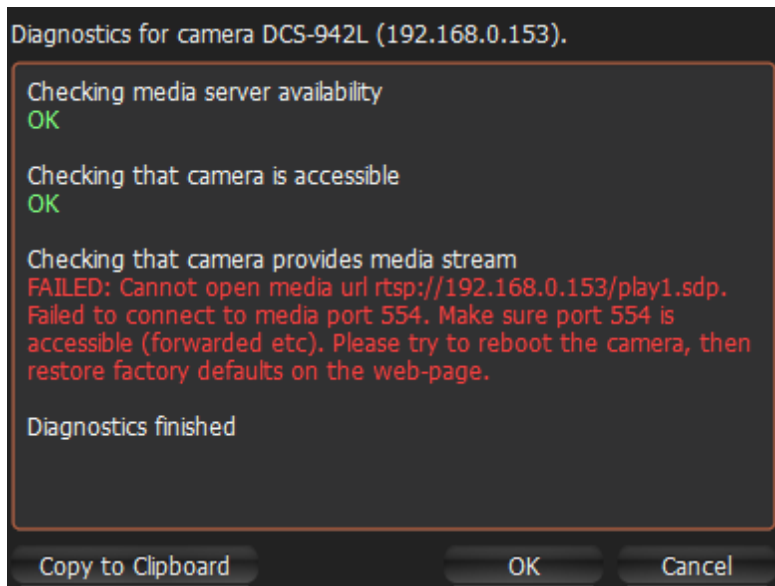

Follow instructions to resolve the issue. If unsuccessful, contact support (see "[Troubleshooting and Contacting Support](#)"). Click *Copy to Clipboard* and paste the data into the message prior to sending it to support.

Double Buffering

On some graphic cards drivers may have problems with OpenGL drawing. This may result in 100% CPU load. In this case the issue may be resolved by enabling **Double Buffering**.


To do so, open [Main Menu](#), choose *Local Settings (General tab)*, then toggle *Double Buffering* and restart Client.

Restoring Broken Archive


Nx Witness uses a specific directory on each network drive. However, sometimes archive is moved for various reasons (ex, a hard drive was replaced, hard drive's letter was changed. etc), possibly resulting in a complete removal of archive from the system.

Nx Witness can easily restore the lost archive. To perform archive restoration:

1. Open the [Server Settings](#).
2. Click on *Rebuild Archive Index*.

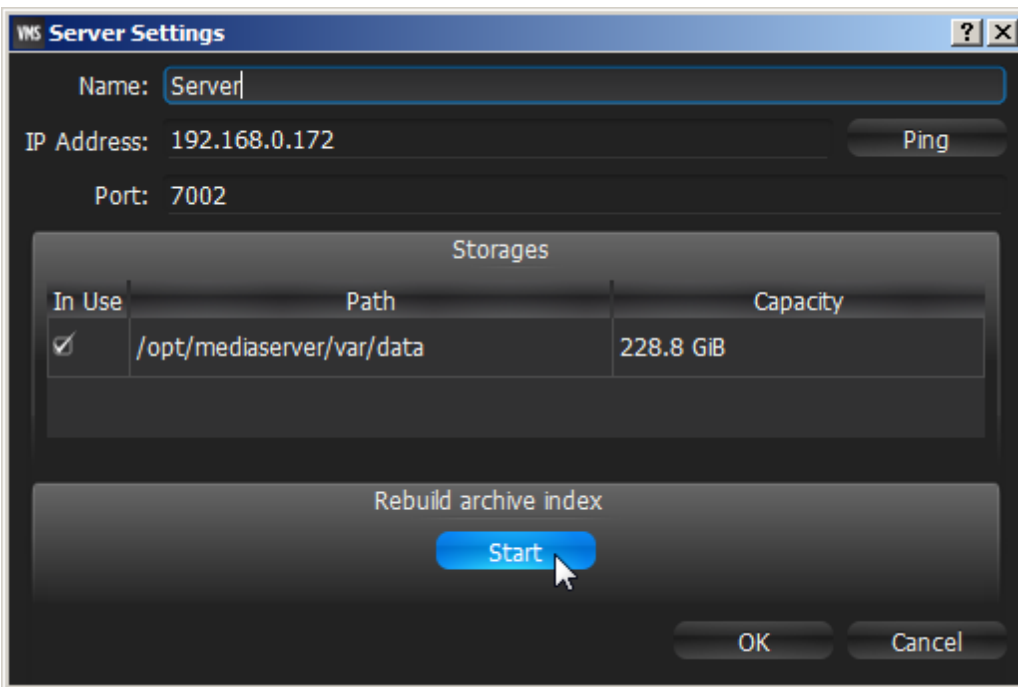

3. The process can take a long time. Click Yes to proceed.

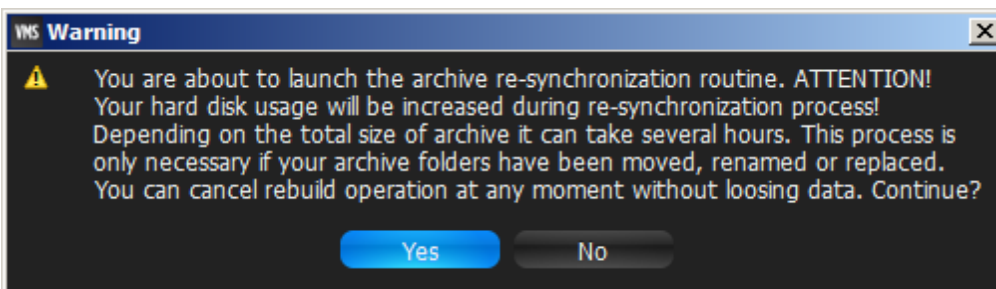

Restoration can be canceled in any moment.

If the window is closed, the restoration will continue running in the background.

The system can continue recording while the archive is being restored.

Providing Remote Access

The best possible way to help investigate an issue is to provide remote access via one of the following applications:

- **Team Viewer** (<http://www.teamviewer.com>)
- **Citrix GoTo Meeting** (<https://www.citrix.com/products/gotomeeting/overview.html>)
- **VNC**: RealVNC (<https://www.realvnc.com/>), TightVNC (<http://www.tightvnc.com/>), UltraVNC (<http://www.uvnc.com/>)
- **RDP** (Windows Remote Desktop). Requires **Public IP**.

For Linux Mac it is possible to open SSH access. Requires **Public IP**.

Finally **Public IP** is necessary for the following investigations:

- Ability to connect remotely to the system and debug issue on the client side (Server should be accessible via Internet)
- Camera issues investigations. For this purpose Camera should be accessible via Internet by **Public IP**.

Recording Issue

If it is not possible to provide remote access for security reasons, a supporting video clip can help understand and investigate the issue. To create a video clip:

1. Set up **Screen Recording**: select desired screen and microphone settings (see "[Setting up Screen Recording](#)").
2. Record a narrated (preferred) video explaining the issue (see "[Performing Screen Recording](#)").
3. Attach the video to the support ticket.

Collecting Logs

The following logs must be provided as part of a support ticket:

- System Logs
- Server Logs
- Client Logs.

To obtain System Logs:

1. Open Event Log form (see "[Viewing Events Log](#)").
2. Choose **<Any Event>**, **<Any Camera>**, **<Write To Log>** filters.
3. Open [Context Menu](#) and choose *Select All* (or press **Ctrl+A**).
4. Open [Context Menu](#) and choose *Export Selection to File*.
5. Save the file and attach to the support ticket.

To obtain Server Logs:

1. Right click on the desired Server , open [Context Menu](#) and choose *Server Logs...* The log will open up in browser.
2. Copy all text (**CTRL+A**) and paste it into a new text file.
3. Repeat this for all Servers (if necessary).
4. Save the file and attach to the support ticket.

To obtain Client Logs:

- **Windows:** c:\Users\`<Local User>`\AppData\Local\Network Optix\Network Optix HD Witness\log\log_file.log.
- **Linux:** /home/`<Local User>`/.local/share/Network Optix/Network Optix HD Witness/log.

Collecting Additional Information

Required information:

- Hardware used
- Nx Witness components and drivers versions
- External Libraries versions.

To obtain this information, open [Main Menu](#) and select *About* (or press **F1**).

The information on network configuration is also important and should be provided to **Support Team** in addition to other details.

This information can be acquired by standard Windows tools (i.e.) **ipconfig**, but Nx Witness provides a much more simple and intuitive way.

Glossary

Nx Witness Server Components – Nx Witness Server and Server.

Administrator – a user that configures Nx Witness.

Archive – video and audio data recorded from cameras.

Aspect Ratio (AR) – video dimensions. Most commonly used are: 4:3 and 16:9.

Bitrate – number of bytes per second. Used to measure video stream.

Client – the software used to connect to servers and view video streams.

Codec – video or audio compression.

Dual Streaming – enables a camera to provide two separate streams simultaneously, yielding bandwidth and processor savings on Client (see RADASS).

Export – allows to export a video footage from archive. Exported video can be viewed on any device.

FPS – Frames per Second. Used to measure video stream.

GPU – Graphic Processing Unit. The processor installed on the video card.

HTTP – Hyper Text Transfer Protocol. Some cameras use this protocol to stream video.

Item – video or image on Scene.

Layout – saved video items and their position, size and orientation. Used to present surveillance information to Nx Witness user.

Live – ability to view cameras live in real-time mode.

Server Port – used by **Server** to process requests for recorded fragments and video data from Nx Witness Client.

Motion Detection – indicates whether or not any motion occurred within camera's viewing zone.

Motion Mask – the area in viewing zone that does not trigger **Motion Detection**.

Multi-Video Export – an ability to backup several videos in a proprietary format or executable bundle.

Onvif – a unified protocol used for communication with cameras. See <http://www.onvif.org/>.

OS – Operating System.

Preview Search – breaks down a period of time into smaller video segments. Example: a month broken into ten 3-day periods displaying them as separate video segments. Eases search of large archives.

Private (cameras) Network – the network used to transmit data from cameras to Server . It is not



accessible from outside.

Public (Intranet) Network – the network used to connect to Server from outside. It can be used for either connecting Server to Server or configuring Server Components. It may or may not be connected to the Internet.

Public IP – IP Address that can be accessed from the Internet.

PTZ – Point, Tilt, Zoom (a camera must support PTZ for the feature to be used)

Resources – cameras, Server s, local video files, users and layouts.

RADASS – Resolution and Algorithmic Data Adaptive Scaling System. Enables dynamic switching of resolution to yield bandwidth savings and optimize processor load. Requires **Dual-Streaming** to be supported by the Cameras used.

RTSP – Real Time Streaming Protocol. Some cameras use this protocol to stream video.

RTSP Port – the port used by Server to process requests for media streams from Nx Witness Client.



Server – the computer that Nx Witness Server is installed on.

Smart Motion Search – an ability to search by motion within the selected range. Nx Witness will provide fragments with motion occurred in the specified region.

Super Administrator – an initial user with full access to Nx Witness (his login is **admin**). This user cannot be deleted.

Sync – ability to play back several cameras simultaneously.

Thumbnails – small snapshots of recorded footage. Used in searching for specific scenes.

URL – Uniform Resource Locator is a specific character string that constitutes a reference to an Internet/ Intranet resource. Used to establish connection to Server.

Viewer – a user with a limited access to Nx Witness (not permitted to change configuration).

Watermark – used to check validity of exported files. If a file was modified or altered in any way, watermark will fail.



Still need help? Visit us at <http://support.networkoptix.com>